

# KENWOOD

GPS NAVIGATION SYSTEM

**DNX7360BTM**

**DNX7360BT**

**DNX5360M**

**DNX5360**

---

**GPS NAVIGATION  
INSTRUCTION MANUAL**

Kenwood Corporation

# Contents

## **Safety Precautions and Important Information** 4

## **Getting Started** 6

- Using the Navigation System 6
- Help When You Need It 6

## **Find It and Go!** 7

- Finding a Restaurant 7
- Following Your Route 8
- Adding a Via Point 8
- Taking a Detour 8
- Stopping the Route 8

## **The Main Pages** 13

- Viewing the Map Page 13
- Trip Computer 13
- Turn List Page 14
- Next Turn Page 14
- GPS Info Page 14

## **Where To?** 9

- Searching Near Another Location 9
- Go! Page Options 9
- Finding an Address 9
- Finding a Place by Spelling the Name 10
- Using the On-Screen Keyboard 10
- Finding Places in a Different Area 10
- Narrowing Your Search 10

## **Creating and Editing Routes** 15

- Creating a New Custom Route 15
- Editing Custom Routes 15
- Saving and Modifying the Active Route 15
- Navigating a Saved Route 15
- Deleting All Saved Routes 15
- Stopping Your Route 15
- Adding a Detour to a Route 15

## **Favorites** 11

- Saving Places You Find 11
- Saving Your Current Location 11
- Setting a Home Location 12
- Finding Saved Places 12
- Editing Saved Places 12
- Deleting a Favorite 12

## **Using ecoRoute™** 16

- Setting up ecoRoute 16
- Viewing the Fuel Report 16
- Calibrating the Fuel Economy 16
- Adjusting the Fuel Price 16
- Taking the ecoChallenge 17
- Adjusting Your Vehicle Profile 17
- Viewing the Mileage Report 17
- Resetting ecoRoute Data 17
- Calculating Routes that Use Less Fuel 17

## Customizing the Settings 18

Customizing the Navigation System	18
Changing the System Settings	18
Changing the Map Settings	18
Changing the Navigation Settings	18
Adjusting the Display Settings	18
Updating the Time Settings	18
Setting the Languages	18
Adding Security	18

## Appendix 19

Updating the Software	19
Updating the Map Data	19
Custom POIs (Points of Interest)	20
Finding Custom POIs	20
Deleting Custom POIs	20

## Icons Used in This Manual



Important precautions are described to prevent injuries, etc.



Special instructions, supplementary explanations, limitations, and reference pages are described.

## Manual Conventions

When you are instructed to “touch” something, use your finger to touch an item on the screen.

The small arrows (>) used in the text indicate that you should touch a series of items. For example, if you see “touch **Where To?** > **Favorites**” you should touch **Where To?**, and then touch **Favorites**.

# Safety Precautions and Important Information

Read this information carefully before starting to operate the Kenwood Car Navigation System and follow the instructions in this manual. Neither Kenwood nor Garmin® shall be liable for problems or accidents resulting from failure to observe the instructions in this manual.

## ▲ WARNINGS

### To prevent injury or fire, take the following precautions:

- To prevent a short circuit, never put or leave any metallic objects (such as coins or metal tools) inside the unit.
- Do not watch or fix your eyes on the unit's display when you are driving for any extended period.
- Mounting and wiring this product requires skills and experience. For safety's sake, leave the mounting and wiring work to professionals.

### Failure to avoid the following potentially hazardous situations could result in an accident or collision resulting in death or serious injury.

When navigating, carefully compare information displayed on the navigation system to all available navigation sources, including information from street signs, visual sightings, and maps. For safety, always resolve any discrepancies or questions before continuing navigation.

Always operate the vehicle in a safe manner. Do not become distracted by the navigation system while driving, and always be fully aware of all driving conditions. Minimize the amount of time spent viewing the screen of the navigation system while driving, and use voice prompts when possible.

Do not enter destinations, change settings, or access any functions requiring prolonged use of the navigation system controls while driving. Stop your vehicle in a safe and legal manner before attempting such operations.

Keep the system volume at a low-enough level to be able to hear outside noises while driving. If you can no longer hear outside noises, you may be unable to react adequately to the traffic situation. This may cause accidents.

The navigation system will not display the correct current position of the vehicle the first time it is used after purchase, or if the vehicle battery is disconnected. GPS satellite signals will soon be received, however, and the correct position will be displayed.

Be careful of the ambient temperature. Using the navigation system at extreme temperatures can lead to malfunction or damage. Also note that the unit can be damaged by strong vibration, by metal objects, or by water getting inside the unit.

## ▲ CAUTIONS

### Failure to avoid the following potentially hazardous situations may result in injury or property damage.

The navigation system is designed to provide you with route suggestions. It does not reflect road closures or road conditions, weather conditions, or other factors that may affect safety or timing while driving.

Use the navigation system only as a navigational aid. Do not attempt to use the navigation system for any purpose requiring precise measurement of direction, distance, location, or topography.

The Global Positioning System (GPS) is operated by the United States government, which is solely responsible for its accuracy and maintenance. The government system is subject to changes that could affect the accuracy and performance of all GPS equipment, including the navigation system. Although the navigation system is a precision navigation device, any navigation device can be misused or misinterpreted and, therefore, become unsafe.

## IMPORTANT INFORMATION

### Vehicle Battery Preservation

This navigation system can be used when the ignition key is turned to ON or ACC. To preserve the battery, however, it should be used with the engine running whenever possible. Using the navigation system for a long time with the engine switched off can cause the battery to run down.

### Map Data Information

One of the goals of Garmin is to provide customers with the most-complete and accurate cartography that is available to us at a reasonable cost. We use a combination of governmental and private data sources, which we identify in product literature and copyright messages displayed to the consumer. Virtually all data sources contain some inaccurate or incomplete data. In some countries, complete and accurate map information is either not available or is prohibitively expensive.

---

## Software License Agreement

BY USING THE DNX7360BTM/DNX7360BT/  
DNX5360M/DNX5360, YOU AGREE TO BE BOUND  
BY THE TERMS AND CONDITIONS OF THE  
FOLLOWING SOFTWARE LICENSE AGREEMENT.  
PLEASE READ THIS AGREEMENT CAREFULLY.

Garmin grants you a limited license to use the  
software embedded in this device (the "Software")  
in binary executable form in the normal operation  
of the product. Title, ownership rights, and  
intellectual property rights in and to the Software  
remain in Garmin.

You acknowledge that the Software is the property  
of Garmin and is protected under the United  
States of America copyright laws and international  
copyright treaties. You further acknowledge  
that the structure, organization, and code of the  
Software are valuable trade secrets of Garmin and  
that the Software in source code form remains a  
valuable trade secret of Garmin. You agree not to  
decompile, disassemble, modify, reverse assemble,  
reverse engineer, or reduce to human readable  
form the Software or any part thereof or create any  
derivative works based on the Software. You agree  
not to export or re-export the Software to any  
country in violation of the export control laws of  
the United States of America.

# Getting Started

The first time you use your Kenwood Navigation System, you need to set up your system. The Help menu provides additional information.

## Using the Navigation System

Touch **Nav** to use the navigation system. To set up the navigation system, touch **Nav Setup**. For complete audio system information, see the other Kenwood manuals.

DNX5360 / 5360M



- 1 Touch to access the navigation system.
- 2 Touch to set up the navigation system.
- 3 When navigating, this displays Kenwood audio. When using audio, this displays navigation information.



- The screen shots shown in this manual may not exactly match the screens on your navigation system. The images used in this manual are intended for reference only.



- The Hands-free phone feature is only available if your mobile phone has Bluetooth wireless technology and has been paired to the navigation system. See the other Kenwood manuals and your phone manual for setup and pairing instructions.
- DNX5360 and DNX5360M do not have Bluetooth functionality.

## Help When You Need It

Touch **Tools > Help** to get more information about using your navigation system. Touch a category to view information about a topic.

### 1 Touch Tools > Help.



### 2 To search the Help topics for a keyword, touch Search.



# Find It and Go!

 
The Where To? page provides several different categories for you to use when searching for addresses, cities, and other locations. The detailed map loaded in your navigation system contains millions of points of interest, such as restaurants, hotels, and auto services.

## Finding a Restaurant

### 1 Touch Where To?.



### 2 Select a category.

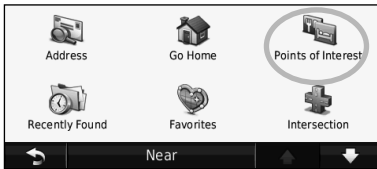

### 3 Select a subcategory.



### 4 Select a destination.



### 5 Touch a place.

 


### 6 Touch Go!, or touch Press for More to see the Review page.




### Following Your Route


Your route is marked with a magenta line. As you travel, your navigation system guides you to your destination with voice prompts, arrows on the map, and directions at the top of the map. The upper-left corner indicates the distance to your next maneuver. If you depart from the original route, your navigation system recalculates the route and provides new directions.

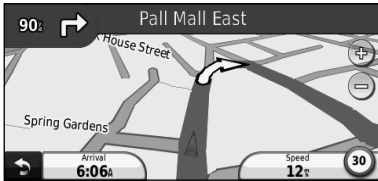

 Your route is marked with a highlighted line.

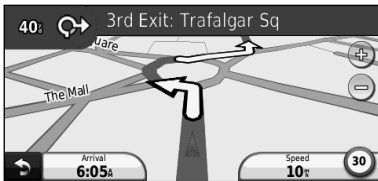

Follow the arrows.

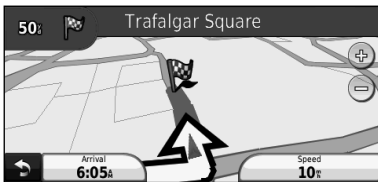 

A checkered flag marks your destination.

### Adding a Via Point

You can add a stop (Via Point) to your route. The navigation system gives you directions to the stop and to your final destination.

- 1 With a route active, touch (back icon) > Where To?.
- 2 Search for the extra stop.
- 3 Touch Go!.
- 4 Touch Add As a Via Point to add this stop before your destination.

If you want to add more than one stop to the route, edit the current route. See page 15.

### Taking a Detour

If a road on your route is closed, you can take a detour.

- 1 With a route active, touch .
- 2 Touch Detour.

The navigation system attempts to get you back on your original route as quickly as possible. If the route you are currently taking is the only reasonable option, the navigation system might not calculate a detour.

### Stopping the Route

- 1 With a route active, touch .
- 2 Touch Stop.

# Where To?

The Where To? page provides several different categories you can use to search for locations.

## Searching Near Another Location

Your navigation system automatically searches for places near your current location.

### 1 Touch Where To? > Near.

 
### 2 Select an option:

- **Where I Am Now**—search near your current location.
- **A Different City**—search near the city you enter.
- **My Current Route**—search along your route.
- **My Destination**—search near your current destination.

### 3 Touch OK.

## Go! Page Options

Touch an item in the search results list to view the Go! page.

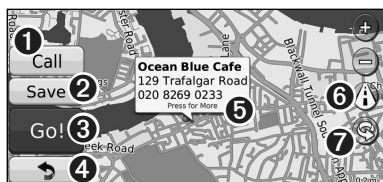

- 1 Touch to call this location, if a mobile phone with Bluetooth wireless technology is connected.
- 2 Touch to save this location to your Favorites.
- 3 Touch to create a turn-by-turn route to this location.
- 4 Touch to return to the previous page.



- DNX5360 and DNX5360M do not have Bluetooth functionality.

- 5 Touch **Press for more** to view more information about the location.



- 6 Touch to switch between a 3D (three-dimensional) map and a 2D (two-dimensional) map.
- 7 Touch to rotate the viewing angle in 3D view.

## Finding an Address

The steps to find an address can vary depending on the maps that are loaded on your navigation system. Not all map data provides postal-code searching.

### 1 Touch Where To? > Address.

### 2 Touch Change State/Country, if necessary.

### 3 Touch Search All.

OR

**Touch Spell City. Enter the city using the keyboard, and touch Done. Select the city.**

### 4 Enter the number of the address, and touch Done.

### 5 Enter the street name, and touch Done.

### 6 Select the correct street in the list, if necessary.

### 7 Touch the address, if necessary.

### Finding a Place by Spelling the Name






If you know the name of the location you are looking for, you can spell it using the on-screen keyboard. You can also enter letters contained in the name to narrow the search.

- 1 **Touch Where To? > Points of Interest > Spell Name.**
- 2 **Using the on-screen keyboard, enter letters in the name.**
- 3 **Touch Done.**

### Using the On-Screen Keyboard

When an on-screen keyboard appears, touch a letter or a number to enter it.



- Touch  to add a space.
- Touch  and  to move the cursor.
- Touch  to delete the character, or touch and hold to delete the entire entry.
- Touch  to select words you have recently typed and selected.
- Touch **Mode** to change the keyboard language mode.
- Touch **&?%** to enter special characters.

### Finding Places in a Different Area

You can search for locations in a different area, such as a different city or near your destination.

- 1 **From the subcategories list, touch Near.**
- 2 **Select one of the search options.**

### Narrowing Your Search

To narrow your search, you can search near a different city.

 
- 1 **Touch Where To? > Near.**
- 2 **Touch A Different City.**
- 3 **Enter part of the name, and touch Done.**

# Favorites


You can save all of your favorite places in Favorites. You can also save your home location in Favorites.

## Saving Places You Find

- 1 After you have found a place you want to save, touch Save on the Go! page.

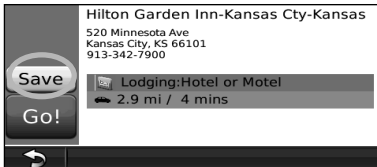

 
- 2 Touch OK. The place is saved in Favorites.

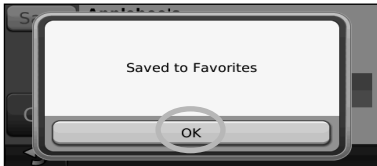

## Saving Your Current Location

- 1 Touch View Map.

 - 2 Touch .

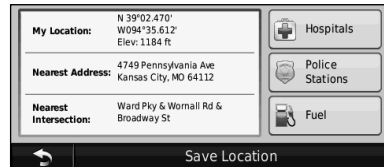

- 3 Touch Save Location to save your current location.

### Setting a Home Location

You can set a Home Location for the place you return to most often.

**1 Touch Where To? > Go Home.**

**2 Select an option.**

- **Enter My Address**—enter an address for the location using the on-screen keyboard.
- **Use My current location**—sets your current location as your Home Location.
- **Choose from Recently Found**—select a location from your recently found locations.

After you set your Home Location, touch **Where To? > Go Home.**

### Finding Saved Places

**1 Touch Where To?.**

**2 Touch Favorites.**

**3 Touch a category. Your saved locations are listed.**

### Editing Saved Places

**1 Touch Where To? > Favorites.**

**2 Touch the location you want to edit.**

**3 Touch Press for More.**

**4 Touch Edit.**

**5 Touch the item you want to edit.**

- **Change Name**—enter a new name for the location using the on-screen keyboard.
- **Change Map Symbol**—touch a new symbol.
- **Change Phone Number**—enter a phone number, and touch **Done**.
- **Change Categories**—create or change the category in which this location is saved.

### Deleting a Favorite

**1 Touch Tools > My Data.**

**2 Touch Delete Favorite(s).**

**3 Select the Favorite to delete.**

**4 Touch Delete.**

# The Main Pages

This section provides details about the Map Page, the Trip Computer, the Turn List, and the GPS Info Page.

## Viewing the Map Page

Touch **View Map** to open the map. Touch an area of the map to see additional information, as shown below. The vehicle icon ▲ shows your current location.



 
- 1 Distance to the next turn. Touch to view and hear next turn details. Lane assistance also displays in this area.
- 2 While navigating a route, touch the text bar to open the Turn List. See page 14.
- 3 Touch (+) to zoom in.
- 4 Touch (-) to zoom out.
- 5 Touch to change the data field.
- 6 Touch the **Speed** data field to open the Trip Computer.
- 7 Touch ▲ to view the Where Am I? page.



- A speed limit icon (35) may appear as you travel on major roadways. This icon displays the current speed limit of the roadway.

## Trip Computer

The Trip Computer displays your current speed and provides helpful statistics about your trip. To view the Trip Computer, touch the **Speed** field on the Map page.

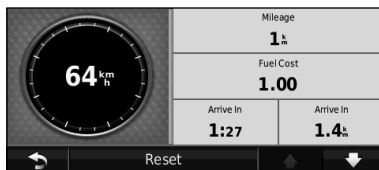


### Resetting Trip Information

If you want accurate trip information, reset the trip information before beginning a trip. Touch **Reset** to reset the information on the Trip Computer page.


### Turn List Page

 When you are navigating a route, the Turn List page displays turn-by-turn instructions for your entire route and the distance between turns. Touch the text bar on the top of the Map page to view the Turn List page. Touch a turn on the list to view the Next Turn page for that turn. Touch **Show Map** to view the entire route on the map.

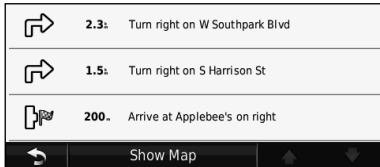


### Next Turn Page

 When you are navigating a route, the Next Turn page shows the turn on the map and the distance and time left before you reach the turn. To view an upcoming turn on the map, touch the upper-left corner of the Map page, or touch any turn on the Turn List page.

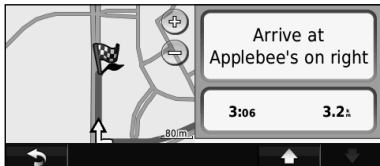

### GPS Info Page

 From the Nav Menu page, touch in the upper-left corner to view the GPS Info page.

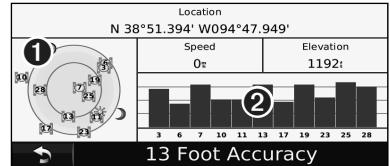

- 1 Sky view
- 2 Satellite signal-strength bars

The sky view shows the satellites you are receiving. The satellite signal-strength bars indicate the strength of each satellite you are receiving. A solid bar indicates that the GPS satellite is ready for use.

# Creating and Editing Routes

This section describes how to create and customize your routes.

## Creating a New Custom Route

- 1 Touch **Where To?** (or **Tools**) > **Routes** > **New**.
- 2 Touch **Add New Start Point**.
- 3 Find a location for your starting point, and touch **Select**.
- 4 Touch **Add New End Point**.
- 5 Find a location for your ending point, and touch **Select**.
- 6 Touch **+** to add another location to your route. Touch **-** to remove a location.
- 7 Touch **Next** to calculate your route and view it on the map. Touch **Save** to save your changes.

## Editing Custom Routes

Touch **Where To?** (or **Tools**) > **Routes**.

- 1 Select the route you want to edit.
- 2 Touch **Edit**.
- 3 Touch the item to edit.
  - **Change Name**—enter a new name, and touch **Done**.
  - **Add or Remove Points**—add or remove points from the route.
  - **Manually Reorder Points**—change the order of points along your route.
  - **Optimally Reorder Points**—automatically order the points.
  - **Recalculate**—recalculates the route.
  - **Delete**—remove this route.Your changes are saved automatically when you exit any of the route edit pages.

## Saving and Modifying the Active Route

- 1 Touch **Where To?** (or **Tools**) > **Routes**.
- 2 Touch **Active Route**.
- 3 Touch **Add or Remove Points**.
- 4 **Add, remove, or reorder the points**.
- 5 Touch **Next**.
- 6 Touch **Save**.


## Navigating a Saved Route

From the Main page, touch **Where To?** (or **Tools**) > **Routes**. Touch the route you want to navigate, and touch **Go!**

## Deleting All Saved Routes


Touch **Tools** > **My Data** > **Delete Selected Route(s)** > **Select All** > **Delete**.

## Stopping Your Route

With a route active, touch  > **Stop**.

## Adding a Detour to a Route

If a road on your route is closed or congested with traffic, you can take a detour.

- 1 **With a route active on the Main Map, touch** .
- 2 Touch **Detour**.

The navigation system attempts to get you back on your original route as quickly as possible. If the route you are currently taking is the only reasonable option, the navigation system might not calculate a detour.

# Using ecoRoute™

The ecoRoute feature calculates your vehicle fuel economy, carbon footprint, and the fuel price of navigating to a destination, and offers tools for improving fuel efficiency.

## Setting up ecoRoute


Touch **Tools > ecoRoute**.

The data provided by the ecoRoute feature is only an estimate. The data is not actually read from your vehicle. To receive more-accurate fuel reports for your specific vehicle and driving habits, calibrate the fuel economy.

The first time you access the ecoRoute features, you will be asked to enter fuel and mileage information about your vehicle.

## Viewing the Fuel Report

If you have entered your vehicle profile and the current fuel price, your navigation system calculates the average fuel economy for your vehicle, your carbon footprint, and the cost of the fuel consumed.

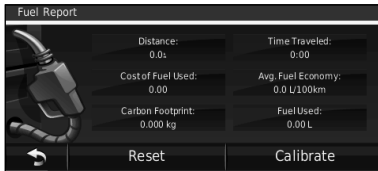

Fuel Report	
Distance: 0.0L	Time Traveled: 0:00
Cost of Fuel Used: 0.00	Avg. Fuel Economy: 0.0 L/100km
Carbon Footprint: 0.000 kg	Fuel Used: 0.00 L
Reset	Calibrate

The fuel consumption data is based on estimates for speed and acceleration for an average vehicle.



Touch **Tools > ecoRoute > Fuel Report**.



- To ensure that fuel data is always recorded, keep your navigation system turned on while driving.

## Calibrating the Fuel Economy

Calibrate the fuel economy to receive more-accurate fuel reports for your specific vehicle and driving habits. Calibrate when you fill up your fuel tank.

- 1 Calculate your miles per gallon or liters per 100 kilometers (enter information based on prompt).**
- 2 Touch Tools > ecoRoute > Fuel Report > Calibrate.**
- 3 Touch  and  to enter the result from step 1.**
- 4 Touch OK.**

## Adjusting the Fuel Price

Enter fuel price information to calculate the fuel cost of routes and to calculate the fuel reports.

- 1 Touch Tools > ecoRoute > Fuel Price.**
- 2 Enter the current fuel price.**
- 3 Touch Done.**

## Taking the ecoChallenge

Touch **Tools > ecoRoute > ecoChallenge > Start.**

The ecoChallenge tool helps you maximize your fuel economy by scoring your driving habits. The higher your overall score for an ecoChallenge, the more fuel you could save.

Your overall score is the average of three scores:

- **Acceleration score**—gain points for gradual acceleration; lose points for rapid acceleration.
- **Deceleration score**—gain points for gradual braking; lose points for hard braking.
- **Speed score**—gain points for driving at the best speed for conserving fuel, which is 72–97 km/h (45–60 mph) for most vehicles.

## Adjusting Your Vehicle Profile

Touch **Tools > ecoRoute > Vehicle Profile.**

The screenshot shows a 'Vehicle Profile' screen with three input fields: 'Fuel Type' set to 'Unleaded', 'City Fuel Economy' set to '65.0 L/100km', and 'Hwy Fuel Economy' set to '50.0 L/100km'. A 'Reset' button is located at the bottom right of the screen.

- **Fuel Type**—select a fuel type.
- **City Fuel Economy**—enter the average city fuel economy for your vehicle.
- **Hwy Fuel Economy**—enter the average highway fuel economy for your vehicle.



- For best results, calibrate your fuel economy instead of adjusting the city and highway fuel economy here.

## Viewing the Mileage Report

Mileage reports provide the distance, the time, the average fuel economy, and the fuel cost of navigating to a destination.

A mileage report is created for every route that you drive. If you stop a route on your navigation system, a mileage report is created for the distance you traveled.

- 1 **Touch Tools > ecoRoute > Mileage Report.**
- 2 **Select a report.**

## Resetting ecoRoute Data

- 1 **Touch Tools > ecoRoute.**
- 2 **Select the category you want to reset.**
- 3 **Touch Reset.**

## Calculating Routes that Use Less Fuel

- 1 **Touch Settings > Navigation > Route Preference.**
- 2 **Select Less Fuel.**

The Less Fuel route is calculated based on speed limit and acceleration data.

# Customizing the Settings

This section describes how to customize the settings of your GPS navigation system.

## Customizing the Navigation System

- 1 **Touch Settings.**
- 2 **Touch the setting you want to change.**
- 3 **Touch the button below the setting name to change it.**

## Changing the System Settings

Touch **Settings > System.**

- **GPS Simulator**—enable the simulator to turn off the GPS mode and simulate navigation.
- **Units**—change the units of measure.
- **Keyboard Layout**—select a keyboard layout.
- **About**—display the software version number, the unit number, and the unit ID number.
- **Restore**—restore the original system settings.

## Changing the Map Settings

Touch **Settings > Map.**

- **Map Detail**—adjust the amount of detail shown on the map. More detail may cause the map to redraw slower.
- **Map View**—select a map perspective.
- **Vehicle**—touch **Change** to change the icon used to display your position on the map. Touch the icon you want to use, and touch **OK**.
- **Trip Log**—show or hide the log of your travels. To clear your trip log, touch **Tools > My Data > Clear Trip Log**.
- **Map Data Layout**—changes the layout of the main map.
- **Map Info**—view the maps loaded on your navigation system and the map versions. Touch a map to enable (check mark) or disable (no check mark) that map.
- **Restore**—restore the original map settings.

## Changing the Navigation Settings

Touch **Settings > Navigation.**

- **Route Preference**—select a preference for calculating your route.
- **Avoidances**—select the road types you want to avoid or you would prefer to use on your routes.
- **Restore**—restore the original navigation settings.
- **Voice Prompts**—turn voice prompts on or off.

## Adjusting the Display Settings

Touch **Settings > Display.**

- **Color Mode**—select **Day** for a light background, **Night** for a dark background, or **Auto** to automatically switch between the two.
- **Restore**—restore the original display settings.

## Updating the Time Settings

Touch **Settings > Time.**

- **Time Format**—select a 12-hour, 24-hour, or UTC time format.
- **Current Time**—select **Automatic** to update the time automatically. When Automatic is not selected, you can adjust the time in 15-minute increments.
- **Restore**—restore the original time settings.

## Setting the Languages

Touch **Settings > Language.**

- **Voice Language**—select a voice.
- **Keyboard**—select the keyboard for your language. You can also change the keyboard language mode from any keyboard by touching the **Mode** button.
- **Recognition Prompt**—turn speech recognition prompts on or off.
- **Restore**—restore the original languages.

## Adding Security

Touch **Settings > Security.**

- **Safe Mode**—turn safe mode on or off. When your vehicle is moving, safe mode disables all functions that require significant operator attention and could become a distraction while driving.
- **Restore**—restore the original security settings.

# Appendix

This appendix provides additional information about your navigation system, such as how to update the software and map data.

## Updating the Software

To update the navigation system software, you must have a Secure Digital (SD) card, an SD card reader, and an Internet connection.



- The unit may restart when you insert an SD card.

- 1 Go to [www.garmin.com/Kenwood](http://www.garmin.com/Kenwood). Select Software Updates > Download.**
- 2 Read and accept the terms of the Software License Agreement.**
- 3 Follow the instructions on the Web site to complete the installation of the update software.**

## Updating the Map Data

The navigation system will provide periodic notification at startup when the preloaded maps are considered out of date. You can purchase an SD card of updated map data from Garmin or ask your Kenwood dealer or Kenwood service center for details.

- 1 Go to [www.garmin.com/Kenwood](http://www.garmin.com/Kenwood). Select Order Map Updates, and follow the Web site checkout procedure.**
- 2 After you receive your new map data SD card, insert the card into your unit to use the maps. The navigation system will automatically recognize and use the maps on the SD card.**



- The unit may restart when you insert an SD card.
- The DNX5360 and DNX5360M use a microSD™ card.

### Custom POIs (Points of Interest)

You can manually load custom points of interest (POI) databases, available from various companies on the Internet. Some custom POI databases contain alert information for points such as safety cameras and school zones. The navigation system can notify you when you approach one of these points.

#### CAUTION

Garmin is not responsible for the consequences of using a custom POI database, or for the accuracy of the safety camera or other custom POI database.

After downloading your POI database, use the Garmin POI Loader to install the POIs onto an SD card. Use the SD card to load the POIs. The POI Loader is available at [www.garmin.com/products/poiloader](http://www.garmin.com/products/poiloader). Refer to the POI Loader Help file for more information; click **Help** to open the Help file.



- The unit may restart when you insert an SD card.
- Each time you load custom POIs to the navigation system, any other custom POIs already saved in the system will be overwritten.
- The DNX5360 and DNX5360M use a microSD™ card.

### Finding Custom POIs

To view a list of the custom POIs loaded in your navigation system, touch **Where To?** > **Extras** > **Custom POIs**.

### Deleting Custom POIs

To delete all custom POIs from your navigation system, touch **Tools** > **My Data** > **Custom POIs** > **Delete All**. Touch **Yes** to confirm.

For the latest free software updates (excluding map data) throughout the life of your Garmin products, visit the Garmin Web site at [www.garmin.com/Kenwood](http://www.garmin.com/Kenwood).



© 2010 Garmin Ltd. or its subsidiaries

Garmin International, Inc.  
1200 East 151st Street, Olathe, Kansas 66062, USA

Garmin (Europe) Ltd.  
Liberty House, Hounsdown Business Park, Southampton, Hampshire, SO40 9LR, UK

Garmin Corporation  
No. 68, Jangshu 2nd Road, Sijhih, Taipei County, Taiwan

[www.garmin.com](http://www.garmin.com)

Part Number 190-01143-00 Rev. A

Garmin® and the Garmin logo are trademarks of Garmin Ltd. or its subsidiaries, registered in the USA and other countries. ecoRoute is a trademark of Garmin Ltd. or its subsidiaries. These trademarks may not be used without the express permission of Garmin. NAVTEQ® is a trademark of NAVTEQ Inc. or its affiliates and is registered in one or more countries, including the U.S. SD™ is a trademark of the SD Card Association. All other company names and trademarks mentioned or referenced in this documentation are the properties of their respective owners. All rights reserved.