

KENWOOD

MONITOR WITH DVD RECEIVER

KVT-827DVD

INSTRUCTION MANUAL

Kenwood Corporation



Contents

Before Use	4	TV/ VIDEO Control	38
Notes on playing MP3/WMA/JPEG/MPEG..	6	Displaying the TV Picture screen	
Opening/Closing the Monitor and		Displaying the Easy Control Panel	
Power Switch	8	Displaying the TV Control screen	
Removing/Attaching the Protection Panel..	9	Displaying the TV Menu screen	
KVT-827DVD Basic operations	10	Seek Mode	
Basic Operations of Remote Controller ...	12	Auto Memory	
About discs.....	15	Manual Memory	
Switching Small Display.....	16	Preset Select	
Switching Screen Mode.....	17	Set Station Name	
Controlling during DVD Video, Video CD,		DAB Tuner control	44
JPEG or MPEG Playback.....	18	Displaying the Easy Control Panel	
Displaying the DVD/VCD/JPEG/MPEG Playback		Displaying the DAB Tuner Control screen	
screen		Displaying the DAB Tuner Menu screen	
Displaying the Easy Control Panel		Seek Mode	
Displaying the DVD/VCD Control screen		Auto Ensemble Memory	
DVD Disc Menu		Service Preset Memory	
VCD Zoom Control		Service Select	
Picture Control		Language Filter	
Information Display		Search for Program Type	
Direct Search		DAB Information	
		DAB Announcement	
CD/MP3/WMA/JPEG/MPEG/ Changer Play		Character Entry.....	50
Control.....	24	How To Use the Character Entry screen	
Displaying the Easy Control Panel		Source Select.....	51
Displaying the CD/MP3/WMA/JPEG/MPEG/Disc		Displaying the Control screen	
Changer Control screen		Displaying the Source Select screen	
Displaying the CD/MP3/WMA/JPEG/MPEG/Disc		Adjusting the Monitor Display Position	
Changer Menu screen		and Quality	52
Set Disc Name		Displaying the Screen Control screen	
Select Folder (during MP3/WMA/JPEG/MPEG play)		Displaying the Angle Control screen	
ID3/WMA TAG Display (during MP3/WMA play)		Setup Menu	53
Disc Select (during play by disc changer)		Setup Menu.....	53
Direct Search		Displaying the Control screen	
		Displaying the Setup Menu screen	
Tuner Control	32	Audio Set Up	54
Displaying the Easy Control Panel		Displaying the Car Type Set Up screen	
Displaying the Tuner Control screen		Displaying the Speaker Set Up screen	
Displaying the Tuner Menu screen		Displaying the Channel Level screen	
Seek Mode		Speaker Set Up	
Auto Memory		Channel Level	
Manual Memory		DTA Setup	
Preset Select		Crossover Network Setup	
Direct Search			
Traffic Information			
Search for Program Type			
Radio Text			

DVD Setup	60	Sound Effects Menu	82
Displaying the DVD SETUP 1 screen		Sound Effects Menu	82
Displaying the DVD SETUP 2 screen		Displaying the Control screen	
Displaying the DVD SETUP 3 screen		Displaying the Sound Effects Menu screen	
Language Setup		Audio Control	83
Parental Level Setup		Displaying the Audio Control screen	
System Setup	64	Equalizer	84
Displaying the System 1 screen		Displaying the Equalizer screen	
Displaying the System 2 screen		Parametric Equalizer	
AV Interface	66	Surround Control	86
Displaying the AV I/F 1 screen		Displaying the Surround Control screen	
Displaying the AV I/F 2 screen		Surround Control Adjustment	
Displaying the AV I/F 3 screen		SRS WOW Control	88
User Interface	68	Displaying the SRS WOW Control screen	
Displaying the User I/F 1 screen		SRS WOW Uesr Setup	
Displaying the User I/F 2 screen		Position	90
Displaying the User I/F 3 screen		Displaying the Position screen	
Touch Panel Adjustment		Position Fine Control	
Clock		Stores the Preset adjustment setup	
Security Code Setup		Calls the Preset adjustment setup	
Set Up Memory		Zone Control	92
TV Setup	76	Displaying the Zone Control screen	
Displaying the TV1 Area Set Up screen		Glossary	93
Displaying the TV2 Area Set Up screen		Troubleshooting Guide	94
RDS Setup	77	Specifications	99
Displaying the RDS Set Up1 screen			
Displaying the RDS Set Up2 screen			
DAB Set Up	78		
Displaying the DAB Set Up screen			
Announcement Selection			
AMP Control	80		
Displaying the AMP Control screen			
Muting Audio Volume upon Reception of Phone call	81		
Muting Audio Volume upon Reception of Phone call			

Before Use

▲WARNING

To prevent injury or fire, take the following precautions:

- To prevent a short circuit, never put or leave any metallic objects (such as coins or metal tools) inside the unit.
- Do not touch the liquid crystal fluid if the LCD is damaged or broken due to shock. The liquid crystal fluid may be dangerous to your health or even fatal.
If the liquid crystal fluid from the LCD contacts your body or clothing, wash it off with soap immediately.

 
▲CAUTION

To prevent damage to the machine, take the following precautions:

- Make sure to ground the unit to a negative 12V DC power supply.
- Do not install the unit in a spot exposed to direct sunlight or excessive heat or humidity. Also avoid places with too much dust or the possibility of water splashing.
- Do not place the faceplate or the faceplate case in areas exposed to direct sunlight, excessive heat or humidity. Also avoid places with too much dust or the possibility of water splashing.
- To prevent deterioration, do not touch the terminals of the unit or faceplate with your fingers.
- Do not subject the faceplate to excessive shock, as it is a piece of precision equipment.
- When replacing a fuse, only use a new fuse with the prescribed rating. Using a fuse with the wrong rating may cause your unit to malfunction.
- Do not use your own screws. Use only the screws provided. If you use the wrong screws, you could damage the unit.
- You cannot view video pictures whilst the vehicle is moving. To enjoy TV/video pictures, find a safe place to park and engage the parking brake.

NOTE

- If you experience problems during installation, consult your Kenwood dealer.
- If the unit fails to operate properly, press the Reset button to restore factory settings.



Reset button

Screen brightness during low temperatures

When the temperature of the unit falls such as during winter, the liquid crystal panel's screen will become darker than usual. Normal brightness will return after using the monitor for a whilst.

Audio units you can control from the KVT-827DVD Receiver (As of June, 2005):


KTC-V500E, KTC-9090DAB, KHD-C710, KDC-CPS89, KDC-CPS87, KDC-CPS85, KDC-CPS82, KDC-C719, KDC-C717, KDC-C715, KDC-C712, KDC-C669, KDC-C667, KDC-C665, KDC-C662, KDC-C469, KDC-C467, KDC-C465, KDC-C462, KDV-C820, KDC-C719MP, KDC-D301, KDC-D300, KMC-D400, KMD-D401
(Set the "O-N" switch to "N" position if provided.)

Navigation units you can control from the KVT-827DVD Receiver (As of June, 2005):

KNA-DV3200, KNA-DV2200

Loading and Replacing the battery

1. Use two "R03"/"AAA"-size batteries.
Slide the cover while pressing downwards to remove it as illustrated.
2. Insert the batteries with the ⊕ and ⊖ poles aligned properly, following the illustration inside the case.

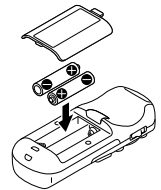

▲WARNING

Store unused batteries out of the reach of children. Contact a doctor immediately if the battery is accidentally swallowed.



- Do not set the remote control on hot places such as above the dashboard.



- The provided batteries are intended for use in operation checking, and their service life may be short.
- When the remote controllable distance becomes short, replace both of the batteries with new ones.

Cleaning the panel and monitor

When the operator panel and monitor panels are dirty, wipe and clean them using a soft cloth (such as a commercially available silicon coated cloth). When contaminated excessively, clean them using a cloth dipped in a neutral detergent first, then remove the detergent using a dry cloth. Do not use a hard cloth and a volatile chemical (such as an alcohol). If used, the panel surface may be scratched or printed letters may be erased.

Cleaning the disc slot


As dust can accumulate in the disc slot, clean it occasionally. Your discs can get scratched if you put them in a dusty disc slot.

Lens Fogging

Right after you turn on the car heater in cold weather, dew or condensation may form on the lens in the disc player of the unit. Called lens fogging, discs may be impossible to play. In such a situation, remove the disc and wait for the condensation to evaporate. If the unit still does not operate normally after a whilst, consult your Kenwood dealer.

Region codes in the world

The DVD players are given a region code according to the country or area it is marketed, as shown in the following map.

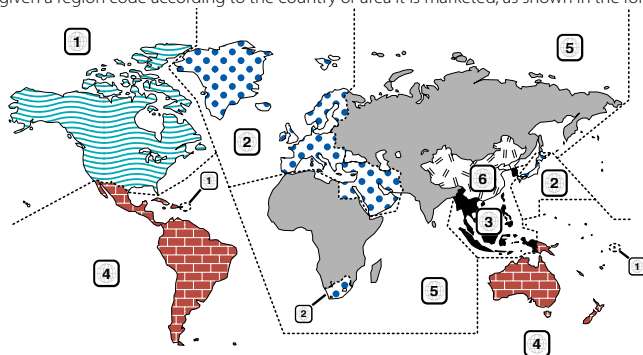

Icons on the DVD discs

Icon	Description
	Indicates the region code where the disc can be played.
	Number of voice languages recorded with the audio function. The number in the icon indicates the number of voice languages. (Max. 8 languages)
	Number of subtitle languages recorded with the subtitle function. The number in the icon indicates the number of subtitle languages. (Max. 32 languages)
	Number of angles provided by the angle function. The number in the icon indicates the number of angles. (Max. 9 angles)
	Aspect ratios that can be selected. "LB" stands for Letter Box and "PS" for Pan/Scan. In the example on the left, the 16:9 video can be converted into letter box video.

 
Unplayable discs

This player cannot play back any of the following discs.

- DVD-ROM/DVD-RAM discs
- CDV discs (Only the audio part can be reproduced)
- Photo CD discs
- HQ-VCD/SVCD discs
- CD-G/CD-EG/CD-EXTRA discs (Only the audio can be reproduced)
- DVD-Audio

Also, you cannot play back the DVD-R/RW and DVD+R/RW discs if not recorded in the DVD-Video format.

Restrictions due to difference between discs



Some DVD and VCD discs can be played only in certain playback modes according to the intentions of the software producers. As this player plays discs according to their intentions, some functions may not work as intended by you. Please be sure to read the instructions provided with each disc. When an inhibition icon is displayed on the monitor, it indicates that the disc being played is under the restriction as described above.

The illustrations of the display and the panel appearing in this manual are examples used to explain more clearly how the controls are used. Therefore, what appears on the display in the illustrations may differ from what appears on the display on the actual equipment, and some of the illustrations on the display may represent something impossible in actual operation.

Explanation of icons used on this manual



Indicates the key operation on the receiver.



Indicates the button you must touch.



Indicates the key or joystick operation on the remote controller.



The initial value of each setup is shown.



Gives an additional information or an operation advice.

Notes on playing MP3/WMA/JPEG/MPEG

This unit can play MP3 (MPEG1 Audio Layer 3)/WMA/JPEG/MPEG (MPEG 1/MPEG 2). Note, however, that the MP3/WMA/JPEG/MPEG recording media and formats acceptable are limited. When writing MP3/WMA/JPEG/MPEG, pay attention to the following restrictions.

Acceptable media

The MP3/WMA/JPEG/MPEG recording media acceptable to this unit are CD-ROM, CD-R, CD-RW, DVD-R/RW and DVD+R/RW.

When using CD-RW, do full format not quick format to prevent malfunction.

Acceptable medium formats

The following formats are available for the media used in this unit. The maximum number of characters used for file name including the delimiter ("") and three-character extension are indicated in parentheses.

- ISO 9660 Level 1 (12 characters)
- ISO 9660 Level 2 (31 characters)
- Joliet (64 characters)
- Romeo (128 characters)

Up to 200 characters can be displayed in the long file name format. For a list of available characters, see the instruction manual of the writing software and the section Entering file and folder names below.

The media reproducible on this unit has the following limitations:

- Maximum number of directory levels: 8
- Maximum number of files per folder: 255
- Maximum number of characters for folder name: 200
- Maximum number of folders: 254

MP3/WMA/JPEG/MPEG written in the formats other than the above may not be successfully played and their file names or folder names are not properly displayed.

Settings for your MP3/WMA/JPEG/MPEG encoder and CD/DVD writer

Do the following setting when compressing audio data in MP3/WMA data with the MP3/WMA encoder.

MP3/WMA

- Transfer bit rate: MP3: 32 —320 kbps
WMA: 48 —192 kbps
- Sampling frequency: MP3: 32, 44.1, 48 kHz
WMA: 32, 44.1, 48 kHz

Do the following setting when compressing video/audio data in JPEG/MPEG data with the JPEG/MPEG encoder.

JPEG

- Picture size: Baseline format: 5,120 (W) x 3,840 (H) pixels
(Maximum size)*1
Progressive format: 2,048 (W) x 1,536 (H) pixels
(Maximum size)*2

MPEG

- Video format: MPEG1, MPEG2
- Picture size: MPEG1: 320x240, 352x240 (NTSC), 352x288 (PAL)
MPEG2: 640x480, 704x480 (NTSC), 704x576 (PAL)
- Audio format: MPEG1 Audio Layer2
- Transfer bit rate: 32—384 kbps CBR
- Sampling frequency: 32, 44.1, 48 kHz

When you use your CD/DVD writer to record MP3/WMA/JPEG/MPEG up to the maximum disc capacity, disable additional writing. For recording on an empty disc up to the maximum capacity at once, check Disc at Once.



- Play mode may not be possible when portions of the functions of Windows Media Player 9 or higher are used.
- *1 A part of picture will not be displayed if the size of a picture exceeds maximum.
- *2 A picture will not be displayed if the size of a picture exceeds maximum.
- When you write for MPEG 2 data, please be sure to use DVD media.
- When you write data in DVD media, please be sure to set a setup of a DVD writer to "Disc at once".

Entering ID3 tag

The Displayable ID3 tag is ID3 version 1.x. For the character code, refer to the List of Codes.

0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
0			@	P	p					▣	▤	▥	▦	▧	▨
1				1	A	O	a	q		i	±	∞	N	∞	∞
2			"	B	R	b	r	e	"	A	O	∞	∞		
3			#	3	G	S	s	∞	"	A	O	∞	∞		
4			\$	4	D	T	d	t	∞	"	A	O	∞	∞	
5			%	5	E	U	e	u	∞	∞	∞	∞	∞	∞	∞
6			&	6	F	V	f	v	:	∞	∞	∞	∞	∞	∞
7			'	7	G	W	g	w	\$	∞	∞	∞	∞	∞	∞
8			(8	H	X	h	x	∞	∞	∞	∞	∞	∞	∞
9)	9	I	Y	i	y	∞	∞	∞	∞	∞	∞	∞
A			-	J	Z	j	z	∞	∞	∞	∞	∞	∞	∞	∞
B			+	K	[k	[∞	∞	∞	∞	∞	∞	∞	∞
C			-	<	L	\	l	l	∞	∞	∞	∞	∞	∞	∞
D			=	M]	m]	∞	∞	∞	∞	∞	∞	∞	∞
E			.	>	N	^	n	^	∞	∞	∞	∞	∞	∞	∞
F			/	?	O	_	o	_	∞	∞	∞	∞	∞	∞	∞

Entering file and folder names

You can use only characters shown on the code table for file name and folder name.

If you use any other character for entry, the file and folder names are not displayed correctly. They may neither be displayed correctly depending on the CD/DVD writer used. The MP3/WMA/JPEG/MPEG file must have the MP3/WMA/JPEG/MPEG extension (.mp3/.wma/.jpg/.mpg).



- A file with a name entered with characters not on the code list may not play correctly.

Writing files into a medium

When a medium containing MP3/WMA/JPEG/MPEG data is loaded, the unit checks all the data on the medium. If the medium contains a lot of folders or non-MP3/WMA/JPEG/MPEG files, therefore, it takes a long time until the unit starts playing MP3/WMA/JPEG/MPEG.

In addition, it may take time for the unit to move to the next MP3/WMA/JPEG/MPEG file or a File Search or Folder Search may not be performed smoothly.



Loading such a medium may produce loud noise to damage the speakers.

- Do not attempt to play a medium containing a non-MP3/WMA/JPEG/MPEG file with the MP3/WMA/JPEG/MPEG extension. The unit mistakes non-MP3/WMA/JPEG/MPEG files for MP3/WMA/JPEG/MPEG data as long as they have the MP3/WMA/JPEG/MPEG extension.
- Do not attempt to play a medium containing non MP3/WMA/JPEG/MPEG.

MP3/WMA/JPEG/MPEG playing order

When selected for play, Folder Search, File Search, or for Folder Select, files and folders are accessed in the order in which they were written by the CD/DVD writer.

Because of this, the order in which they are expected to be played may not match the order in which they are actually played. You may be able to set the order in which MP3/WMA/JPEG/MPEG are to be played by writing them onto a medium such as a CD-R with their file names beginning with play sequence numbers such as "01" to "99", depending on your CD/DVD writer.

JPEG

JPEG is a standardized image compression mechanism. JPEG stands for Joint Photographic Experts Group, the original name of the committee that wrote the standard. JPEG is designed for compressing either full color or gray scale images.

MPEG 1


The most common implementations of the MPEG 1 standard provide a video resolution of 352-by-240 at 30 frames per second (fps). This produces video quality slightly below the quality of conventional VCR videos.

MPEG 2


MPEG 2 offers resolutions of 720x480 and 1280x720 at 60 fps (NTSC), with full CD-quality audio. This is sufficient for all the major TV standards, including NTSC, and even PAL. MPEG 2 is used by DVD-ROMs. MPEG-2 can compress a 2-hour video into a few gigabytes.

Opening/Closing the Monitor and Power Switch

Open the monitor

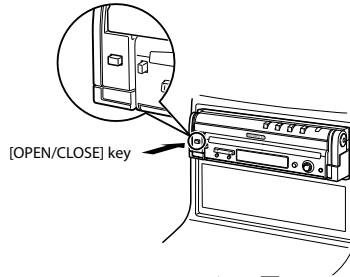


Close the monitor

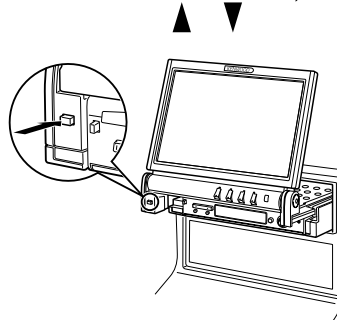

Turn the power on

Hold down the [SRC] key more than one second to turn it off.

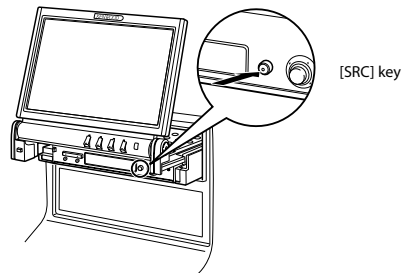


- Do not touch the moving components when you are opening or closing the monitor. If you touch the moving components, you may be hurt or the equipment may be damaged.
- Do not try to open or close the monitor by hand.



- You can automatically open or close the monitor when you turn on or off the ignition key (page 52).
- If the monitor movement is stopped by the shift lever or another obstacle when the monitor is opened, this movement is canceled by the safety function. If an obstacle is pinched by the monitor when closed, the monitor movement is also canceled by the safety function. If it has occurred, remove the obstacle and press the [OPEN/CLOSE] key again.


Removing/Attaching the Protection Panel

Remove the protection panel

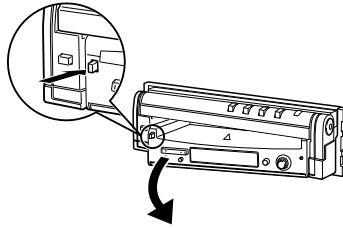

Attach the protection panel


Place the right end of the protection panel onto hooks and push it until clicked and locked. Then, push the left end of the panel to lock it.

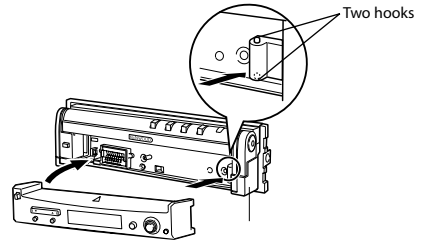


- Close the monitor first, then remove or attach the protection panel.
- After you have removed the protection panel, you cannot operate the receiver.
- After you have removed the protection panel, you can flash the burglar alarm lamp (page 72).

KVT-827DVD Basic operations

■ When the monitor is open

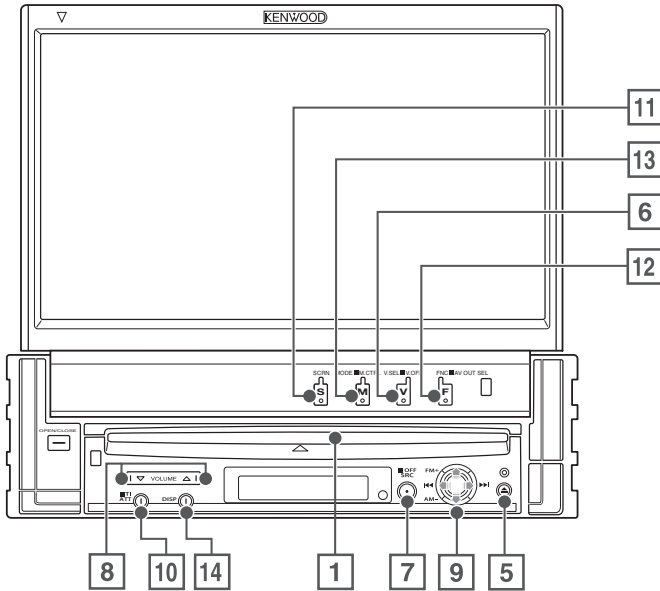

■ When the monitor is closed

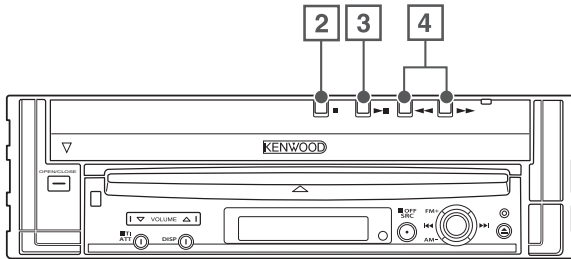

1 Play Disc
[Disc insertion slot]

A disc is played when you insert it.

2 Stop to Play
[■] key

Stops to play.

3 Play/Pause
[▶||] key

Pauses and replays a disc.

4 Search Selectors
[◀◀]/[▶▶] key


Searches a disc backward or forward.

5 Eject Disc
[Eject] key

The disc is ejected.

6 Video source selection/V.OFF
[V.SEL]key


Video source selection changes in the following order each time you press the key.

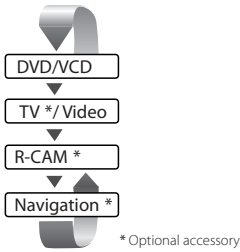

You can also turn off the video display by pressing the key longer than 1 second. When you press the key again, the previous video display comes back on.

7 Audio Source Selection/Power Supply [SRC] key

Audio source selection changes in the following order each time you press the key.

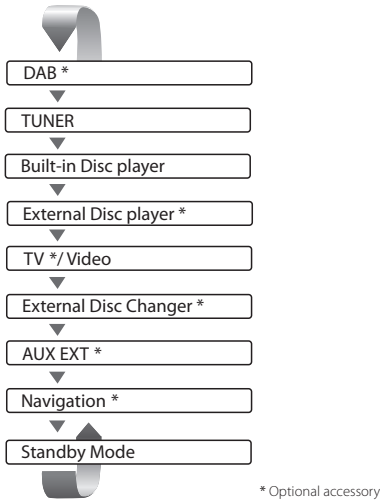

You can also turn off the power by pressing the key longer than 1 second. When you press the key again, the power turns on.

8 Volume Controls [▲]/[▼] key

Adjusts the volume.

9 Joystick Track/Station Selectors [◀]/[▶] key

Selects a music or chapter, track, or frequency.

Band/Folder Selectors

[FM]/[AM] key

[FM] key switches to the FM1/2/3 band or next folder/disc.

[AM] key switches to the AM band or previous folder/disc.

10 Attenuator [ATT] key

Attenuates the volume.

Press it again to cancel muting.

[TI] key


Hold down more than 1 second to turn the Traffic Information function On or Off. (page 36)

11 Screen Setup [SCREEN] key

Displays the Screen Setup or Angle Setup screen. (page 52)

12 Function/AV OUT SEL [FNC] key

The video source function changes in the following order each time you press the key.

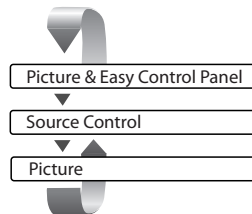

Switches the source that is output at the AV OUTPUT terminal when it is pressed more than 1 second.

13 Switch Screen Mode/M.CTRL [MODE] key

Switches the screen mode. (page 17)

The DVD Disc Menu screen appears when you hold down the key more than 1 second. (page 22)



- DVD Disc Menu is not available when the top menu of the DVD is shown.


14 Small Display [DISP] key

Switches to the Small Display. (page 16)



- Aside from the navigation system, the display turns on when you apply the parking brake.
- It is necessary to set "Navigation Source" of <AV Interface> to "On" to add Navigation as an audio source that can be selected with the [SRC] key. (page 67)
- It is necessary to engage the shift knob of car to "Reverse" to switch to rear view camera video display.

Basic Operations of Remote Controller

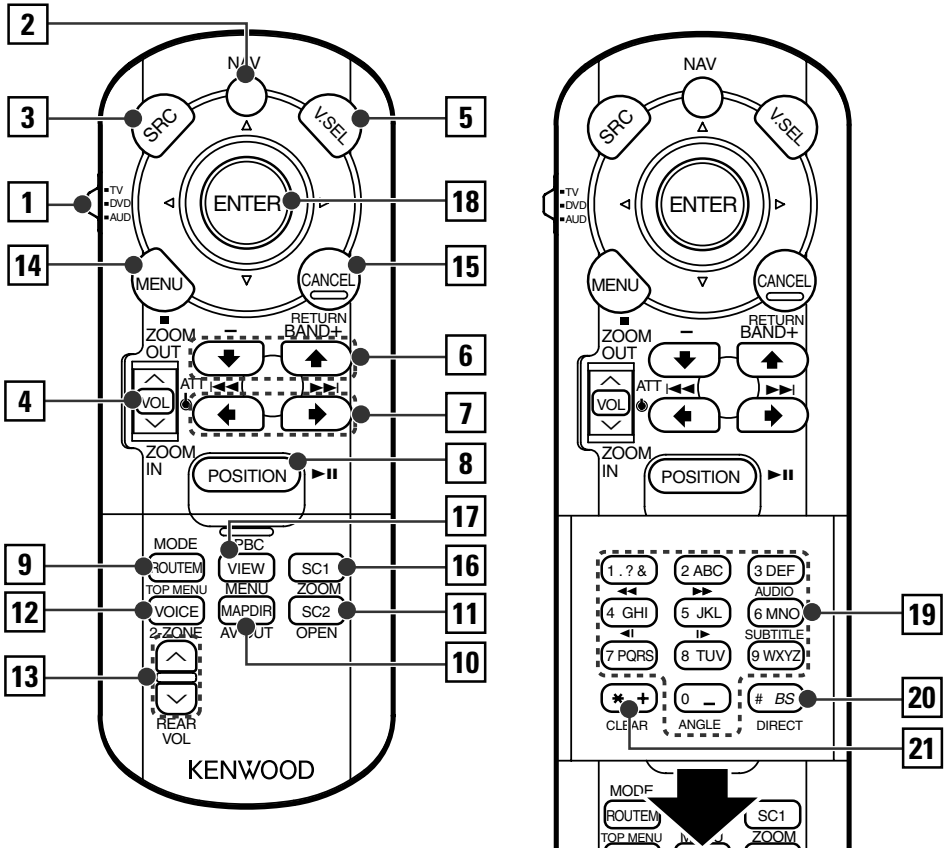

1 Remote Control Mode selector switch

Selects one of the following remote control modes when switched to AV control mode with [NAV] switch.
 TV: TV source
 DVD: Built-in DVD/VCD/CD/MP3/WMA/JPEG/MPEG player source
 AUD: Tuner source or attached disc changer source

2 [NAV] switch

Pressing the switch until it locks enters into the navigation system control mode. Pressing the switch again returns to the AV control mode.

3 [SRC] key

Audio source changes each time you press the key.

4 [VOL] key


DISC TV TUNER
 Adjusts the volume. When you press the key, the volume attenuates.
 When you press the key again, the volume returns to the previous level.

NAV

Zooms in or out the navigation map.

5 [V.SEL] key

Video source selection changes in the following order each time you press the key.

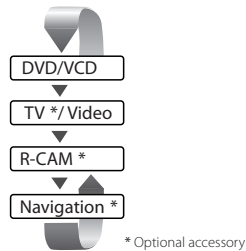

- It is necessary to engage the shift knob of car to "Reverse" to switch to rear view camera (R-CAM) video display.

6 [BAND] key

DISC (When **1** is set to "DVD" or "AUD")
Select a disc and a folder.

TV (When **1** is set to "TV" or "AUD")

BAND: Switches to TV1, TV2, VIDEO1, or VIDEO2.

TUNER (When **1** is set to "AUD")

+: Switches to the FM1, FM2, or FM3 band.

-: Switches to the AM band.

NAV

Selects the icon.

7 [◀/▶] key

DISC (When **1** is set to "DVD" or "AUD")
Selects a song.

TV (When **1** is set to "TV" or "AUD")

Select a channel.

TUNER (When **1** is set to "AUD")

Selects a station.

NAV

Selects an icon or scrolls horizontally.

8 [▶II] key

DISC (When **1** is set to "DVD" or "AUD")
Plays or pauses.

TV (When **1** is set to "TV" or "AUD")

TUNER (When **1** is set to "AUD")

Selects the Seek mode.

(see page 34/41/46 for the <Seek Mode>)

NAV

Displays the current position.

9 [TOP MENU] key

DVD (When **1** is set to "DVD")

Calls the Top menu of DVD Disc Menu.

DISC TV TUNER

Switches the Screen mode. (page 17) (When **1** is set to "TV" or "AUD")

NAV

Displays Route Option menu.

10 [AV OUT] key

DISC TV TUNER

Selects an AV source to be output at the AV OUTPUT port.

NAV

Switches between the heading up navigation and north up navigation map displays.

11 [OPEN] key

DISC TV TUNER

Opens or closes the monitor each time you press the key.

NAV

Jumps to the function registered in Shortcut 2.

12 [2-ZONE] key

DISC TV TUNER

Turns Zone function on or off each time you press the key. (see page 92 for the <Zone Control>)

NAV

Plays Voice guidance.

13 [REAR VOL] key

DISC TV TUNER

You can adjust the rear channel volume when Zone function is on.

14 [MENU] key

DVD (When **1** is set to "DVD")

Stops to play the built-in disc play.

NAV

Displays Main menu.

15 [CANCEL] key

DVD VCD (When **1** is set to "DVD")

Returns to the previous screen when the DVD/VCD Disc Menu is displayed.

NAV

Displays previous screen (same as the [Return] button on the navigation screen).

16 [ZOOM] key

DVD VCD (When **1** is set to "DVD")

Each time you press the button, the zoom ratio switches.

NAV

Jumps to the function registered in Shortcut 1.

17 [MENU] key

DVD (When **1** is set to "DVD")

Calls the DVD Disc Menu.

VCD (When **1** is set to "DVD")

Turns the PBC (Playback Control) function On or Off.

NAV

Switches between 2D and 3D map displays.

18 Joystick

DVD

Enters your selection from the DVD Disc Menu.

NAV

Scrolls the map, or moves the cursor.

Also performs the selected function when you press the button down.

DVD : An operation during DVD playback

VCD : An operation during VCD playback

DISC : An operation during DVD, VCD, CD, MP3/WMA/JPEG/MPEG or MD playback

TV : An operation during TV source

TUNER : An operation during FM/AM broadcasting source

NAV : An operation during Navigation (KNA-DV2100,KNA-DV2200,KNA-DV3200) control mode

19 [0] – [9] key

TV(When **1** is set to "TV")**TUNER** (When **1** is set to "AUD")**7A** — **MEMO** : Recall the stations on memory.**NAV**

You can enter a character/number.

[SUBTITLE] key**DVD** (When **1** is set to "DVD")**MEMO** : Switches a subtitle language.**[AUDIO] key****DVD** **VCD** (When **1** is set to "DVD")**DEF** : Switches an audio language.**[◀◀]/[▶▶] key****DVD** **VCD** **CD** (When **1** is set to "DVD")**◀◀** : Fast Backward (Rewind). The speed changes each time it is pressed.**▶▶** : Fast Forward. The speed changes each time it is pressed.**[◀I]/[I▶] key****DVD** **VCD** (When **1** is set to "DVD")**◀I** : Slow Backward.**I▶** : Slow Forward.**[ANGLE] key****DVD** (When **1** is set to "DVD")**↺** : Switches the view angle.20 **[DIRECT] key**

Selects the Direct Search mode.

(see page 23/31/36 for <Direct Search>)


21 **[CLEAR] key****DVD** (When **1** is set to "DVD")

Clears a numeric value you have entered in the built-in disc player during direct search.

About discs

Handling discs


- Do not touch the recording surface of the disc.

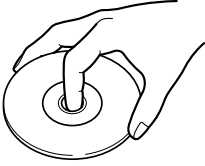

- CD-R/RW, DVD-R/RW, and DVD+R/RW are easier to damage than a normal music CD. Use a CD-R/RW, DVD-R/RW, or DVD+R/RW after reading the caution items on the package etc.
- Do not stick a tape, sticker, etc., on the disc. Also, do not use a disc with those materials pasted on it.

When using a new disc

If the disc center hole or outside rim has burrs, use it after removing them with a ball pen etc.

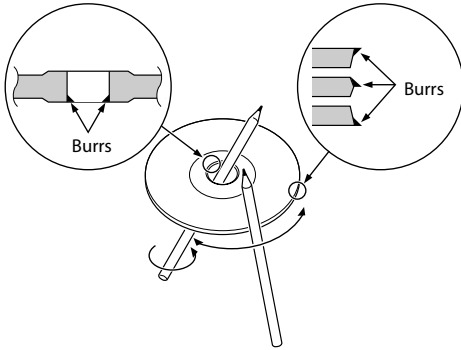


Disc shaped accessory

Do not insert a disc shape accessory into the unit.

Disc cleaning

Wipe from the center of the disc to outward.

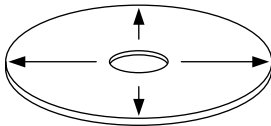



Removing discs

When removing discs from this unit pull them out horizontally.

Discs that cannot be used

- Discs that are not round cannot be used.

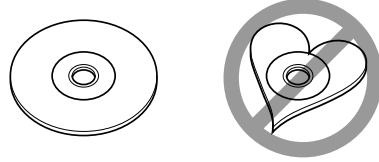


- Discs with coloring on the recording surface or that are dirty cannot be used.
- This unit can only play the CDs with one of  labels.
- Discs without the label may not be played on the unit.
- A CD-R or CD-RW that hasn't been finalized cannot be played. (For the finalization process refer to your CD-R/CD-RW writing software user's guide, and your CD-R/CD-RW recorder instruction manual.)

Disc storage

- Do not leave discs in direct sunlight (On the seat or dashboard etc.) and where the temperature is high.
- Put discs in their cases.


Switching Small Display

The Small Display screen mode changes each time the [DISP] key is pressed.

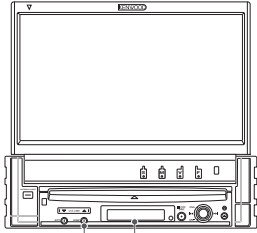


[DISP] key Small Display


[DVD Video]

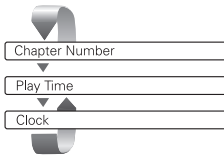


[VCD]

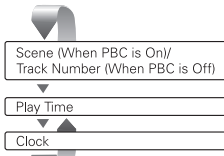


[CD]

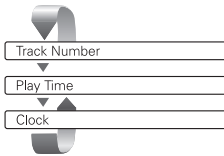


[MP3/WMA]

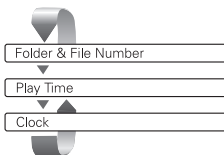


[TV/Video]

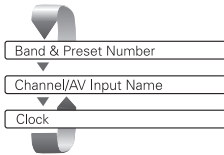


[Tuner]

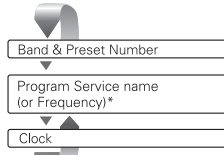


[Disc Changer]

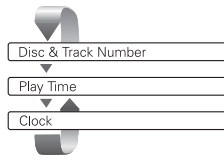


[Navigation]

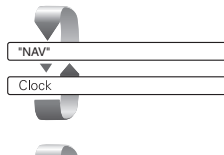


[AUX]

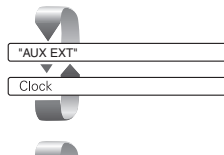

[DAB]

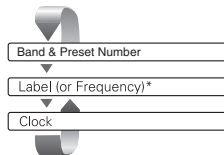



[STANDBY]

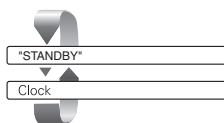

* Hold down the [DISP] key more than 1 second to switch to the Frequency display.

Switching Screen Mode

The Screen mode of the monitor changes each time the [MODE] key is pressed.

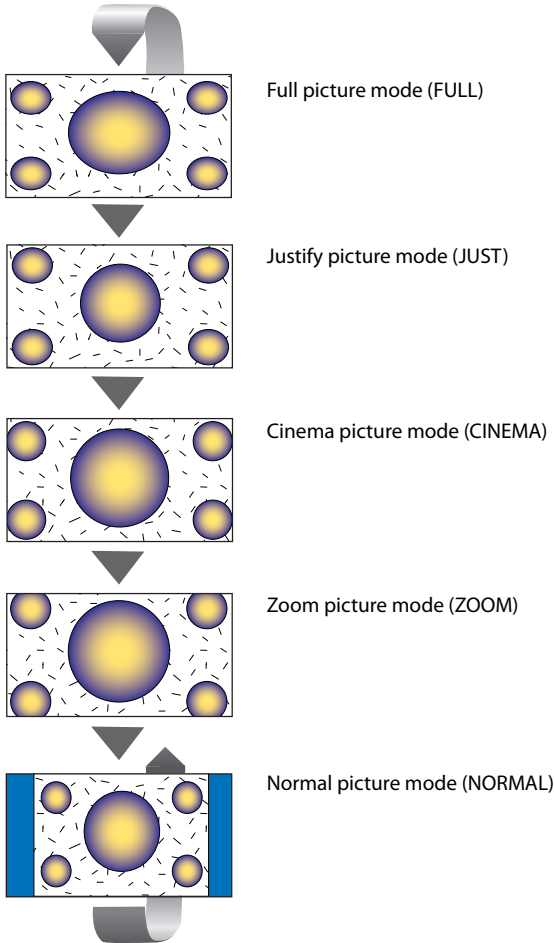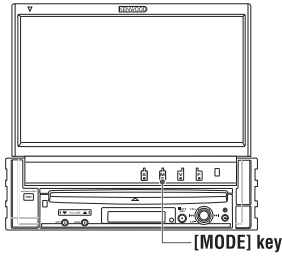

- When you select the Menu, Easy Control screen, or Navigation, the display is shown in the full-size display mode automatically. The screen mode of these displays cannot be changed.
- You can set the screen mode for each of the DVD/VCD, TV, and video images.

Controlling during DVD Video, Video CD , JPEG or MPEG Playback


Various control screens appear when you play back a DVD Video (DVD), a Video CD (VCD) disc, a JPEG, or MPEG files.

Displaying the DVD/VCD/JPEG/MPEG Playback screen


You can use the following operations when displaying DVD/VCD/JPEG/MPEG images.



DVD playback screen

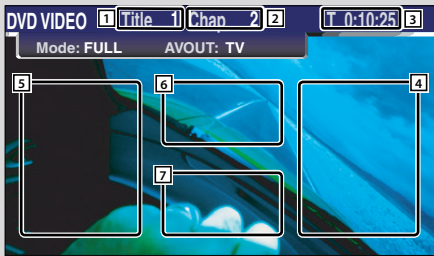

VCD playback screen

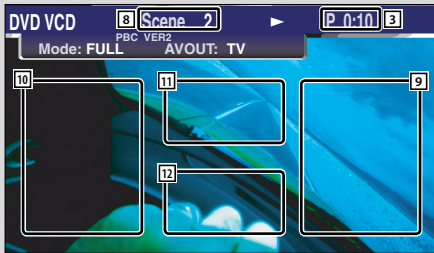

- 1 Title Number Display
- 2 Chapter Number Display
- 3 Play Time Display
- 4 Forward Chapter Search Area
Selects the next chapter.
- 5 Backward Chapter Search Area (page 22)
Selects the previous chapter.
- 6 DVD Disc Menu Control Button Area (page 22)



- When you touched during DVD menu played it will change to Highlight screen. (page 22).


- 7 Information Display Button Area (page 23)

- 8 Scene/Track Number Display
- 9 Forward Scene/Track Search Area
Selects the next scene (when PBC is On) or track (when PBC is Off).
- 10 Backward Scene/Track Search Area
Selects the previous scene (when PBC is On) or track (when PBC is Off).
- 11 Zoom Control Button Area
Displays the Zoom Control buttons (page 23).
- 12 Information Display Button Area (page 23)



- For DVD/VCD playback, DVD/VCD picture selection, or controller key operations, see <KVT-827DVD Basic Operations> (page 10).
- The information display is cleared automatically after approximately 5 seconds. Also, the information can be displayed automatically when it is updated (page 68).

JPEG/MPEG playback screen

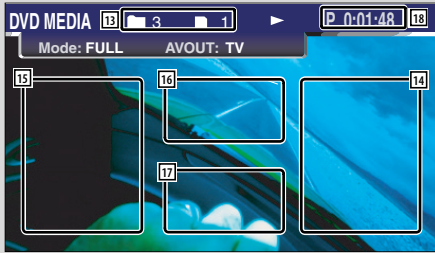

- 13 Folder/File Number Display
- 14 Forward File Search Area
Selects the next folder or file.
- 15 Backward File Search Area
Selects the previous folder or file.
- 16 Picture Control Button Area (page 23)
JPEG playback only.
- 17 Information Display Button Area (page 23)
- 18 Play Time Display




- The Easy control panel functions are seeing page 24.

Displaying the Easy Control Panel

The Control Panel is displayed in a floating position of the DVD/VCD screen.



Displaying the Easy Control Panel

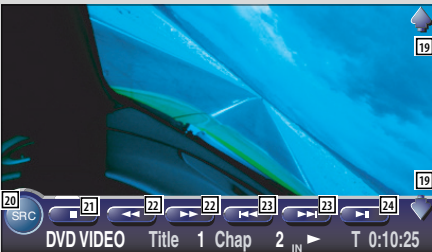

- 19 Adjusts the volume.
- 20 Switches the source.
- 21 Stops to play.
When pressed twice, the disc is played from its beginning when you play it in the next time.
- 22 Fast Forwards or Fast Backwards.
- 23 **Chapter Search** **DVD**
Searches for a chapter.
Scene/Track Search **VCD**
Selects a scene (when PBC is On) or a track (when PBC is Off).
- 24 Plays or pauses.




- The Easy Control Panel is hidden when you touch a central area of the monitor.

Displaying the DVD/VCD Control screen

Plays a DVD/VCD using various functions.



DVD/VCD Control screen

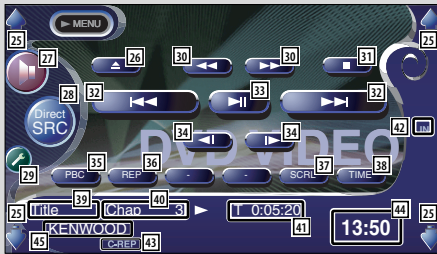

- 25 Adjusts the volume.
- 26 Ejects the disc from the built-in disc player.
- 27 Calls the Sound Effects Menu. (page 82)
- 28 Displays the Source Select screen. (page 51)
- 29 Calls the Setup Menu. (page 53)
- 30 Fast Forwards or Fast Backwards.
- 31 Stops to play.
When pressed twice, the disc is played from its beginning when you play it in the next time.
- 32 Selects a chapter, a scene or a track.
When the DVD/VCD is paused, touch this button to start single-frame stepping.
- 33 Plays or pauses.
- 34 Slow Forwards or Backwards. **DVD**
- 35 Turns the PBC function of VCD On or Off. (VCD Ver 2.0)
- 36 Switches the Repeat Play operations in the following sequence.
DVD: Title Repeat, Chapter Repeat, Repeat Off
VCD: Track Repeat, Repeat Off (Available when the PBC is off)
- 37 Scrolls the display text.
- 38 Switches the play time display in the following sequence.
DVD: Title, chapter, remaining titles
VCD: Track, disc, remaining discs (Available when the PBC is off)
- 39 **Title Number Display** **DVD**
- 40 **Chapter/Scene/Track Number Display**
- 41 **Play Time Display**
- 42 Appears when a disc is inserted.
- 43 **Function Indicator**
- 44 **Clock Display**
When touched, the display of Clock 1, Clock 2, and Clock 3 are switched one after the other.
- 45 **Volume Label Display**


DVD Disc Menu

Selects an option from the DVD Disc Menu.

1 Display the Disc Menu Control screen



6 DVD Disc Menu Control Buttons Area (page 18)

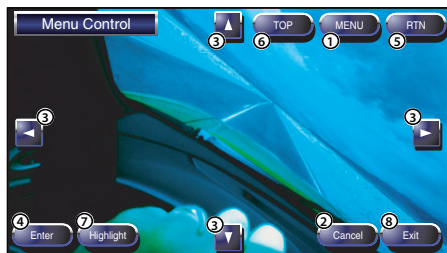


- 1 Calls the Menu.
- 2 Returns to the Disc Menu Control screen.
- 3 Selects a menu option.
- 4 Enters your menu selection.
- 5 Returns to the previous menu screen.
- 6 Displays the Top Menu.
- 7 Highlight Control.
- 8 Clears the Disc Menu Control.

Highlight Control

You can select a chapter and title for the DVD Menu screen. When you touch a chapter and title, it is played back.



Highlight

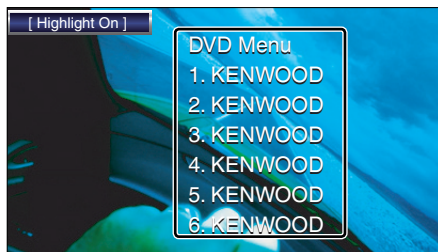


- To cancel Highlight Control, press "MODE" key. (page 11)

2 Select Disc Menu options

Disc Menu



Cancel

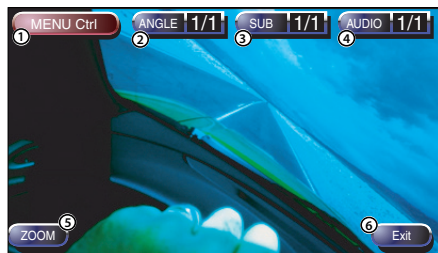

- 1 Calls the Menu Control.
- 2 Switches the picture angle. (during program playback only)
- 3 Switches the subtitle language. (during program playback only)
- 4 Switches the voice language. (during program playback only)
- 5 Displays the Zoom Control screen.
- 6 Clears the Disc Menu Control.

Zoom Control



ZOOM



- 1 Changes the zoom ratio at 4 levels (2 times, 3 times, 4 times, or off) each time you touch.
- 2 Scrolls the screen in the direction you touch.
- 3 Returns to the Disc Menu Control screen.
- 4 Clears the Zoom Menu Control.


VCD Zoom Control

Displays an enlarged VCD screen.

1 Display the Zoom Control screen



11 Zoom Control Button Area (page 18)

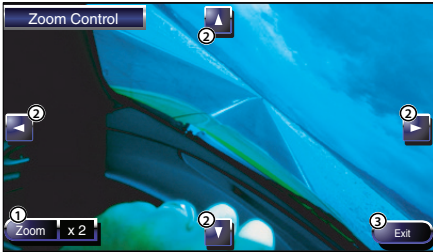

- ① Changes the zoom ratio at 4 levels (2 times, 3 times, 4 times, or off) each time you touch.
- ② Scrolls the screen in the direction you touch.
- ③ Clears the Zoom Control button.


Picture Control

Rotates picture for JPEG files.

1 Display the Picture Control screen



16 Picture Control Button Area (page 19)

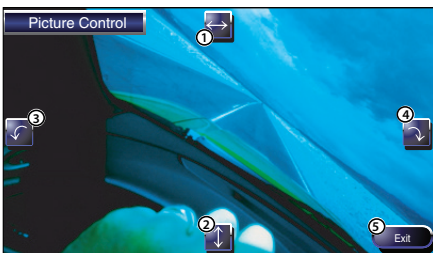

- ① Switch the picture flip horizontal.
- ② Switch the picture flip vertical.
- ③ Rotate the picture counter clockwise.
- ④ Rotate the picture clockwise.
- ⑤ Clears the Picture Control button.

Information Display

Displays the DVD and AV information.



7 **12** **17**

Information Display Button Area (page 18,19)

The information is displayed for 5 seconds.

Direct Search

You can search for a DVD/VCD chapter, scene or track by entering its number.

1 Select the Direct Search mode



BS
DIRECT

The following items can be searched directly each time it is pressed.

DVD: Title, Chapter, Time, Direct number

VCD (when PBC is On): Scene, Direct number

VCD (when PBC is Off): Track, Time

However, the direct search may not be supported for some discs.

2 Enter a number or time



0 - 9 WXYZ

When playing back a VCD, enter a PBC screen number (if PBC is On) or a track number (if PBC is Off).



- To clear your incorrect entry, press **CLEAR** (CLEAR).

3 Search



POSITION ►



- The operation ends automatically if you do not operate within 10 seconds.

CD/MP3/WMA/JPEG/MPEG/Disc Changer Play Control


You can call various control screens during CD/MP3/WMA/JPEG/MPEG/Disc Changer playback.

Displaying the Easy Control Panel

The CD/MP3/WMA/JPEG/MPEG/Disc Changer Play Control Panel is displayed in a floating position of the selected picture.




Displaying the Easy Control Panel During CD playback

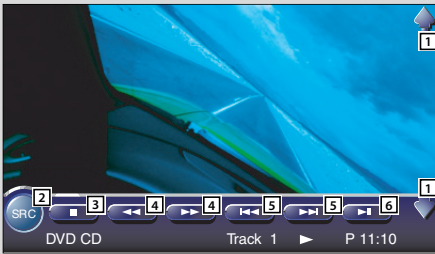

During MP3/WMA/JPEG/MPEG playback



 During playback on disc changer



- 1 Adjusts the volume.
- 2 Switches the source.
- 3 Stops to play the built-in disc player.
- 4 Fast Forwards or Fast Backwards. (only when a CD is played back on the built-in disc player)
- 5 Selects a song or data.
When you continue to touch button:
Fast Forwards or Fast Backwards.
(Disabled when a JPEG is being played.)
- 6 Plays or pauses.
- 7 Selects a folder. (only when an MP3/WMA/JPEG/MPEG is played back on the built-in disc player)
- 8 Selects a disc. (only when a disc is played back on the disc changer)




- For CD/MP3/WMA/JPEG/MPEG/Disc Changer playback and receiver key operations, see <KVT-827DVD Basic Operations> (page 10).
- The Easy Control Panel is hidden when you touch a central area of the monitor.

Displaying the CD/MP3/WMA/JPEG/MPEG/Disc Changer Control screen

You can play the CD/MP3/WMA/JPEG/MPEG/Disc changer using various functions.




CD Control screen

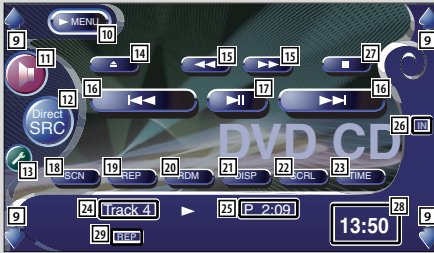

During CD playback

- 9 Adjusts the volume.
- 10 Calls the CD Menu.
- 11 Calls the Sound Effects Menu. (page 82)
- 12 Switches the source.
Displays the Source Select screen. (page 51)
- 13 Calls the Setup Menu. (page 53)
- 14 Ejects the disc from the built-in disc player.
- 15 Fast Forwards or Fast Backwards.
- 16 Selects a track.
- 17 Plays or pauses.
- 18 Starts or stops Scan Play (that plays the beginning of each song one after the other).
- 19 Repeats to play (the present track).
- 20 Starts or stops Random Play (to play songs in random order).
- 21 Selects the Disc Name (see <Set Disc Name>, page 29), Disc Text, or Track Text mode for text display.
- 22 Scrolls the display text.
- 23 Switches the play time display between Track, Disc, and Disc Remaining Time.
- 24 **Track Number Display**
- 25 **Play Time Display**
- 26 Appears when a disc is inserted.
- 27 Stops to play the built-in disc player.
When pressed twice, the disc is played from its beginning when you play it in the next time.
- 28 **Clock Display**
When touched, the display of Clock 1, Clock 2, and Clock 3 are switched one after the other.
- 29 **Function Indicator**

MP3/WMA/JPEG/MPEG Control screen

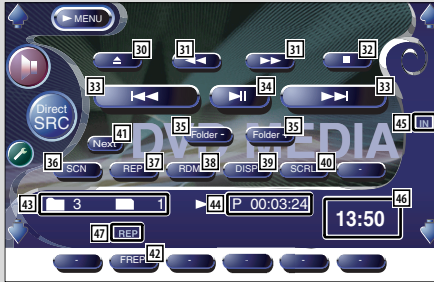

During MP3/WMA/JPEG/MPEG play

- 30 Ejects a disc.
- 31 Fast Forwards or Fast Backwards..
(Disabled when a JPEG is being played.)
- 32 Stops to play.
When pressed twice, the disc is played back from its beginning in the next time.
- 33 Selects a song or data.
- 34 Plays or pauses.
- 35 Selects a folder.
- 36 Starts or stops Scan Play (that plays the beginning of each song or data one after the other).
- 37 Repeats to play (the present song or data).
- 38 Starts or stops Random Play (to play songs of the present folder in random order).
- 39 Selects the Folder name, File name, Title (ID3/WMA tag), Artist name (ID3/WMA tag), or Album name (ID3 tag) for text display.
- 40 Scrolls the display text.
- 41 Switches the button display.
- 42 Repeats to play the song or data of the present folder.
- 43 **Folder and File Number Display**
- 44 **Play Time Display**
- 45 Appears when a disc is inserted.
- 46 **Clock Display**
When touched, the display of Clock 1, Clock 2, and Clock 3 are switched one after the other.
- 47 **Function Indicator**

Disc Changer Control screen



During play by the disc changer

- 48** Selects a track.
Starts Fast Forward or Fast Backwards when it is held down.
- 49** Selects a disc.
- 50** Plays or pauses.
- 51** Starts or stops Scan Play (that plays the beginning of each song one after the other).
- 52** Repeats to play (the present track).
- 53** Starts or stops Random Play (to play songs in random order).
- 54** Repeats to play disc (the present disc).
- 55** Starts or stops Magazine Random Play (to play songs of the disc changer in random order).
- 56** Switches the button display.
- 57** Selects the Disc Name (see <Set Disc Name>, page 29), Disc Text, or Track Text mode for text display.
- 58** Scrolls the display text.
- 59** Switches the play time display between Track, Disc, and Disc Remaining Time.
- 60** **Disc Number Display**
- 61** **Track Number Display**
- 62** **Play Time Display**
- 63** **Clock Display**
When touched, the display of Clock 1, Clock 2, and Clock 3 are switched one after the other.
- 64** **Function Indicator**

Displaying the CD/MP3/WMA/JPEG/MPEG/Disc Changer Menu screen

You can select menu options using various functions.



CD Menu screen



65 Selects options from various function menus.

66 Returns to the CD/MP3/WMA/JPEG/MPEG/Disc Changer Control screen.



- The available functions vary depending on the source used.

Set Disc Name

Names a CD.

1 Play a CD you wish to name

2 Call the CD/Disc Changer Menu



3 Select the Set Name mode



- The **Name Set** position varies depending on the disc you are playing.

4 Enter a name

For character entry details, see <Character Entry> (page 50).

5 Exit the Set Name mode



- You cannot name an MD or MP3/WMA/JPEG/MPEG disc.
- You can store up to 100 disc names in memory. The receiver's Set Disc Name function uses the Memory Function of the receiver itself, rather than the memory function of disc changer or others. Therefore, you can store up to 100 disc names independent from the memory function of the attached device.
- You can set a disc name only after you have applied the parking brake.


Select Folder (during MP3/WMA/JPEG/MPEG play)

The folders of an MP3/WMA/JPEG/MPEG disc are listed for quick search.

1 Call the MP3/WMA/JPEG/MPEG Menu



2 Start the Select Folder

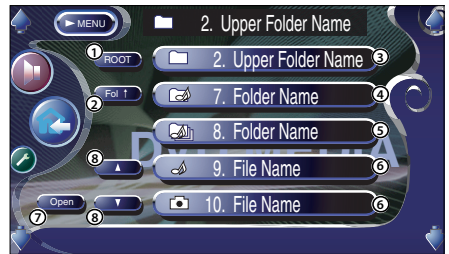

- Returns to the root directory.
- Displays the next higher level of hierarchy.
- Displays a folder if the subdirectory has a folder without files. When you touch the folder, it opens.
- Displays a folder if the subdirectory has files without a folder. When you touch the folder, it opens.
- Displays a folder if the subdirectory has both files and folders. When you touch the folder, it opens.
- Displays the MP3/WMA/JPEG/MPEG files. When you touch a file, its data is played back.
- Plays the selected folder.
- Scrolls the list.

3 Select a song



Display the desired song and touch the file display.


ID3/WMA TAG Display (during MP3/WMA play)

The ID3/WMA TAG information of MP3/WMA file is listed.

1 Call the MP3/WMA/JPEG/MPEG Menu



2 Display the ID3/WMA TAG

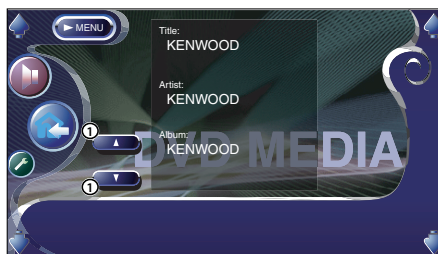

① Scrolls the list.

Disc Select (during play by disc changer)

The discs loaded on the disc changer are listed for quick disc selection.

1 Call the Disc Changer Menu



2 Call the Disc Select Menu



- ① Plays the displayed disc.
- ② Selects the Disc Name or Disc Text mode for text display.
- ③ Scrolls the list.
(It is not displayed when a disc changer having 6 or less discs is used.)

3 Select the desired disc



 
Touch the desired disc display.

Direct Search

Searches for a disc or a track when its number is entered.

During play on the built-in disc player

1 Select the Direct Search mode



The following items can be searched directly each time it is pressed.

CD: Track number, Total play time

MP3/WMA/JPEG/MPEG: Folder, File

2 Enter a track number



3 Search

When searching for a track:



During play on an external in disc player or disc changer

1 Enter a disc or track number



2 Search

When searching for a track:



When searching for a disc:



- The operation ends automatically if you do not operate within 10 seconds.

Tuner Control


Various control screens appear in the Tuner Source mode.

Displaying the Easy Control Panel

The Tuner Control Panel is displayed in a floating position of the selected picture.



Displaying the Easy Control Panel

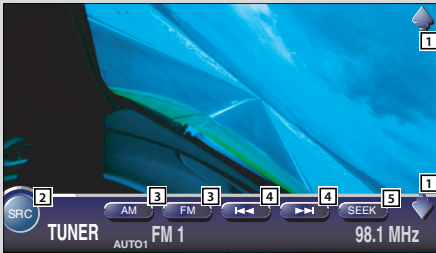

- 1 Adjusts the volume.
- 2 Switches the source.
- 3 Switches the band (to AM or FM1/2/3).
- 4 Tunes in a station
- 5 Switches the Seek mode.
(see page 34 for the <Seek Mode>)



- For receiver key operations, see <KVT-827DVD Basic Operations> (page 10).
- The Easy Control Panel is hidden when you touch a central area of the monitor.

Displaying the Tuner Control screen


You can tune in a station using various functions.



Tuner Control screen



- 6 Adjusts the volume.
- 7 Calls the Tuner Menu.
- 8 Calls the Sound Effects Menu. (page 82)
- 9 Switches the source.
Displays the Source Select screen. (page 51)
- 10 Calls the Setup Menu. (page 53)
- 11 Switches to the FM1/2/3 band.
- 12 Switches to the AM band.
- 13 Tunes in a station.
Use the <Seek Mode> (page 34) to change the frequency switching.
- 14 Switches between **1** to **6** buttons and Function buttons to use.
- 15 Select the Monaural sound mode. (Only when receiving the FM broadcast.)
- 16 Selects the Auto Memory mode.
(See page 34 for the <Auto Memory>)
- 17 Switches the Seek mode.
(see page 34 for the <Seek Mode>)
- 18 Selects the Program Service Name or Radio Text mode for text display.
- 19 Scrolls the display text.

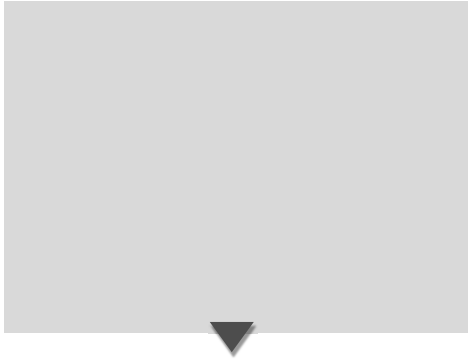

Displaying the Tuner Menu screen

You can select menu options using various functions.



Tuner Menu screen



- 20 Turns the Local seek function On or Off.
- 21 When **1** to **6** buttons appear, you can recall the stations on memory.
For memory of broadcasting stations, see <Auto Memory> (page 34) or <Manual Memory> (page 34).
- 22 Indicates current Seek mode.
- 23 **Clock Display**
When touched, the display of Clock 1, Clock 2, and Clock 3 are switched one after the other.
- 24 **Memory Number Display**

25 Selects option from various function menus.

26 Returns to the Tuner Control screen.



- The available functions vary depending on the model used (the tuner specifications and the broadcasting system that can be received).


Seek Mode

Sets a station selection.



If **SEEK** is not shown, touch **Next**.

The mode is switched in following order each time you touch the button.

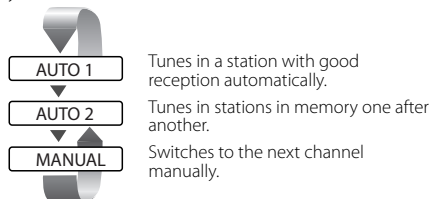

Manual Memory

Stores the current receiving station in memory.

1 Select a station you wish to store in memory



2 Store in memory



If **1** to **6** are not shown, touch **Next**. Continue to touch until the memory number appears.

Auto Memory

Stores stations with good reception in memory automatically.

1 Select a band you wish to store in memory



2 Select the Auto Memory mode



If **AME** is not shown, touch **Next**.

3 Start Auto Memory



Touch **Left Arrow** or **Right Arrow**.

Auto Memory terminates when 6 stations are stored or when all stations are tuned in.



- The operation ends automatically if you do not operate within 10 seconds.

Preset Select

Lists and tunes in stations in memory one after the other.

1 Call the Tuner Menu



2 Call the Preset Select Menu



- ① Tunes in the displayed station.
The station name is displayed if previously set.
- ② Switches the band of the displayed station list.
- ③ Band Display.
- ④ Returns to the Tuner Menu.

Direct Search

Tunes in a station when its frequency is entered.

 
1 Select a band



2 Selects the Direct Search mode



3 Enter a frequency



When you enter frequency, signal reception starts.

Example: When you receive FM 92.1 MHz



Example: When you receive AM 810 kHz



- The operation ends automatically if you do not operate within 10 seconds.


Traffic Information

When a traffic bulletin starts, any source is switched to the traffic information and it is displayed automatically.

When the traffic bulletin starts...

The Traffic Information screen appears automatically.

Traffic Information screen

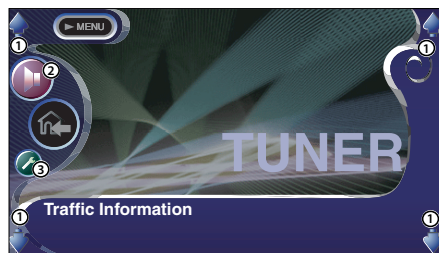

- ① Adjusts the volume.
- ② Calls the Sound Effects Menu. (page 82)
- ③ Calls the Setup Menu. (page 53)

If you continue to listen to the audio source during traffic bulletin...



- It is necessary to have Traffic Information function set to On in order to have the Traffic Information screen appear automatically.
- During reception of traffic information the adjusted volume is automatically remembered, and the next time it switches to traffic information it's automatically the remembered volume.

Search for Program Type

A program is tuned when you set its program type.
(Only when receiving the FM broadcast.)

1 Call the Tuner Menu



2 Call the PTY Search Menu



- ① Selects a program type.
- ② Scrolls the program type list.
- ③ Searches for the program type.
It is displayed when the Program Type is selected.
- ④ Returns to the Tuner Menu.

3 Select a program type



4 Search for the program type




Radio Text

You can display the radio text.
(Only when receiving the FM broadcast.)

1 Call the Tuner Menu



2 Display the Radio Text

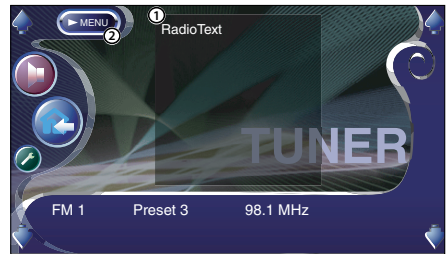

- ① Displays the Radio Text.
- ② Returns to the Tuner Menu.

TV/VIDEO Control

Various control screens appear in the TV/ Video Source mode. (You can only operate TV with the optional accessory TV Tuner connected.)


Displaying the TV Picture screen

Various control screens appear in the TV Source mode.



Select the TV Pictures.

TV Picture screen

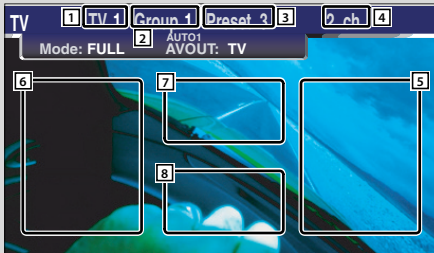

- 1 TV Band Number Display
- 2 TV Area Group Display (page 76)
- 3 Memory Number Display
- 4 Channel Number Display
- 5 Channel Up Area
Increase the channel.
- 6 Channel Down Area
Decrease the channel.
- 7 Band/Video Switch Area
Switches to TV1, TV2, VIDEO1 or VIDEO2.
- 8 Information Display Button Area




- For TV picture selection and receiver key operations, see <KVT-827DVD Basic Operations> (page 10).
- The information display is cleared automatically after approximately 5 seconds. Also, the information can be displayed automatically when it is updated (page 68).

Displaying the Easy Control Panel

The Control Panel is displayed in a floating position of the TV picture.



Displaying the Easy Control Panel

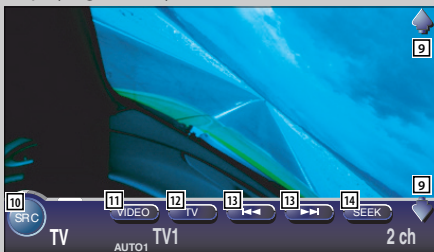

- 9 Adjusts the volume.
- 10 Switches the source.
- 11 Switches to Video (VIDEO1 or VIDEO2).
- 12 Switches the TV band (to TV1 or TV2).
- 13 Select a channel.
Use the <Seek Mode> (page 41) to change the channel tuning sequence.
- 14 Switches the Seek mode.
(see page 41 for the <Seek Mode>)




- The Easy Control Panel is hidden when you touch a central area of the monitor.

Displaying the TV Control screen

You can tune in a TV station using various functions.



TV Control screen

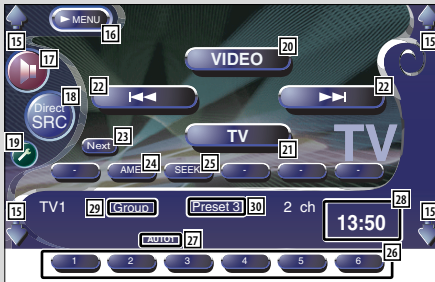

- 15 Adjusts the volume.
- 16 Calls the TV Menu.
- 17 Calls the Sound Effects Menu. (page 82)
- 18 Displays the Source Select screen. (page 51)
- 19 Calls the Setup Menu. (page 53)
- 20 Switches to VIDEO1 or VIDEO2.
- 21 Switches to TV1 or TV2.
- 22 Select a channel.
Use the <Seek Mode> (page 41) to change the channel tuning sequence.
- 23 Switches between **1** to **6** buttons and Function buttons to use.
- 24 Selects the Auto Memory mode.
(see page 41 for the <Auto Memory>)
- 25 Switches the Seek mode.
(see page 41 for the <Seek Mode>)
- 26 When **1** to **6** buttons appear, you can recall channels on memory.
For memory of broadcasting stations, see <Auto Memory> (page 41) or <Manual Memory> (page 42).
- 27 Indicates current Seek mode.
- 28 **Clock Display**
When touched, the display of Clock 1, Clock 2, and Clock 3 are switched one after the other.
- 29 **TV Area Group Display** (page 76)
- 30 **Memory Number Display**

Displaying the TV Menu screen

You can select menu options using various functions.



TV Menu screen



31 Selects option from various function menus.

32 Returns to the TV Control screen.

 
Seek Mode

Sets a TV station selection.



If **SEEK** is not shown, touch **Next**.

The mode is switched in following order each time you touch the button.



AUTO 1 Tunes in a station with good reception automatically.

AUTO 2 Tunes in stations in memory one after another.

MANUAL Switches to the next channel manually.

Auto Memory

Stores stations with good reception in memory automatically.

1 Select a band you wish to store in memory



2 Select the Auto Memory mode



If **AME** is not shown, touch **Next**.

3 Start Auto Memory



Touch **◀◀** or **▶▶**.

Auto Memory terminates when 6 stations are stored or when all stations are tuned in.



- The operation ends automatically if you do not operate within 10 seconds.

Manual Memory

Stores the current receiving channel in memory.

1 Select a channel you wish to store in memory



2 Store in memory



If 1 to 6 are not shown, continue to touch **Next** button until the memory number appears.


Preset Select

Lists and tunes in stations in memory one after the other.

1 Call the TV Menu



2 Call the Preset Select Menu

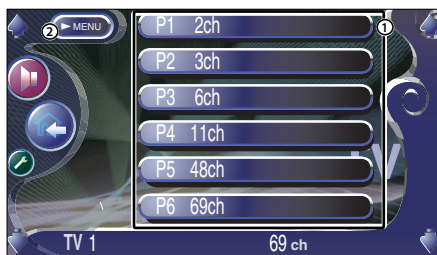

- ① Tunes in the displayed station.
The station name is displayed if it has been set.
- ② Returns to the TV Menu.

Set Station Name

Names a station.

1 Select a station you wish to name



2 Call the TV Menu



3 Select the Set Name mode



4 Enter a name

For character entry details, see <Character Entry> (page 50).

5 Exit the Set Name mode



- You can store up to 20 stations in memory.
- You can set a station name only after you have applied the parking brake.

DAB Tuner control


Various control screens appear in the DAB Tuner source mode. (with the optional accessory DAB Tuner connected only)

Displaying the Easy Control Panel

The DAB Tuner Control Panel is displayed in a floating position of the selected picture.



Displaying the Easy Control Panel

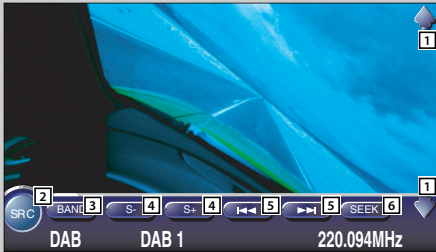

- 1 Adjusts the volume.
- 2 Switches the source.
- 3 Switches the band (to DAB1/2/3).
- 4 Selects a service.
- 5 Selects the Ensemble.
- 6 Switches the Seek mode.
(see page 46 for the <Seek Mode>)



- For system key operations, see <KVT-827DVD Basic Operations> (page 10).
- The Easy Control Panel is hidden when you touch a central area of the monitor.

Displaying the DAB Tuner Control screen


You can select the Ensemble and services using various functions.



DAB Tuner Control screen



- 7 Adjusts the volume.
- 8 Calls the DAB Tuner Menu.
- 9 Calls the Sound Effects Menu. (page 82)
- 10 Displays the Source Select screen. (page 51)
- 11 Calls the Setup Menu. (page 53)
- 12 Switches the band (to DAB1/2/3).
- 13 Selects a service.
- 14 Selects the Ensemble.
- 15 Switches between **1** to **6** buttons and Function button to use.
- 16 Selects the primary or secondary operation.
- 17 Selects the Auto Memory mode.
(See page 46 for the <Auto Ensemble Memory>)
- 18 Switches the Seek mode.
(see page 46 for the <Seek Mode>)
- 19 Changes the display between Ensemble label, PTY label, Component label, Region label, and Audio quality.

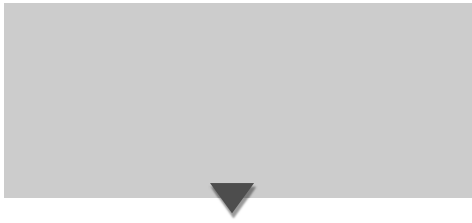


- 20 When **1** to **6** buttons appear, you can recall a service on memory.
- 21 Indicates current Seek mode.
- 22 **Clock Display**
When touched, the display of Clock 1, Clock 2, and Clock 3 are switched one after the other.

Displaying the DAB Tuner Menu screen

You can select menu options using various functions.



DAB Tuner Menu screen

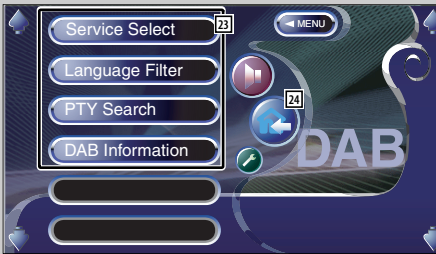

23 Selects option from various function menus.

24 Returns to the DAB Tuner Control screen.



- For DAB Tuner function details, see the Instruction Manual of DAB Tuner (optional accessory).


Seek Mode

A service selection method can be set.



If **SEEK** is not shown, touch **Next**.

The mode is switched in following order each time you touch the button.

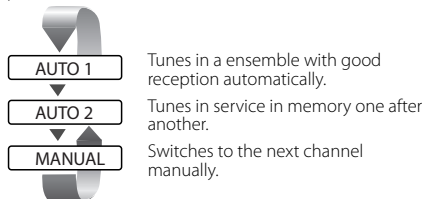

Service Preset Memory

The current receiving service is stored in memory.

1 Select a service you wish to store in memory



2 Store in memory



If **1** to **6** are not shown, touch **Next**.
Continue to touch until the memory number appears.

Auto Ensemble Memory

An ensemble with good reception is stored in memory automatically.

1 Select a band you wish to store in memory



2 Select the Auto Memory mode



If **AME** is not shown, touch **Next**.

3 Start Auto Memory



Touch **<<<** or **>>>**.

Auto Memory terminates when 6 stations are stored or when all stations are tuned in.


Service Select

The service list of the currently receiving ensemble is displayed for your selection.

1 Call the DAB Tuner Menu



2 Call the Service Select Menu

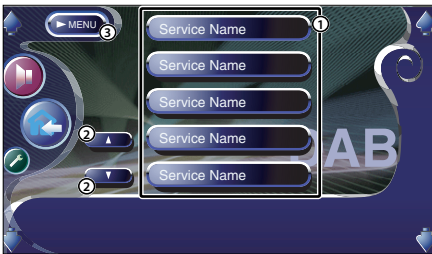

- ① Selects a service.
- ② Scrolls the service list.
- ③ Returns to the DAB Tuner Menu.

3 Select a service



Language Filter

The languages are list for your selection.

1 Call the DAB Tuner Menu



2 Call the Language Filter Menu



- ① Selects a language.
- ② Searches for the selected language.
- ③ Returns to the DAB Tuner Menu.

3 Select a language you wish to use



4 Search for the language



Search for Program Type

The services are received when you set its program type.

1 Call the DAB Tuner Menu



2 Call the PTY Search Menu



- ① Selects a program type.
- ② Searches for the program type.
- ③ Displays the Language select screen.
- ④ Returns to the DAB Tuner Menu.

3 Select a program type



Select a Language

1. Display the Language select screen



- ① Selects a Language.
- ② Searches for the program type.
- ③ Returns to the PTY Search Menu.

2. Select a Language



4 Search for the program type




DAB Information

The DAB information is displayed.

1 Call the DAB Tuner Menu



2 Display the DAB Information screen

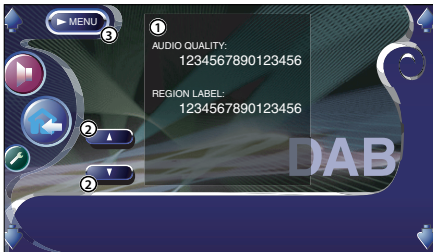

- ① Displays the DAB information (such as Service label, Ensemble label, Component label, Audio quality, Region label, and Dynamic label).
- ② Scrolls the information display.
- ③ Returns to the DAB Tuner Menu.

DAB Announcement

When the Announcement you have turned on starts, any source is switched to the Announcement automatically.

When the announcement starts...

The Announcement screen appears automatically.

Announcement screen



- ① Adjusts the volume.
- ② Calls the Sound Effects Menu. (page 82)
- ③ Calls the Setup Menu. (page 53)

How To Use the Character Entry screen

When you select the Set Disc Name mode or others, the following screen appears for character entry.

Character Entry screen



- 1 Shifts the cursor.
- 2 Enters a space.
If you erase a character, locate the cursor on it and touch this button.
- 3 Enters characters.
- 4 Scrolls up or down the character button display.
- 5 Exits the Character Entry mode and returns to the previous screen.



- You can enter characters only after you have applied the parking brake.

Source Select

The source you wish to listen to can be selected quickly.

Displaying the Control screen



Press this key several times until the Control screen appears.

Control screen



- The Source Select screen can be displayed from the control screen of any source

Displaying the Source Select screen



Source Select screen



- 1 Adjusts the volume.
- 2 Select the source.
- 3 Returns to the Control screen previously displayed.
- 4 Calls the Sound Effects Menu. (page 82)
- 5 Calls the Setup Menu. (page 53)

Adjusting the Monitor Display Position and Quality


You can adjust the position and picture quality of the monitor.

Displaying the Screen Control screen

You can adjust the picture quality using the following keys.



Screen Control screen

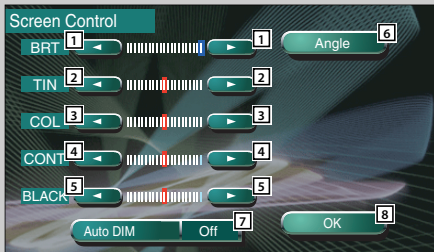

- 1 **Brightness Control**
Disabled if the Auto Dimmer is On.
- 2 **Tint Control**
Displayed for an NTSC system image on TV or Video.
- 3 **Color Control**
Displayed on the TV and Video screen only.
- 4 **Contrast Control**
- 5 **Black Level Adjustment**
- 6 Displays the Adjust Monitor Position screen. (see <Displaying the Angle Control screen>, page 52)
- 7 **Auto Dimmer Setup**
When turned "On", the display is dimmed automatically when the ambient becomes dark.
- 8 Returns to the previous screen.



- The Screen Control screen is displayed only when you have applied the parking brake.
- The picture quality can be set for each source.


Displaying the Angle Control screen

You can set the monitor position and open/close speed.



Angle

Angle Control screen

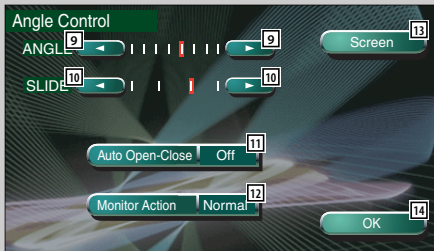

- 9 **Monitor Angle Adjustment**
- 10 **Forward/Backward Monitor Position Adjustment**
- 11 **Monitor Open/Close Setup**
When turned "On", the monitor is opened or closed automatically when you turn on or off the ignition key.
- 12 **Monitor Action Setup**
When set to "Quick", the monitor is opened quickly.
- 13 Returns to the Screen Control screen.
- 14 Returns to the previous screen.

Setup Menu

Setup Menu

You can set up various receiver parameters.

Displaying the Control screen



Press this key several times until the Control screen appears.

Control screen



- You can call the same Setup Menu for the Control screen of each source.

Displaying the Setup Menu screen



Setup Menu screen



- 1 Adjusts the volume.
- 2 Scrolls the Setup Menu.
- 3 Calls each Setup Menu.
- 4 Calls the Sound Effects Menu. (page 82)
- 5 Returns to the Control screen of the previous source.



- Your setup on the Sound Effects menu is adjusted automatically according to your <Audio Set Up> (page 54) on the Setup menu. We recommend you to complete the <Audio Set Up> first, then set up the <Sound Effects menu>.
- The available functions vary depending on the model used (the tuner specifications and the broadcasting system that can be received).

Audio Set Up (Other than STANDBY mode)

You can set up the car type and speaker system you use together with this unit.

Displaying the Car Type Set Up screen

If your car type is selected, the Digital Time Alignment and Equalizer is set automatically (for timing adjustment of sound output for each channel) to have the highest surround effects.



Audio Set Up

Car Type Set Up screen



- 1 Adjusts the volume.
- 2 Returns to the Control screen of the previous source.
- 3 Calls the Sound Effects Menu. (page 82)
- 4 Calls the Setup Menu.
- 5 Sets up the car type you use together with this unit. You can choose according to type of your car. "Compact", "Sedan", "Wagon1", "Wagon2", "Minivan1", "Minivan2", "SUV", "Passenger Van", "Off"
- 6 Displays the DTA (Digital Time Alignment) Setup screen. (page 58) You can adjust the digital time alignment that was set automatically when you selected the car type.
- 7 Displays the Speaker Set Up screen.



- If **Audio Set Up** is not shown, touch **Prev.** or **Next** to display it.

Displaying the Speaker Set Up screen

When the speaker type and size are set, the speaker crossover network and equalizer curve are set automatically.



Speaker Set Up screen



- 8 Selects a speaker to be set. (see <Speaker Set Up>, page 56)
- 9 Selects a speaker type. (see <Speaker Set Up>, page 56)
- 10 Displays the Speaker Crossover Setup screen. (See <Crossover Network Setup>, page 59) You can adjust the crossover setup that was set automatically when you selected the speaker type.
- 11 Sets the use or no use of tweeter. (see <Speaker Set Up>, page 56)
- 12 Displays the Channel Level Setup screen.
- 13 Displays the Car Type Set Up screen.




- Your setup on the <Sound Effects Menu> is adjusted automatically to get the best sound effects according to the car type and speaker you have set on the <Audio Set Up> (page 54). We recommend you to complete the <Audio Set Up> first, then set up the <Sound Effects Menu>. You can fine-adjust the automatic set value by <DTA Setup> (page 58) or <Parametric Equalizer> (page 85).

Displaying the Channel Level screen

You can set the volume at each setup position.



Channel Level screen

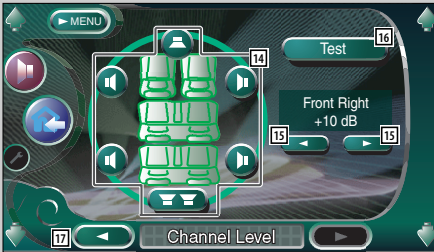

- 14 Selects a speaker to be set.
(see <Channel Level>, page 57)
- 15 Sets the speaker volume.
(see <Channel Level>, page 57)
- 16 Starts or stops test signal tone output for setup check.
- 17 Displays the Speaker Set Up screen.

Speaker Set Up

You can select a speaker type and its size to get the best sound effects.

1 Select a speaker you wish to adjust



(Page 54 )

Speaker Set Up screen



- ① Center speaker
- ② Front speaker
- ③ Rear speaker
- ④ Subwoofer
- ⑤ Tweeter setup

You can set the tweeter when you are selecting front speakers.

If you are using a tweeter together with the front speakers, set the tweeter to "Use". In the "Use" position, the Equalizer is adjusted to its best position.

2 Select a speaker type



You can select any of the following speaker types.

Center speaker:

NONE, 40mm x 70mm, 5cm, 10cm, 13cm, 16 cm over

Front speakers:

OEM, 10cm, 13cm, 16cm, 17cm, 18cm, 4x6 inches, 5x7 inches, 6x8 inches, 6x9 inches, 7x10 inches

Rear speakers:

NONE, OEM, 10cm, 13cm, 16cm, 17cm, 18cm, 4x6inches, 5x7inches, 6x8 inches, 6x9 inches, 7x10 inches

Subwoofer:

NONE, 16cm, 20cm, 25cm, 30cm, 38cm over



- Select "NONE" if you have no speakers.
- If you set the center speaker to "NONE" even in a short time when you are setting the Surround Control (page 86) to "Bypass+Center", the Surround Control is set to "Bypass" automatically.
- If you set the center and rear speakers to "NONE" when you are setting the Surround Control (page 86) to "Dolby PLII", the Surround Control is set to "Bypass" automatically.
- If you set the rear speakers to "NONE" when you are setting the Surround Control (page 86) to "SRS CS II", the Surround Control is set to "Bypass" automatically.

Channel Level


You can set the volume at each setup position.

1 Select a speaker you wish to adjust



(Page 55 [14])

Channel Level setup screen

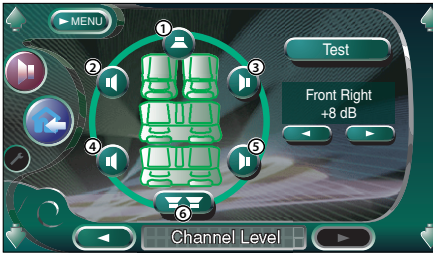

- ① Center speaker
- ② Left front speaker
- ③ Right front speaker
- ④ Left rear speaker
- ⑤ Right rear speaker
- ⑥ Subwoofer

2 Adjust the volume



DTA Setup


Manually sets the sound output timing of each channel.

1 Display the DTA Setup screen




DTA (Page 54) [6]

DTA Setup screen

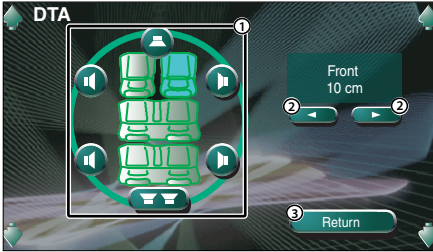

- ① Selects a speaker to be adjusted.
- ② Sets a delay time of the selected speaker.
- ③ Returns to the Car Type Set Up screen.

2 Select a speaker you wish to adjust

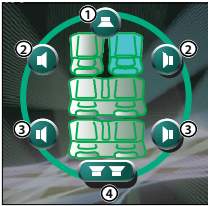

- ① Center speaker
- ② Front speaker
- ③ Rear speaker
- ④ Subwoofer

3 Set a delay time



The speakers are virtually moved to the desired distance.


When the values of center speaker and front speakers increase, they are virtually moved forward. When the values of rear speakers and subwoofer increase, they are virtually moved backward.

Crossover Network Setup

You can manually set a crossover frequency of speakers.



X'Over (Page 54 [10](#))

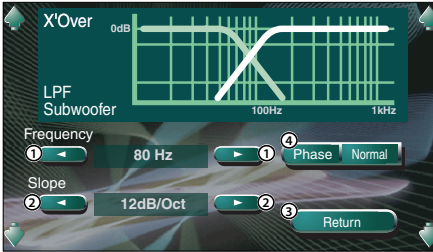

- ① Sets a crossover frequency.
- ② Sets a crossover slope.
- ③ Returns to the Speaker Set Up screen.
- ④ Sets the phase of subwoofer output (it is displayed when the subwoofer crossover frequency is set).
The phase is reversed 180 degrees when set to "Reverse".



- When you select a speaker type on the Speaker Setup screen, the crossover frequency setup is cleared.
- During crossover setup, the speaker type is set to "User" on the Speaker Set Up screen.

DVD Setup

You can set up the DVD play.

Displaying the DVD SETUP 1 screen



DVD SETUP

DVD SETUP 1 screen



- 1 Adjusts the volume.
- 2 Returns to the Control screen of the previous source.

3 Calls the Sound Effects Menu. (page 82)

4 Calls the Setup Menu.

5 Selects a disc menu language.*¹
(See <Language Setup>, page 62)

6 Selects a subtitle language.*¹
(See <Language Setup>, page 62)

7 Selects an audio language.*¹
(See <Language Setup>, page 62)

8 Sets the dynamic range. (Wide)

The dynamic range is reduced by changing from "Wide" to "Normal" and from "Normal" to "Midnight". You can easily listen to a small sound when the dynamic range is narrow.

This is effective only when you are using Dolby Digital software.

9 Displays the DVD SETUP 2 screen.




- If **DVD SETUP** is not shown, touch **Prev** or **Next** to display it.
- *¹ Disabled when a DVD is being played.

Displaying the DVD SETUP 2 screen



DVD SETUP 2 screen

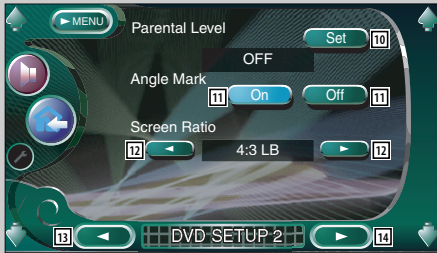

- [10] Displays the Parental Lock screen.*1 (OFF)
(See <Parental Level Setup>, page 63)
- [11] Sets an angle mark display. (On)
- [12] Selects the screen display mode.*1 (16:9)
"16:9": Displays wide pictures.
"4:3 (LB)": Displays wide pictures in the Letter Box format (having black stripes at the top and bottom of screen).
"4:3 (PS)": Displays wide pictures in the Pan & Scan format (showing pictures cut at the right and left ends).
- [13] Displays the DVD SETUP 1 screen.
- [14] Displays the DVD SETUP 3 screen.




- *1 Disabled when a DVD is being played.

Displaying the DVD SETUP 3 screen



DVD SETUP 3 screen

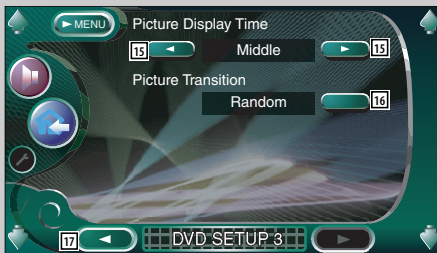

- [15] Selects the picture display time.*1 (Middle)
The Display of a JPEG picture is changed.
"Short", "Middle", "Long"
- [16] Selects the Picture Effect.*1 (Random)
- [17] Displays the DVD SETUP 2 screen.



- *1 Disabled when a DVD is being played.

Language Setup

Selects a language you use for the speech and menus.

1 Display the Language Setup screen

See <Displaying the DVD SETUP 1 screen> (page 60) and select a language you wish to use.



- ① Enters a language code.
- ② Cancels the language setup and returns to the DVD SETUP 1 screen.
- ③ Clears the language code.
- ④ Sets the original audio language. (It appears during audio language setup.)
- ⑤ Sets the language and returns to the DVD SETUP 1 screen. (It appears after you have entered a language code.)

2 Enter a language code

See the Language Code Table shown at right to select the desired language.

3 Set the language you use



Abbreviation	Language	Abbreviation	Language
aa	Afar	lv	Latvian, Lettish
ab	Abkhazian	mg	Malagasy
af	Afrikaans	mi	Maori
am	Amharic	mk	Macedonian
ar	Arabic	ml	Malayalam
as	Assamese	mn	Mongolian
ay	Aymara	mo	Moldavian
az	Azerbaijani	mr	Marathi
ba	Bashkir	ms	Malay
be	Byelorussian	mt	Maltese
bg	Bulgarian	my	Burmese
bh	Bihari	na	Nauru
bi	Bislama	ne	Nepali
bn	Bengali, Bangla	nl	Dutch
bo	Tibetan	no	Norwegian
br	Breton	oc	Occitan
ca	Catalan	om	(Afan) Oromo
co	Corsican	or	Oriya
cs	Czech	pa	Punjabi
cy	Welsh	pl	Polish
da	Danish	ps	Pashto, Pushto
de	German	pt	Portuguese
dz	Bhutani	qu	Quechua
el	Greek	rm	Rhaeto-Romance
en	English	rn	Kirundi
eo	Esperanto	ro	Romanian
es	Spanish	ru	Russian
et	Estonian	rw	Kinyarwanda
eu	Basque	sa	Sanskrit
fa	Persian	sd	Sindhi
fi	Finnish	sg	Sango
fj	Fiji	sh	Serbo-Croatian
fo	Faroese	si	Singhalese
fr	French	sk	Slovak
fy	Frisian	sl	Slovenian
ga	Irish	sm	Samoan
gd	Scots Gaelic	sn	Shona
gl	Galician	so	Somali
gn	Guarani	sq	Albanian
gu	Gujarati	sr	Serbian
ha	Hausa	ss	Siswati
he	Hebrew	st	Sesotho
hi	Hindi	su	Sundanese
hr	Croatian	sv	Swedish
hu	Hungarian	sw	Swahili
hy	Armenian	ta	Tamil
ia	Interlingua	te	Telugu
ie	Interlingue	tg	Tajik
ik	Inupiak	th	Thai
id	Indonesian	ti	Tigrinya
is	Icelandic	tk	Turkmen
it	Italian	tl	Tagalog
ja	Japanese	tn	Setswana
jv	Javanese	to	Tongan
ka	Georgian	tr	Turkish
kk	Kazakh	ts	Tsonga
kl	Greenlandic	tt	Tatar
km	Cambodian	tw	Twi
kn	Kannada	uk	Ukrainian
ko	Korean	ur	Urdu
ks	Kashmiri	uz	Uzbek
ku	Kurdish	vi	Vietnamese
ky	Kirghiz	vo	Volapuk
la	Latin	wo	Wolof
lb	Luxembourgish	xh	Xhosa
ln	Lingala	yo	Yoruba
lo	Laotian	zh	Chinese
lt	Lithuanian	zu	Zulu

Parental Level Setup

Sets a parental level.

1 Display the Parental Level code number screen




- ① Enters a code number.
- ② Cancels the current setup and returns to the DVD SETUP 2 screen.
- ③ Clears the code number.
- ④ Indicates the present parental lock level.
- ⑤ Determines the code number and displays the Parental Level Setup screen.

2 Enter the code number



- The number you enter first is set as your code number.
- You can clear the code number by pressing the Reset button.

3 Display the Parental Level Setup screen

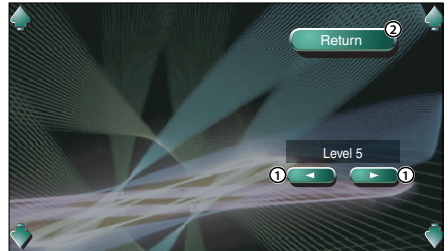

- ① Sets a parental level.
- ② Returns to the DVD SETUP 2 screen.

4 Set a parental level



5 Complete the parental level setup




- If a disc has a higher parental lock level, the audience needs to enter the code number.
- The parental lock level varies depending on a loaded disc.
- If a disc has no parental lock, any audience can play it back even when you have set the parental lock.

System Setup

You can set up the system parameters.

Displaying the System 1 screen

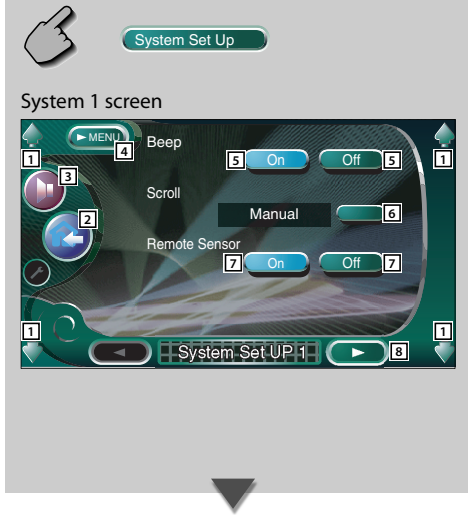

- 1 Adjusts the volume.
- 2 Returns to the Control screen of the previous source.
- 3 Calls the Sound Effects Menu. (page 82)
- 4 Calls the Setup Menu.
- 5 Turns the key touch tone On or Off. (☑ On)
- 6 Allows scrolling of text display on the Source Control screen. (☑ Manual)
"Auto": Scrolls the screen automatically.
"Manual": Allows you to scroll the screen manually.
- 7 Selects a remote control signal. (☑ On)
When turned "Off", the remote control of TV reception is rejected.
- 8 Displays the System Set Up 2 screen.



- If **System Set Up** is not shown, touch **Prev.** or **Next** to display it.

Displaying the System 2 screen



System 2 screen



- 9 Set a music CD playback. (🔍 1)

"1": Automatically recognizes and plays back an MP3/WMA disc, a DVD or a music CD.

"2": Forcibly plays back a disc as a music CD.

Select "2" if you wish to play a music CD having a special format or if you cannot play a disc in the "1" position.



- You cannot play an MP3/WMA/VCD disc in the "2" position. Also, you may not play some music CDs in the "2" position.
- Your setup is disabled when the disc is being played.

- 10 Selects an illumination color of receiver keys.

(🔍 Red)

"Green": Green

"Red": Red

- 11 Selects an illumination color of the Small Display.

(🔍 Blue)

"Blue": A blue color display

"Key Sync": The same color as the this unit button illumination color

- 12 Displays the System Set Up 1 screen.

AV Interface


You can set audio and visual (AV) interface parameters.

Displaying the AV I/F 1 screen



AV Interface

AV I/F 1 screen

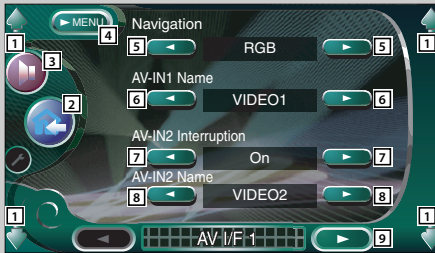

- 1 Adjusts the volume.
- 2 Returns to the Control screen of the previous source.
- 3 Calls the Sound Effects Menu. (page 82)
- 4 Calls the Setup Menu.
- 5 Selects a navigation system connection. (📁 RGB)
"RGB": Allows the Kenwood's Navigation System to connect via its interface cable.
"AV-IN1": Allows a third-party navigation system to connect via the AV INPUT1 port.
"Off": Must be used if no navigation system is connected. (The navigation display is cancelled when the AV source is switched.)
- 6 Sets a name to be displayed when you select a system that is connected via the AV INPUT1 port. (📁 VIDEO1)



- If you have set the navigation system connection to "AV IN1", the display is fixed to "NAV".

- 7 Sets an image display of the system that is connected via the AV INPUT2 port. (📁 Off)
"Off": When the image source is switched, an image entered via the AV INPUT2 port is displayed.
"On": When an image signal is entered via the AV INPUT2 port, this image is displayed.
- 8 Sets a name to be displayed when you select an image of the system that is connected via the AV INPUT2 port. (📁 VIDEO2)
- 9 Displays the AV I/F 2 screen.




- If **AV Interface** is not shown, touch **Prev.** or **Next** to display it.

Displaying the AV I/F 2 screen



AV I/F 2 screen

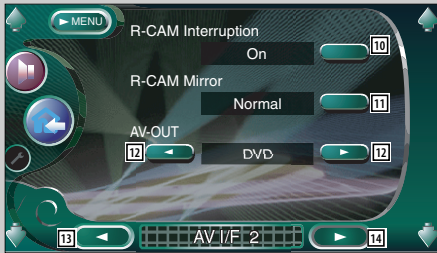

- 10 Sets a method to switch to the rear view camera video display. (🔍 Off)
 "On": Switches to the rear view camera video display when engaging the shift knob of car to "Reverse".
 "Off": Switches to the the rear view camera video display when engaging the shift knob of car to "Reverse" and then pressing the [V.SEL] switch several times.
- 11 You can flip the left and right of the rear view camera video display. Set to "Reverse" and the the rear view will be displayed left and right in mirror image on the screen. (🔍 Normal)
- 12 Selects an AV source to be output at the AV OUTPUT port. (🔍 AV-IN1)
- 13 Displays the AV I/F 1 screen.
- 14 Displays the AV I/F 3 screen.

Displaying the AV I/F 3 screen



AV I/F 3 screen




- 15 Selects speakers used for voice guidance of the navigation system. (🔍 Left)
 "Left": Uses the front left side speaker for voice guidance.
 "Right": Uses the front right side speaker for voice guidance.
 "Front All": Uses both front speakers for voice guidance.
- 16 Adjusts the volume for voice guidance of the navigation system. (🔍 19)
- 17 Mutes the volume during voice guidance of the navigation system. (🔍 On)
 When turned "On", the volume level drops for voice guidance.
- 18 Sets a selecting method of audio source from the Navigation system. (🔍 Off)
 "On": Allows you to select the audio source input from the Navigation system interface by pressing [SRC] or selecting it on Source Select screen.
 "Off": The audio source cannot be selected using [SRC] or on Source Select screen.
- 19 Displays the AV I/F 2 screen.

User Interface

You can set up user interface (IF) parameters.

Displaying the User I/F 1 screen

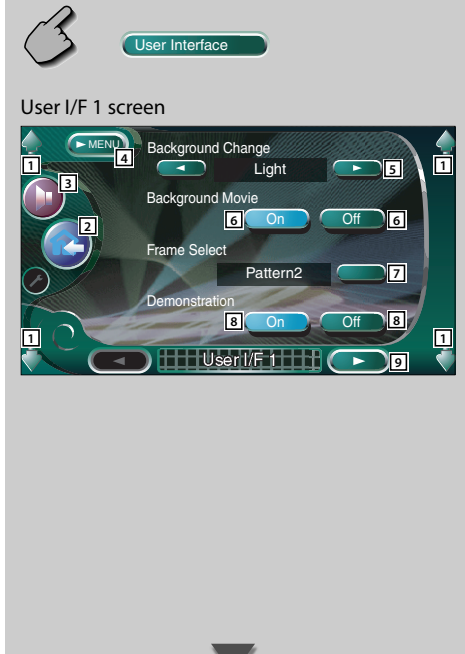


- 1 Adjusts the volume.
- 2 Returns to the Control screen of the previous source.
- 3 Calls the Sound Effects Menu. (page 82)
- 4 Calls the Setup Menu.
- 5 Switches the wall paper. (Light)
- 6 Turns the background motion picture of the Source Control screen On or Off. (On)
- 7 Selects a frame pattern. (Pattern1)
You can select "Pattern1" or "Pattern2".
- 8 Turns the screen saver On or Off on the Source Control screen. (On)
If you turn it On and if you do not operate within one minute on the Control screen of the selected source, the screen saver starts.
The screen saver is canceled when the screen is touched.
- 9 Displays the User I/F 2 screen.



- If **User Interface** is not shown, touch **Prev.** or **Next** to display it.

Displaying the User I/F 2 screen

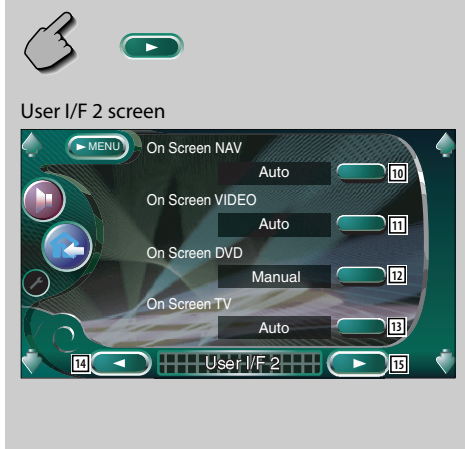

- 10 Sets an on-screen display of the navigation screen. (Auto)
"Auto": Information is displayed for 5 seconds when updated.
"Off": Information is not displayed.
- 11 Sets an on-screen display of the video playback screen. (Auto)
"Auto": Information is displayed for 5 seconds when updated.
"Manual": Information is displayed when you touch on the screen.
- 12 Sets an on-screen display of the DVD playback screen. (Manual)
"Auto": Information is displayed for 5 seconds when updated.
"Manual": Information is displayed when you touch on the screen.



Displaying the User I/F 3 screen



User I/F 3 screen



- 13** Sets an on-screen display of the TV screen.
 Auto (when the optional accessory TV tuner is connected only)
 "Auto": Information is displayed for 5 seconds when updated.
 "Manual": Information is displayed when you touch on the screen.

14 Displays the User I/F 1 screen.

15 Displays the User I/F 3 screen.

16 Turns the information display On or Off when a button is touched on the Source Control screen.
 On

17 Sets a point display when you touch the screen.
 Pattern1

You can select "Pattern1", "Pattern2" or "Off".




18 Displays the User I/F 2 screen.


Touch Panel Adjustment

You can adjust the touch panel operations.

1 Display the Touch Panel Adjust screen




If  is not shown, touch  or  to display it.

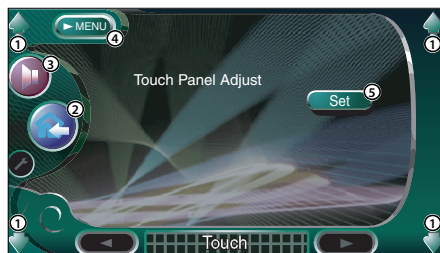

- ① Adjusts the volume.
- ② Returns to the Control screen of the previous source.
- ③ Calls the Sound Effects Menu. (page 82)
- ④ Calls the Setup Menu.
- ⑤ Allows you to start touch panel adjustment.

2 Start to adjust the touch panel

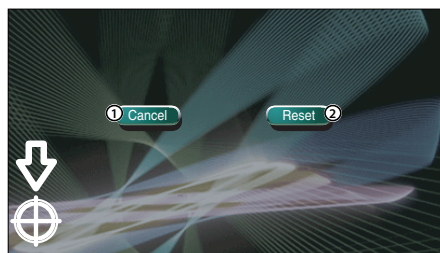

- ① Cancels the adjustment and returns to the Touch Panel Adjust screen.
- ② Resets to the initial status.

3 Adjust the positions



Touch the center of left lower and right upper  when requested.


Clock

You can adjust the clock time.

1 Display the Clock screen



If **Clock** is not shown, touch **▲ Prev** or **▼ Next** to display it.

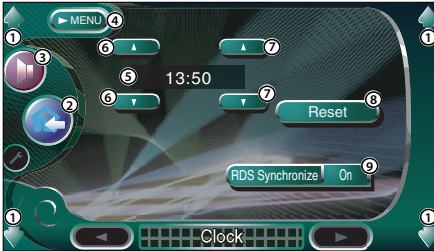

- ① Adjusts the volume.
- ② Returns to the Control screen of the previous source.
- ③ Calls the Sound Effects Menu. (page 82)
- ④ Calls the Setup Menu.
- ⑤ Clock time display.
- ⑥ Adjusts hours.
- ⑦ Adjusts minutes.
- ⑧ Sets "00" minute.
Setup examples: 3:00~3:29 → 3:00
3:30~3:59 → 4:00
- ⑨ Sets the clock time in synchronization with the time data sent from the RDS station. (📄 On)
When turned "On", the synchronized mode starts and the clock cannot be adjusted manually.

2 Adjust the clock time



Security Code Setup

You can set a security code to protect your receiver system against theft.




- When the Security Code function is activated it cannot be released.
Note, your Security Code is the 4 digit number entered in your "Car Audio Passport" in this package.

1 Display the Security Code Setup screen



Security

If Security is not shown, touch **Prev** or **Next** to display it.

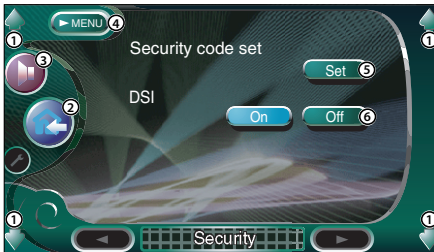

- ① Adjusts the volume.
- ② Returns to the Control screen of the previous source.
- ③ Calls the Sound Effects Menu. (page 82)
- ④ Calls the Setup Menu.
- ⑤ Allows you to start security code registration.
- ⑥ Turns the DSI function on or off.
If turned "On", the burglar alarm lamp flashes when the protection panel is removed. (On)



- If you have already completed the code registration, **Set** is not available.

2 Start the security code registration



Set



- ① Enters the numbers to your security code.
- ② Clears your entry.
- ③ Cancels the registration and returns to the Security Code Setup screen.
- ④ Registers your security code.

3 Enter a security code



0 — 9

Input a four-digit number.

4 Register your security code



Enter

5 Reenter the security code

Reenter the same security code as that you have entered in Step 3 for confirmation.



- If you enter a different security code, the screen returns to Step 3 (for the first code entry).

6 Register the security code again



Enter

Now, your security code is registered. If you press the Reset button or if you disconnect your receiver from the battery after the code registration, you need to enter the registered security code.
See below for details.

If you have pressed the Reset button or if you have disconnected the Receiver from battery...

1 Enter the correct security code



You must enter the same security code as that you have entered in Step 3 above.

2 Enter the security code



Now, you can use your Receiver.



- If you enter an incorrect security code, you cannot use your Receiver for a while.

Incorrect entry count	Receiver inoperable time
1	–
2	5 minutes
3	1 hour
4 or more	24 hours


Set Up Memory

Audio Set Up and AV Interface settings can be memorized. The memorized settings can be recalled at any time. For example, even when the settings are cleared due to replacement of the battery, the settings can be restored.

1 Display the Set Up Memory screen




If **Set Up Memory** is not shown, touch **▲ Prev.** or **▼ Next** to display it.

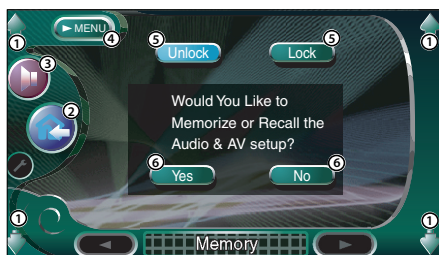

- ① Adjusts the volume.
- ② Returns to the Control screen of the previous source.
- ③ Calls the Sound Effects Menu. (page 82)
- ④ Calls the Setup Menu.
- ⑤ Locks the Audio Set Up and AV Interface settings. When **Lock** is selected, you cannot set the Audio Set Up and AV Interface settings.
- ⑥ Memorizes or recalls the settings. To cancel the function, touch **No**. To cancel memorization, touch **No**. The Setup Menu screen appears again.

2 Display the Memory screen

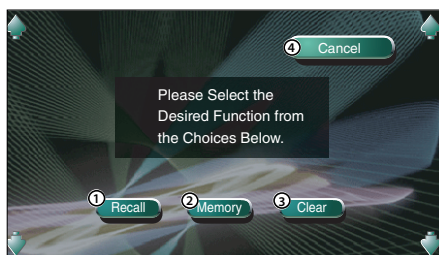

- ① Recalls the memorized settings.
- ② Memorizes the current Audio Set Up and AV Interface settings.
- ③ Clears the currently memorized settings.
- ④ Returns to Set Up Memory screen.

3 Memorize or recall the settings When memorizing the Audio Set Up and AV Interface settings:



If settings have already been memorized, a confirmation message appears. Touch **Yes**. To cancel memorization, touch **No**.

When recalling the memorized settings:



Touching the screen displays a confirmation message. Touch **Yes**. To cancel recalling, touch **No**.

When clearing the currently memorized settings:



Touching the screen displays a confirmation message. Touch **Yes**. To cancel clearing, touch **No**.

4 Quit memorization/recalling of settings



- When the settings have already been memorized, it will be cleared if you set up memory function without connecting a monitor and a receiver unit.

TV Setup

The TV signal receiving areas can be set. (with the optional accessory TV Tuner connected only)

Displaying the TV1 Area Set Up screen



TV Set Up

TV1 Area Set screen



- 1 Adjusts the volume.
- 2 Returns to the Control screen of the previous source.
- 3 Calls the Sound Effects Menu. (page 82)
- 4 Calls the Setup Menu.
- 5 Sets the present TV1 receiving area.
- 6 Displays the TV2 Area Set Up screen.



- If **TV Set Up** is not shown, touch **Prev.** or **Next** to display it.

Displaying the TV2 Area Set Up screen



TV2 Area Set screen




- 7 Sets the present TV2 receiving area.
- 8 Displays the TV1 Area Set Up screen.

RDS Setup

The related RDS parameters can be set.

Displaying the RDS Set Up1 screen

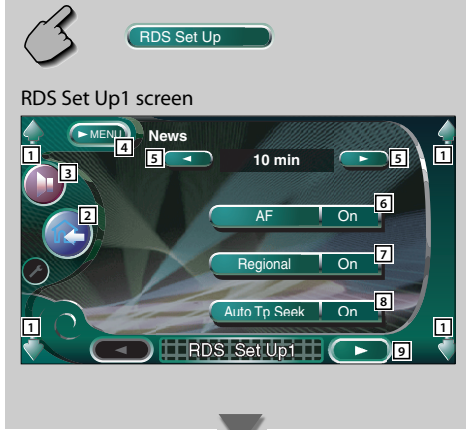

- 1 Adjusts the volume.
- 2 Returns to the Control screen of the previous source.
- 3 Calls the Sound Effects Menu. (page 82)
- 4 Calls the Setup Menu.
- 5 Sets a news bulletin interrupt time.
- 6 Turns the Alternative Frequency function On or Off. (On)
- 7 Turns the Region Restriction function On or Off. (On)
- 8 Turns the Auto TP Seek function On or Off. (On)
- 9 Displays the RDS Set Up2 screen.



- If **RDS Set Up** is not shown, touch **Prev** or **Next** to display it.

Displaying the RDS Set Up2 screen




- 10 Selects a display language for the PTY function.
- 11 Displays the RDS Set Up1 screen.

DAB Set Up

You can set the DAB reception. (only with the optional accessory DAB Tuner connected)

Displaying the DAB Set Up screen

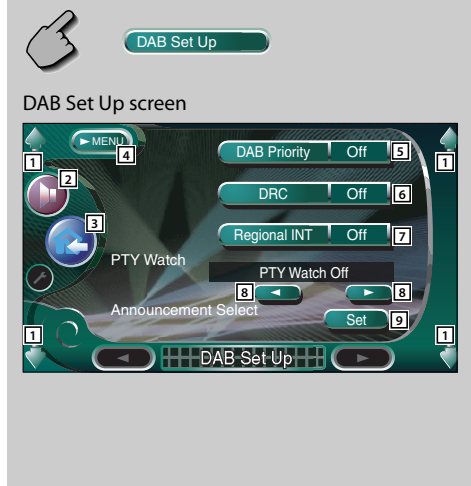

- 1 Adjusts the volume.
- 2 Calls the Sound Effects Menu. (page 82)
- 3 Returns to the Control screen of the previous source.
- 4 Calls the Setup Menu.
- 5 Turns the DAB Priority On or Off.
- 6 Turns the Dynamic Range Control function On or Off.
- 7 Turns the Regional Announcement function On or Off.
- 8 Sets a program type to be selected automatically when the receiving ensemble starts.
- 9 Displays the Announcement Selection screen. (page 79)



- If **DAB Set Up** is not shown, touch **▲ Prev.** or **▼ Next** to display it.

Announcement Selection


You can set various announcement reception parameters.

1 Displays the Announcement Selection screen



- ① Adjusts the volume.
- ② Turns the Announcement Reception function On or Off.
- ③ Enters the setup and returns to the DAB Set Up screen.

2 Set the announcement parameters

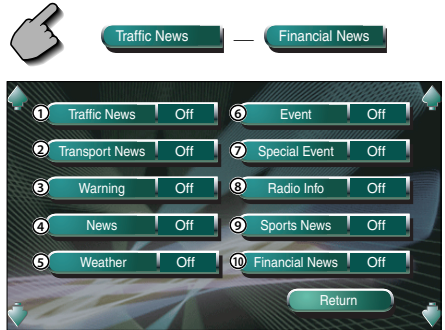

- ① Traffic information
- ② Time table information of public transportation services
- ③ Lower priority items than alarms (power failure, cutoff of water supply and others)
- ④ News flash
- ⑤ Weather forecasting
- ⑥ Event information
- ⑦ Undetermined event information
- ⑧ Programme information, advance notice
- ⑨ Sports News
- ⑩ Financial News

3 Terminate the setup



AMP Control


Sets the power amp connected via the LX bus. (with the optional accessory LX Power Amp connected only)

Displaying the AMP Control screen



AMP Control

AMP Control screen

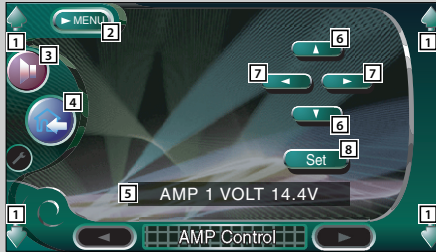

- 1 Adjusts the volume.
- 2 Calls the Setup Menu.
- 3 Calls the Sound Effects Menu. (page 82)
- 4 Returns to the Control screen of the previous source.
- 5 **Setup option and value display**
- 6 Selects a setup option.
- 7 Selects a set value.
- 8 Enters the set value.



- If **AMP Control** is not shown, touch **Prev** or **Next** to display it.
- For the model name of amp you can control from the system, see the amp's catalog.
- For the options and values you can change and for the amp's operation when changed, see the amp's instruction manual.

Muting Audio Volume upon Reception of Phone call

Muting Audio Volume upon Reception of Phone call

When the telephone is called, the system is paused automatically.

When the telephone is called...

The Phone Call ("CALL") screen appears, and system is paused.

Phone Call ("CALL") screen



If you want to continue to listen to the audio source during phone call...



The system resumes audio play during the phone call.

When the call ends...

Hang up the phone.

The system resumes playing automatically.

Sound Effects Menu

Sound Effects Menu

You can set up the receiver sound effects.

Displaying the Control screen



Control screen



- You can display the same Sound Effects Menu on the Control screen of any source.

Displaying the Sound Effects Menu screen



Sound Effects screen



- 1 Adjusts the volume.
- 2 Calls the Sound Effects Menu.
- 3 Calls the Setup Menu. (page 53)
- 4 Returns to the Control screen of the previous source.



- Your setup on the <Sound Effects Menu> is adjusted automatically according to your <Audio Set Up> (page 54) on the Setup menu. We recommend you to complete the <Audio Set Up> first, then set up the <Sound Effects Menu>.

Audio Control

You can adjust the front and rear and right and left audio balance.

Displaying the Audio Control screen



- 1 Adjusts the volume.
- 2 Returns to the Control screen of the previous source.
- 3 Calls the Setup Menu. (page 53)
- 4 Calls the Sound Effects Menu.
- 5 Adjusts the right and left volume balance.
- 6 Adjusts the front and rear volume balance.
- 7 Adjusts the volume of the present source based on the difference level of original volume.
- 8 Adjusts the subwoofer volume.



- If you have increased the volume first, then reduced the volume using the "Vol. Offset", the sound generated if you suddenly switch to another source may be extremely loud.

Equalizer


You can set up the equalizer.

Displaying the Equalizer screen



Equalizer

Equalizer screen

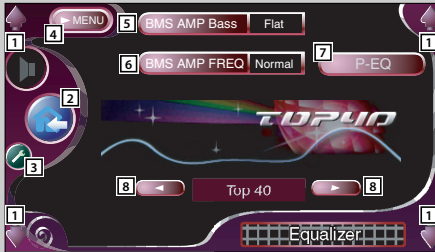

- 1 Adjusts the volume.
- 2 Returns to the Control screen of the previous source.
- 3 Calls the Setup Menu. (page 53)
- 4 Calls the Sound Effects Menu.
- 5 Adjusts the bass boost of the B.M.S power amplifier (optional accessory).



- You may not set some models of power amp boost to "+18". See the catalog or instruction manual of power amplifier.

- 6 Sets the center frequency of bass boost you have set for "AMP Bass". (optional accessory)
If you set the center frequency to "Low", it will be dropped approximately 20% to 30%.
- 7 Displays the Parametric Equalizer screen. (page 85)
You can adjust the value set for the Equalizer Curve Type.
- 8 Selects an equalizer curve type.
You can select any of the following equalizer curves.
 - "Natural"
 - "Rock"
 - "Pops"
 - "Easy"
 - "Top40"
 - "Jazz"




- Equalizer curve can be set for each source.

Parametric Equalizer

You can manually set the equalizer curve by adjusting the center frequency, gain and Q value.

1 Display the Parametric Equalizer screen

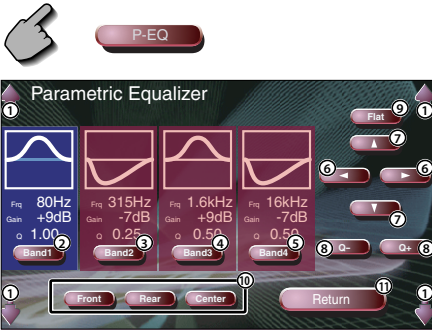

- ① Adjusts the volume.
- ②③④⑤ Select a band to be adjusted.
- ⑥ Sets a frequency.
- ⑦ Sets a gain level.
- ⑧ Sets a Q value.
- ⑨ Tone curve becomes flat.
- ⑩ Select a channel to be adjusted.
- ⑪ Exits the Parametric Equalizer setup and returns to the Equalizer screen.

2 Select a channel you wish to adjust



3 Select a frequency band you wish to adjust



You can adjust the following frequency bands.

Band1: 60, 80, 100, 120, 160, 200 Hz

Band2: 250, 315, 400, 500, 630, 800, 1k Hz

Band3: 1.25k, 1.6k, 2k, 2.5k, 3.15k, 4k Hz

Band4: 5k, 6.3k, 8k, 10k, 12.5k, 16k Hz

4 Set a center frequency



5 Set a gain



6 Set a Q value



7 Close the Parametric Equalizer screen



Surround Control


You can set up the sound field.

Displaying the Surround Control screen



Surround Control

Surround Control screen

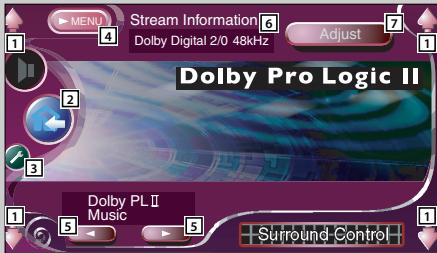

- 1 Adjusts the volume.
- 2 Returns to the Control screen of the previous source.
- 3 Calls the Setup Menu. (page 53)
- 4 Calls the Sound Effects Menu.
- 5 Sets a sound field.

You can select any of the following sound fields.

- "Bypass"
- "Bypass+Center"
- "Dolby PLII Movie"
- "Dolby PLII Music"
- "Dolby PLII Matrix"
- "SRS CS II Music"
- "SRS CS II MONO"

- 6 Displays the present source information.
The stream (Dolby Digital, dts, Linear PCM, MPEG or MP3/WMA), input channels (front or rear channels), and sampling frequency are displayed.
- 7 Displays the Surround Control Adjustment screen.
(See <Surround Control Adjustment>, page 87)



- When you have selected the TV or TUNER source and when you set the Dolby PL, we recommend you to select the "Dolby PL II Matrix" mode. If you select another Dolby PLII mode, the sound is NOT output from rear speakers when you receive monaural broadcasting sounds.
- Surround control can be set for each source.


Surround Control Adjustment

You can adjust the sound field.

1 Display the Surround Control screen




Surround Control Adjust screen
If the sound field of "Dolby PLII Music" has been set:

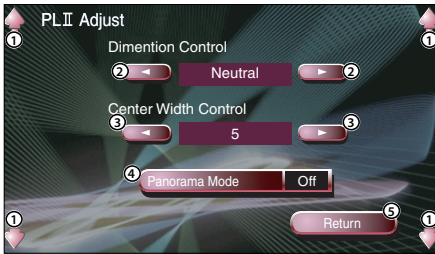

- ① Adjusts the volume.
- ② Sets the surround position by adjusting the front and rear volume balance.
- ③ Sets the vocal image position by adjusting the right and left vocal volume level.
- ④ Turns the Panorama mode On or Off.
- ⑤ Enters your setup and returns to the Surround Control screen.

If the sound field of "SRS CS II " has been set:

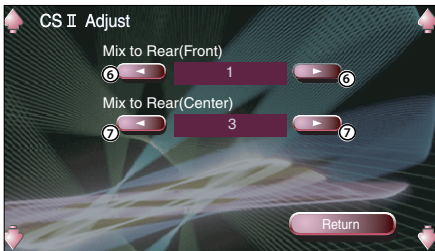

- ⑥ Sets the surround position by adjusting the front and rear volume balance.
- ⑦ Adjusts the center audio mix to rear volume.



- You cannot use the <Surround Control Adjustment> during playback of Multi channel source.
- You cannot use the <Surround Control Adjustment> when the sound field of "Dolby PLII Movie", or "Dolby PLII Matrix" has been set.

2 Adjust the sound field



3 Exit the Surround Control adjustment



SRS WOW Control

You can set up the SRS WOW effect.

Displaying the SRS WOW Control screen



- 1 Adjusts the volume.
- 2 Returns to the Control screen of the previous source.
- 3 Calls the Setup Menu. (page 53)
- 4 Calls the Sound Effects Menu.
- 5 Sets a SRS WOW.

You can select any of the following sound fields.

- "Off"
- "Low"
- "Middle"
- "High"
- "User"

- 6 Displays the SRS WOW User Setup screen. (page89)



- It is not effective though SRS WOW can be set besides "Off" when you set <Surround Control> to "Dolby PLII". Set <Surround Control> to "Bypass" or "SRS CS II" if you expect SRS WOW sound effect.

Table of Sound Effect Menu

You can set to sound effect menu to mark "○".

Input Channels	Surround Function	SRS 3D		FOCUS			TruBass		
		Front	Rear	Front	Rear	Center	Front	Rear	Center
Multi	-	○	○	○	○	○	○	○	○
2ch	Bypass	○*	-	○	-	-	○	○	○
	Bypass+Center	○*	-	○	-	-	○	○	○
	Dolby PLII	-	-	-	-	-	-	-	-
	SRS CS II	○*	○*	○	○	○	○	○	○




- * The SRS 3D effect cannot be set when you selected tuner source.

SRS WOW User Setup

1 Display the SRS WOW Adjust screen



SRS WOW Adjust screen

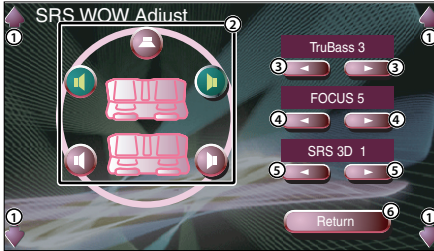

- ① Adjusts the volume.
- ② Selects a speaker to be set (Front, Rear or Center speaker).
- ③ Sets the TruBass effect level.
- ④ Sets the FOCUS effect level.
- ⑤ Sets the SRS 3D effect level.
- ⑥ Returns to SRS WOW Control screen.



- FOCUS: Adjusts the vertical position of the speaker and sound image by virtual adjustment.
- TruBass: Assists the playback for the super bass sound.
- SRS 3D: Makes a natural 3D sound field.
- You cannot set SRS 3D in tuner source.

2 Select a speaker you wish to adjust



3 Adjust the sound effect level



4 Exit the Surround Control adjustment



Position

You can adjust the sound effects according to your listening position.

Displaying the Position screen



Position

Position screen



- 1 Adjusts the volume.
- 2 Returns to the Control screen of the previous source.
- 3 Calls the Setup Menu. (page 53)
- 4 Calls the Sound Effects Menu.
- 5 Sets a listening position.
You can select any of "Front R" (Right front), "Front L" (Left front), "Front All" (All front), and "All" (All) positions.
- 6 Displays the Position Fine Control screen. (page 91)
- 7 Stores the present adjustment setup in memory, or calls it from memory. (page 91)



- The final distance is adjusted to the total of Car Type Set Up value (page 54) and Position Setup (both Position and Position Fine Control) value.
- If you change the Car Type Set Up value (page 54), the position is set to "All".
- Only the adjusted distance of position setup (Position and Position Fine Control values) is stored in memory. Therefore, the final adjustment distance changes if you change the Car Type Set Up value (page 54).


Position Fine Control

You can fine-adjust your listening position.

1 Display the Position Fine Control screen




Position Fine Control screen

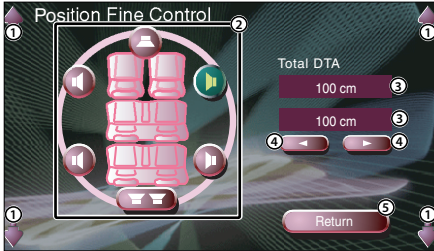

- ① Adjusts the volume.
- ② Selects a speaker to be adjusted.
- ③ Indicates setup distance.
The adjusted distance (Position and Position Fine Control values), and the total of the distance adjusted by Car Type Set Up (page 54) and the adjustment distance for position setup are indicated.
- ④ Adjust the distance to each speaker.
- ⑤ Exits the Position Fine Control setup and returns to the Position screen.

2 Select a speaker you wish to adjust

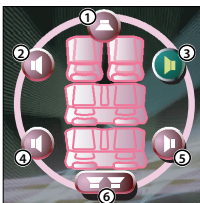

- ① Center speaker
- ② Left front speaker
- ③ Right front speaker
- ④ Left rear speaker
- ⑤ Right rear speaker
- ⑥ Subwoofer

3 Set a delay time



4 Close the Position Fine Control Screen



Stores the Preset adjustment setup

To store your adjustment in memory:



Continue to touch **P1** to **P3** more than 2 seconds.

Calls the Preset adjustment setup

To call your adjustment from memory:



Touch **P1** to **P3** of your adjustment you wish to call from memory.

Zone Control


You can set the front and rear audio source.

Displaying the Zone Control screen



Zone Control

Zone Control screen

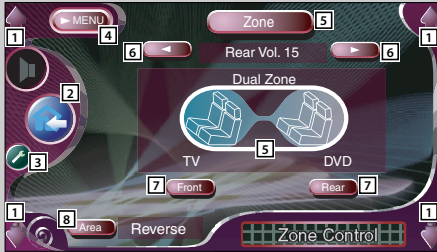

- 1 Adjusts the volume.
- 2 Returns to the Control screen of the previous source.
- 3 Calls the Setup Menu. (page 53)
- 4 Calls the Sound Effects Menu.
- 5 Turns the Zone Function (that sets different source sounds for front and rear speakers) On or Off. When turned On, **Front** , **Rear** and Rear volume are shown.
- 6 Adjusts the volume of the rear channel. (This button appears when the Zone function is On.)
- 7 Sets the front and rear audio source separately. (This button appears when the Zone function is On.)



- When the rear speaker sound is switched, the audio source that is output at the AV OUTPUT terminal is also switched to the same source. However, if you have set the "Area" to "Reverse", the audio source that is output at the AV OUTPUT terminal is switched depending on the front sound source.

- 8 Switches the front and rear audio sources. (This button appears when the Zone function is On.) Use "Reverse" to change over the front and rear audio sources.



- There are following limitations when zone function is set to "On".
 - There is no output from the subwoofer or center.
 - <Audio Setup> (page 54), <Equalizer> (page 84), <Surround Control> (page86), <SRS WOW> (page 88) <Position> (page90) are not available.

DVD: Digital Versatile Disc

A type of disc which contains recording of audio/video packaged media with high video and audio quality, such as a movie, featuring large recording capacity and digital signal processing capability.

VCD: VIDEO CD

A type of CD which contains the recording of moving images. It compresses image information by about 1/120 and audio information by about 1/6 and accommodates up to 74 minutes of recording in a disc with the same diameter as ordinary music CD of 12 cm.

Some VCDs do not have the P.B.C. compatibility and are capable of playback only, while some are P.B.C.-compatible and are capable of various special playback control operations. This player can play both of these VCDs.

MPEG: Moving Picture Experts Group

This is an international standard for digital video and audio compression and decompression in media.

Dolby Digital

This is a digital audio compression technology developed by Dolby Laboratories. It is compatible with 5.1-channel surround audio as well as normal stereo (2-channel) audio and can accommodate a large amount of audio data efficiently in a disc.

DTS

Name of a digital surround system developed by Digital Theater Systems, Inc.

Top menu/menu (DVD)

Some DVDs display more than one title in a screen. This screen is referred to as the top menu. The menu is the item display (menu screen) for use in setting operations. The menu can be recalled any time during playback to perform settings according to the current software, including the audio switching between Dolby Digital and PCM, switching of language used in the subtitles and spoken voice.

Title number (DVD)

The title is the largest unit of video and audio recorded in a DVD. It usually corresponds to a single movie of video software or an album (sometimes a piece of music) of music software. The numbers assigned to individual titles are referred to as the title numbers.

Chapter number (DVD)

The chapter is a section of video and audio recorded in a DVD. A title is composed of several chapters. The numbers assigned to individual chapters are referred to as the chapter numbers.

Subtitles (DVD)

Some DVD discs contains the recording of more than one subtitle language. This player allow you to select one of the recorded subtitle languages during playback.

Track number (CD, VCD)

A track is also a section of video and audio recorded in a disc. The numbers assigned to individual tracks are referred to as the track numbers.

With most of music CDs, a track is assigned to a piece of music. However, with a VCD, the sections of the contents do not always correspond to the assigned tracks.

As (special) playback functions such as skipping and programming of ordinary CDs are based on track number data, such playback functions are sometimes impossible with some VCDs.

P.B.C.: Play-Back Control (VCD)

When a VIDEO CD carries "Play Back Control capable" or similar message on the disc or jacket, desired scenes and information can be played back in an interactive manner using a hierarchical structure while viewing the menu screens displayed on the TV screen.

SRS CS II (Circle Surround II)

Circle Surround II improves on its predecessor Circle Surround (CS5.1) by enabling you to experience powerful multi-channel surround sound playback from mono, stereo or Dolby Surround encoded audio and video sources.

With SRS CS II you can also listen to audio CDs, television and radio broadcasts in full surround sound. You will discover a new type of sound experience through SRS Circle Surround II.

Troubleshooting Guide

Some system functions are limited to control depending on your setup.

- Zone cannot be set.
- The "Rear Bass Boost" of Surround Control Adjust cannot be set.
- The rear speakers of DTA cannot be set.
- The "Position Fine Control" of rear speakers cannot be set.
- The "Channel Level" of rear speakers cannot be set.
- The SRS CS II cannot be set.

The rear speakers have been set to "NONE" on the Speaker Set Up screen (page 56).

- No Surround Control (Sound Field) can be set.
- No signals can be set.
- The "Parametric Equalizer" cannot be set.
- The "Position (Position Fine Control)" cannot be set.
- The "Car Type Setup" value cannot be set.
- The "Speaker Setup" value cannot be set.
- No crossover frequency can be set.
- The "Channel Level" (test signal output) cannot be set.

The Zone Control has been turned On (page 92).

- The Surround Control (Sound Field) cannot be set to "Bypass+Center".
- The "Center Level" of Surround Control Adjust cannot be set.
- The "Center Width Control" of Surround Control Adjust cannot be set.
- The center speaker for DTA cannot be set.
- The "Position Fine Control" of the center speaker cannot be set.
- The "Channel Level" of the center speaker cannot be set.

The center speaker has been set to "NONE" on the Speaker Set Up screen (page 56).

- The Surround Control Adjust cannot be set.

The Surround Control (Sound Field) (page 86) has been set to "Bypass" or "Bypass+Center".

- The Surround Control (Sound Field) cannot be set to "Dolby PLII".

The center and rear speakers have been set to "NONE" on the Speaker Set Up screen (page 56).

- The subwoofer of DTA cannot be set.
- The "Position Fine Control" of the subwoofer cannot be set.
- The "Channel Level" of the subwoofer cannot be set.

The subwoofer has been set to "NONE" on the Speaker Set Up screen (page 56).

- No sound effectors of SRS WOW.

The Surround Control (Sound Field) (page 86) has been set to "Dolby PLII".

What might appear to be a malfunction in your unit may just be the result of slight misoperation or miswiring. Before calling service, first check the following table for possible problems.

General

? The power does not turn on.

- ✓ The fuse has blown.
- ✘ After checking for short circuits in the wires, replace the fuse with one having the same rating.
- ✓ The speaker wire has a short-circuit or touches the chassis of the vehicle, and then the protection function is activated.
- ✘ Wire or insulate the speaker cable properly and press the reset button.

? The desired source is NOT selected although you pressed the SRC button.

- ✓ A non-connected source cannot be selected.
- ✘ A non-connected source is not selected. See <INSTALLATION MANUAL> and connect the unit correctly.
- ✓ The RESET button is not pressed yet although the optional unit has been connected to the system.
- ✘ Press the reset button (page 4).
- ✓ The "O-N" switch of the optional unit is at the "O" position.
- ✘ Set the "O-N" switch to the "N" position.
- ✓ A disc changer not supported by the system is used.
- ✘ Use a disc changer supported by the system (page 4).

? The message "Disconnected cable found. Please confirm a connection line" is displayed and the unit cannot be used.

- ✓ Receiver unit is disconnected.
- ✘ Connect the wire correctly, referring to the section on <INSTALLATION MANUAL>.

? Nothing happens when the buttons are pressed.

- ✓ The computer chip in the unit is not functioning normally.
- ✘ Press the reset button on the unit (page 4).

? No television/video image appears.

- ✓ The unit is not connected to the parking brake detection switch.
- ✘ Make proper connections according to <INSTALLATION MANUAL>.

- ✓ The parking brake is not engaged.
- ✘ For safety reasons no television/video images are displayed while the vehicle is moving. Engaging the parking brake will cause images to be displayed.

? The screen is dark.

- ✓ The unit is in a location where temperature is low.
- ✘ If the temperature of the monitor unit drops, the screen may appear darker when power is first turned on due to the characteristics of a liquid crystal panel. Wait a while after turning power on for the temperature to rise. Normal brightness will return.

? The screen does not darken when the vehicle's lights are turned on.

- ✓ The unit is set to auto dimmer.
- ✘ When the unit is set to auto dimmer, it is not linked to the vehicle's light switch.
- ✓ The illumination wire has not been connected. (If manual dimmer is set)
- ✘ Make proper connections according to <INSTALLATION MANUAL>.

? AM/FM radio reception is poor and/or there is noise.

- ✓ The TV antenna and vehicle's radio antenna are too close.
- ✘ Separate the two antennas as far as possible.
- ✘ Turn off the main unit.

? The remote controller does not operate.

- ✓ The remote control mode selector is not set correctly.
- ✘ Switch the remote control mode selector according to the source you select (page 12).

? No sound can be heard, or the volume is low.

- ✓ Attenuator is turned on.
- ✘ Turn off Attenuator.
- ✓ The fader or balance settings are set all the way to one side.
- ✘ Reset the fader and/or balance settings.
- ✓ The input/output wires or wiring harness are connected incorrectly.
- ✘ Reconnect the input/output wires or the wiring harness correctly. See the section on <INSTALLATION MANUAL>.

-
- ? The sound quality is poor or distorted.**
- ✓ One of the speaker wires is being pinched by a screw in the car.
 - ✘ Check the speaker wiring.
-
- ✓ The speakers are not wired correctly.
- ✘ Reconnect the speaker wires so that each output terminal is connected to a different speaker.
-

- ? Radio reception is poor.**
- ✓ The car antenna is not extended.
 - ✘ Pull the antenna out all the way.
-
- ✓ The antenna control wire is not connected.
- ✘ Connect the wire correctly, referring to the section on <INSTALLATION MANUAL>.
-

- ? The memory is erased when the ignition is turned off.**
- ✓ The battery wire has not been connected to the proper terminal.
 - ✘ Connect the wire correctly, referring to the section on <INSTALLATION MANUAL>.
-
- ✓ The ignition and battery wire are incorrectly connected.
- ✘ Connect the wire correctly, referring to the section on <INSTALLATION MANUAL>.
-

- ? Does not switch to the rear view camera video display when pressing the [V.SEL] button.**
- ✓ The reverse sensor wire is disconnected.
 - ✘ Connect the wire correctly, referring to the section on <INSTALLATION MANUAL>.
-

- ? The sound/picture skips on a DVD/VCD/CD.**
- ✓ The disc is scratched or dirty.
 - ✘ Clean the disc, referring to the section on <Disc cleaning> (page 15).
-

- ? A track will not play.**
- ✓ Random play has been selected.
 - ✘ Turn off random play.
-

- ? A VCD cannot be played using menus.**
- ✓ The VCD disc being played is not compatible with P.B.C.
 - ✘ Menu playback is available only with VCD discs recorded with P.B.C.
-

- ? The subtitle is not displayed.**
- ✓ The DVD disc being played does not contain the recording of subtitles.
 - ✘ The subtitle cannot be displayed when the DVD disc being played does not contain the recording of subtitles.
-

- ? The voice (or subtitle) language cannot be changed.**
- ✓ The DVD disc being played does not contain the recording of more than one audio (or subtitle) language.
 - ✘ The voice (or subtitle) language cannot be changed when the DVD disc being played does not contain the recording of more than one voice (or subtitle) language.
-

- ? The viewing angle cannot be changed.**
- ✓ The DVD disc being played does not contain the recording of more than one angle.
 - ✘ The viewing angle cannot be changed when the DVD disc being played does not contain the recording of more than one angle.
-
- ✓ You are attempting to switch the angle in a DVD section where more than one angle is not recorded.
- ✘ More than one viewing angle may be recorded only in limited sections in a disc.
-

- ? Playback will not start even after a title is selected.**
- ✓ A viewing restriction (RATING) has been set for the disc.
 - ✘ Check the viewing restriction level (RATING) setting.
-

- ? The voice or subtitle language selected in the initial setting is not played.**
- ✓ The DVD disc being played does not contain the recording of the selected voice or subtitle language.
 - ✘ Use a DVD disc containing the recording of the selected voice or subtitle language.
-

Disc source

- ? The disc control mode cannot be selected.**
- ✓ No wire has been connected to the disc changer input terminal on the unit.
 - ✘ Connect the wire to the disc changer input terminal on the unit.
-

? The specified disc does not play, but another one plays instead.

- ✓ The specified CD is quite dirty.
- ✎ Clean the CD.

- ✓ The CD is upside-down.
- ✎ Load the CD with the labeled side up.

- ✓ The disc is loaded in a different slot from that specified.
- ✎ Eject the disc magazine and check the number for the specified disc.

- ✓ The disc is severely scratched.
- ✎ Try another disc instead.

? The sound skips.

- ✓ Something is touching the disc changer.
- ✎ Remove whatever is touching it.

- ✓ The CD is scratched or dirty.
- ✎ If skipping happens at the same place when the car is stopped, something with the CD is wrong. Clean the CD.

? The display shows that the changer is being played, but no sound can be heard.

- ✓ The computer chip in the unit is not functioning normally.
- ✎ Press the reset button on the unit (page 4).

? The specified track will not play.

- ✓ Random play or magazine random play has been selected.
- ✎ Turn off random play or magazine random play.

? Track repeat, disc repeat, track scan, disc scan, random play, and magazine random play start by themselves.

- ✓ The setting is not cancelled.
- ✎ The settings for these functions remain on until the setting to off or the disc ejected, even if the power is turned off or the source changed.

? Cannot remove disc.

- ✓ The cause is that more than 10 minutes has elapsed since the vehicle ACC switch was turned OFF.
- ✎ The disc can only be removed within 10 minutes of the ACC switch being turned OFF. If more than 10 minutes has elapsed, turn the ACC switch ON again and press the Eject button.

MP3/WMA source

? Cannot play an MP3/WMA.

- ✓ The media is scratched or dirty.
- ✎ Clean the media, referring to the Disc cleaning of the section on <About discs> (page 15).

? The sound skips when an MP3/WMA is being played.

- ✓ The media is scratched or dirty.
- ✎ Clean the media, referring to the Disc cleaning of the section on <About discs> (page 15).

- ✓ The recording condition is bad.
- ✎ Record the media again or use another media.

? The MP3/WMA track time is not displayed correctly.

- ✓ ---
- ✎ There are times when it isn't displayed correctly according to the MP3/WMA recording conditions.

? Cannot display the ID3 tag information correctly.

- ✓ Record is not made in conformity with the ID3 tag version 1.x.
 - ✎ Record in conformity with the ID3 tag version 1.x.
- Also, the display may be incorrect if an MP3/WMA file uses the ID3 tag v1.x standard and if this standard has been expanded after production of the machine software.

The following messages are displayed when certain problems are occurring in your system. Take the recommended actions.

Hot Error

The protective circuit in the unit activates when the temperature inside the unit exceeds 60°C (140°F), stopping all operation.

⇒ Cool down the unit by opening the windows or turning on the air conditioner. As the temperature falls below 60°C (140°F), the disc will start playing again.

Hold Error

The protective circuit in the unit activates when the temperature inside the automatic disc changer exceeds 60°C (140°F), stopping all operation.

⇒ Cool down the unit by opening the windows or turning on the air conditioner. As the temperature falls below 60°C (140°F), the disc will start playing again.

Mecha Error

The disc player is malfunctioning.

⇒ Eject the disc and try inserting it again. Contact the Kenwood dealer if this indicator continues blinking or the disc cannot be ejected.

Disc Error

The unplayable discs is inserted.

Read Error

The disc is upside-down.

⇒ Load the disc with the labeled side up.

The disc is quite dirty.

⇒ Clean the disc, referring to the section on <Disc cleaning> (page 15).

Region code Error

The DVD software encoded for other region code.

Parental level Error

The parental level is set to high levels.

Error 07 — 67

The unit is malfunctioning for some reason.

⇒ Press the reset button on the unit. If the "Error ##" code does not disappear, consult your nearest service center.

Specifications

Specifications subject to change without notice.

Monitor Section

- Picture size
 - : 6.95 inches (diagonal) wide
 - 154.1(W)×87.1(H)mm
- Display system
 - : Transparent TN LCD panel
- Drive system
 - : TFT active matrix system
- Number of pixels
 - : 336,960 (480H×234V×RGB)
- Effective pixels
 - : 99.99%
- Pixel arrangement
 - : RGB striped arrangement
- Back lighting
 - : Cold Cathode Fluorescent Tube

DVD Section

- D/A Converter
 - : 24Bit
- Decoder
 - : Linear PCM/Dolby Pro Logic II/Dolby Digital/dts/MP3/WMA
- Wow & Flutter
 - : Below Measurable Limit
- Frequency response
 - Sampling frequency;96k: 20~22,000Hz
 - Sampling frequency;48k: 20~22,000Hz
 - Sampling frequency;44.1k: 20~20,000Hz
- Total harmonic distortion (1k)
 - : 0.007%
- Signal to Noise ratio
 - : 95dB (DVD-Video 96kHz)
- Dynamic range
 - : 95dB (DVD-Video 96kHz)
- DISC Format
 - : DVD-Video/VIDEO-CD/CD-DA
- Sampling frequency
 - : 44.1kHz/48kHz, 96kHz
- Quantifying bit number
 - : 16/20/24bit

DSP Section

- 4 BAND Parametric equalizer
 - BAND1 frequency: 60/80/100/120/160/200Hz
 - BAND2 frequency: 250/315/400/500/630/800/1kHz
 - BAND3 frequency: 1.25k/1.6k/2k/2.5k/3.15k/4kHz
 - BAND4 frequency: 5k/6.3k/8k/10k/12.5k/16kHz
- Gain
 - : -9/-7/-5/-3/-2/-1/0/1/2/3/5/7/9dB
- Q control
 - : 0.25/0.5/1.0/2.0
- X'over
 - High pass filter:
 - frequency: Through/30/40/50/60/70/80/90/100/120/150/180/220/250Hz
 - slope: Through/-12/-18/-24dB/oct
 - Low pass filter:
 - frequency: Through/30/40/50/60/70/80/90/100/120/150/180/220/250Hz
 - slope: Through/-12/-18/-24dB/oct
- Time alignment
 - : 0~6.1m (5cm Step)
- Channel level
 - : ±10dB

FM Tuner section

- Frequency range (50kHz)
 - : 87.5~108.0MHz
- Usable sensitivity (S/N=26dB)
 - : 9.3dBf (0.8μV/75Ω)
- Quieting sensitivity (S/N=50dB)
 - : 15.2dBf (1.6μV/75Ω)
- Frequency response (±3.0dB)
 - : 30Hz~15kHz
- S/N (dB) (MONO)
 - : 65dB
- Selectivity (±400kHz)
 - : ≥ 80dB
- Stereo separation
 - : 35dB (1kHz)

LM Tuner section

- Frequency range (9kHz)
 - : 153kHz~281kHz
- Usable sensitivity
 - : 45μV

WM Tuner section

- Frequency range (9kHz)
 - : 531kHz~1611kHz
- Usable sensitivity
 - : 25μV

Video section

Color system of external video input
: NTSC/PAL
External video input level (RCA jacks)
: 1Vp-p/75Ω
External audio max input level (RCA jacks)
: 1V/22kΩ
Analog RGB input
: 0.7Vp-p/75Ω

Audio section

Maximum Power (Front&Rear)
: 50W×4
Output power (Front&Rear) (DIN 45324, +B=14.4V)
: 30W×4
Preout level (V)
: 5V/10kΩ
Preout impedance
: 80Ω

General

Operating voltage
: 14.4V (11V~16V)
Current consumption
: 15A
Dimensions (W×H×D)
Main Unit Installation: 182mm×53mm×161mm
Hideaway unit: 225mm×40mm×168mm
Operational temperature range
: -10°C~60°C
Storage temperature range
: -20°C~85°C
Weight
Main unit: 2.2kg
Hideaway unit: 1.2kg

Although the effective pixels for the liquid crystal panel is given as 99.99% or more, 0.01% of pixels may not light or may light incorrectly.

The marking of products using lasers (Except for some areas)

**CLASS 1
LASER PRODUCT**

The label is attached to the chassis/case and says that the component uses laser beams that have been classified as Class 1. It means that the unit is utilizing laser beams that are of a weaker class. There is no danger of hazardous radiation outside the unit.



is a trademark of DVD Format/Logo Licensing Corporation registered in the U.S., Japan and other countries.



is a trademark of SRS Labs, Inc.

This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Macrovision, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision. Reverse engineering or disassembly is prohibited.

Manufactured under license from Dolby Laboratories.

"Dolby", "ProLogic", and the double-D symbol are trademarks of Dolby Laboratories.

"DTS", and "DTS Digital Surround" are registered trademarks of Digital Theater Systems, Inc.

KENWOOD