

# KENWOOD

CD-RECEIVER

**KDC-BT8041U**  
**KDC-BT8141U**

---

## INSTRUCTION MANUAL

Kenwood Corporation



# Contents

<b>Before use</b>	<b>3</b>	<b>Audio Adjustments</b>	<b>22</b>
<b>Basic Operation</b>	<b>4</b>	Audio Control	
General functions		Adjusting the detail of Audio Control	
Tuner functions		Audio Setup	
Disc & Audio file play functions		Speaker Setting	
<b>Function Control</b>	<b>6</b>	Audio Preset Memory	
 Read through this page first for the setting of each function.		Audio Preset Recall	
<b>Display Settings</b>	<b>9</b>	<b>Bluetooth Setup</b>	<b>25</b>
Disc Naming (DNPS)		Registering Bluetooth device	
Auxiliary Input Display Setting		Registering Special Bluetooth device	
About Display Type		Registering PIN Code	
Text Display Selection		Downloading the Phone Book	
<b>Music disc/Audio file Operation</b>	<b>12</b>	Selecting the Bluetooth device You Wish to Connect	
Music Select		Deleting a Registered Bluetooth device	
Direct Music Search		Displaying the Firmware Version	
<b>Tuner Operation</b>	<b>13</b>	Adding a voice dialing command	
Station Preset Memory		Setting a Voice Command for Category	
Preset Tuning		Downloading the SMS	
Direct Access Tuning		SMS (Short Message Service)	
PTY (Program Type)		<b>Basic Operations of remote control</b>	<b>30</b>
Program Type preset		<b>Appendix</b>	<b>32</b>
Changing Language for PTY Function		<b>Accessories/ Installation Procedure</b>	<b>36</b>
<b>Operation of hands-free phoning</b>	<b>16</b>	<b>Connecting Wires to Terminals</b>	<b>37</b>
Before Use		<b>Installation/Removing the Unit</b>	<b>39</b>
Receiving a call		<b>Troubleshooting Guide</b>	<b>41</b>
During a call		<b>Specifications</b>	<b>44</b>
Call waiting			
Other functions			
Making a call			
Dial a number			
Speed dialing (Preset dial)			
Calling a number in the Phone Book			
Calling a number in the call log			
Make a voice dialing call			
Registering to the Preset Dial Number List			
Display of phone number type (category)			
<b>Bluetooth Audio Operation</b>	<b>19</b>		
Before Use			
Basic Operation			
<b>Other Functions</b>	<b>20</b>		
Security Code			
Manual Clock Adjustment			
Date Adjustment			
Demonstration mode setting			

- iPod is a trademark of Apple, Inc., registered in the U.S. and other countries.
- The "AAC" logo is trademark of Dolby Laboratories.
- The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Kenwood Corporation is under license. Other trademarks and trade names are those of their respective owners.

## Before use

### ▲WARNING

#### To prevent injury or fire, take the following precautions:


- To prevent a short circuit, never put or leave any metallic objects (such as coins or metal tools) inside the unit.

#### Before using this unit for the first time

This unit is initially set on the Demonstration mode. When using this unit for the first time, cancel the <Demonstration mode Setting> (page 21).

#### How to reset your unit

- If this unit or the connected unit (disc auto changer, etc.) fails to operate properly, press the Reset button. The unit returns to factory settings when the Reset button is pressed.

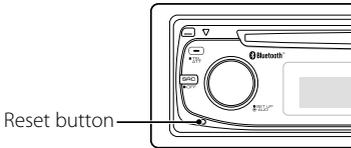

#### Cleaning the Unit

If the faceplate of this unit is stained, wipe it with a dry soft cloth such as a silicon cloth. If the faceplate is stained badly, wipe the stain off with a cloth moistened with neutral cleaner, then wipe it again with a clean soft dry cloth.



- Applying spray cleaner directly to the unit may affect its mechanical parts. Wiping the faceplate with a hard cloth or using a volatile liquid such as thinner or alcohol may scratch the surface or erase characters.

#### Cleaning the Faceplate Terminals

If the terminals on the unit or faceplate get dirty, wipe them with a clean soft dry cloth.

#### Lens Fogging

When you turn on the car heater in cold weather, dew or condensation may form on the lens in the CD player of the unit. Called lens fogging, this condensation on the lens may not allow CDs to play. In such a situation, remove the disc and wait for the condensation to evaporate. If the unit still does not operate normally after a while, consult your Kenwood dealer.

 
- If you experience problems during installation, consult your Kenwood dealer.
- When you purchase optional accessories, check with your Kenwood dealer to make sure that they work with your model and in your area.
- Characters that conform to ISO 8859-1 can be displayed.
- Characters that conform to ISO 8859-5 or ISO 8859-1 can be displayed. Refer to "MENU" > "Russian" of <Function Control> (page 6).
- The RDS feature won't work where the service is not supported by any broadcasting station.
- In this document, the description indicator will light means a status is displayed. Refer to <About Display Type> (page 10) for the details of the status display.
- The illustrations of the display, the function icon and the panel appearing in this manual are examples used to explain more clearly how the controls are used. Therefore, what appears on the display in the illustrations may differ from what appears on the display on the actual equipment, and some of the illustrations on the display may be inapplicable.

#### Handling CDs

- Do not touch the recording surface of the CD.
- Do not stick tape etc. on the CD, or use a CD with tape stuck on it.
- Do not use disc type accessories.
- Clean from the center of the disc and move outward.
- When removing CDs from this unit, pull them out horizontally.
- If the CD center hole or outside rim has burrs, use the CD only after removing the burrs with a ballpoint pen etc.

#### CDs that cannot be used

- CDs that are not round cannot be used.




- CDs with coloring on the recording surface or CDs that are dirty cannot be used.
- This unit can only play the CDs with 

This unit may not correctly play discs which do not have the mark.

- You cannot play a CD-R or CD-RW that has not been finalized. (For the finalization process refer to your CD-R/CD-RW writing software, and your CD-R/CD-RW recorder instruction manual.)

# Basic Operation

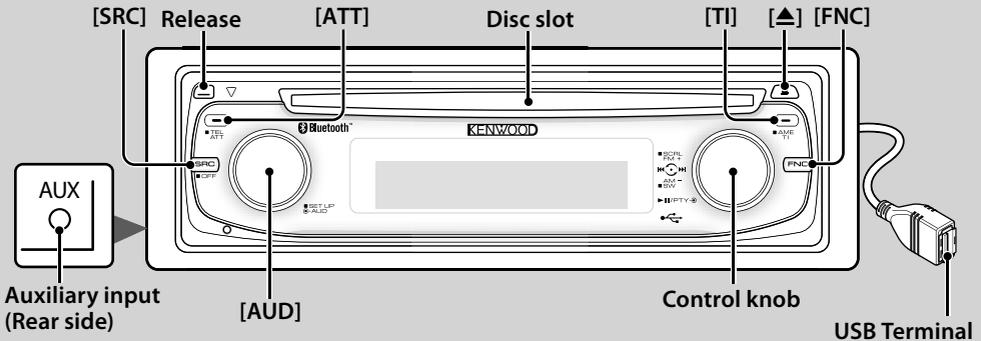

## General functions

### Power/Source Select button [SRC]

Turns on the power.

When the power is ON, select a source.

SRC Select mode 1: Press the [SRC] button and then turn the Control knob or push it toward left or right. To determine the selected source, press the Control knob.

SRC Select mode 2: Pressing this button each time switches between sources.

Tuner ("TUNER"), Bluetooth audio ("BT Audio"), USB or iPod ("USB" or "iPod"), CD ("Compact Disc"), Auxiliary input ("AUX"), and Standby ("STANDBY")

Press at least 1 second to turn off the power.



- When the power is ON, the <Security Code> (page 20) is displayed as "CODE ON" or "CODE OFF".
- The SRC Select mode can be set in "MENU" > "SRC Select" of <Function Control> (page 6).
- This unit automatically turns full power OFF after 20 minutes lapses in Standby mode in order to save the vehicle's battery. The time until full power OFF can be set in "Power OFF" of <Function Control> (page 6).
- When connection of the iPod is recognized, the source display changes from "USB" to "iPod".

### Volume control [AUD]

Turn the knob to adjust the volume.


### Attenuator [ATT]

Turning the volume down quickly.

When the volume is reduced, the "ATT" indicator flashes.

### Faceplate release Release

Releases the faceplate lock so that it can be removed. Refer to the following diagram when reattaching the faceplate.

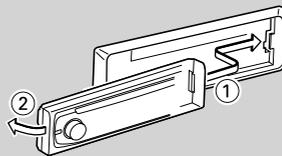

- The faceplate is a precision piece of equipment and can be damaged by shocks or jolts.
- Keep the faceplate in its faceplate case while detached.
- Do not place the faceplate (and the faceplate case) in areas exposed to direct sunlight, excessive heat or humidity. Also avoid places with too much dust or the possibility of water splashing.
- To prevent deterioration, do not touch the terminals of the unit or faceplate with your fingers.

### Auxiliary input Auxiliary input

Connect a portable audio device with mini-plug cable (3.5  $\phi$ ).



- Use the mini-plug cable which is stereo type and does not have any resistance.
- The auxiliary input requires the setting made in "MENU" > "Built in AUX" of <Function Control> (page 6).

  : Indicates the button etc. to operate.

### Subwoofer output **Control knob**

Switches between ON ("SUBWOOFER ON") and OFF ("SUBWOOFER OFF") each time pushing toward down for at least 2 seconds.



- This function requires the setting made in "MENU" > "SWPRE" of <Function Control> (page 6).

### Function Control **[FNC]**

Pressing this button allows you to set various functions using the Control knob. Refer to <Function Control> (page 6).

Category	Function of setup item
MENU	Allows you to set up the environment.
DISP	Allows you to set up the display.

### Text/Title scroll **Control knob**

Scrolls the CD, audio file, and Radio text display when pushing toward up for at least 2 seconds.

## Tuner functions

### Band select **Control knob**

Switches between FM1, FM2, and FM3 each time pushing toward up.

Switches to AM when pushing toward down.

### Tuning **Control knob**

Changes the frequency when pushing toward left or right.



- During reception of stereo stations the "ST" indicator is ON.

### Auto memory entry **[TI]**

Memorizes six stations with good reception automatically when pressed for at least 2 seconds.

### Traffic Information **[TI]**

Turns ON or OFF the Traffic Information function. If traffic bulletin starts when the function is ON, "Traffic INFO" is displayed and traffic information is received.



- If the volume is adjusted during reception of traffic information, the adjusted volume is memorized automatically. The memorized volume will be applied next time the Traffic Information function is turned ON.

## Disc & Audio file play functions

### Disc play **Disc slot**

Starts playing when a disc is inserted.

When a CD is inserted, the "IN" indicator is ON.



- 3 inch (8 cm) CD cannot be used. Attempt to insert using an adapter can cause malfunction.

### Disc ejection **[▲]**



- You can eject the disc for 10 minutes after switching off the engine.

### USB device/iPod play **USB Terminal**

Connecting a USB device starts playback.



- For the playable audio file, media, and devices, refer to <About Audio file> (page 32).

### Pause and play **Control knob**

Switches between pause and play each time the center is pressed.

### USB device removing **[▲]**

Press this button for 2 seconds or longer to select the remove mode, and the remove the USB device.

During the remove mode, the "USB REMOVE" indicator is ON.

### Music search **Control knob**

Changes the music when pushing toward left or right.

Fast reverses or forwards the music while keeping pushing toward left or right. (No sound is output while playing audio file.)

### Folder search **Control knob**

Changes the folder containing the audio file when pushing toward up or down.

# Function Control

Functions in the table below can be set up by using Function Control.

Category	Item	Setting	Entry	Setting overview	Condition	Page
MENU	"Security Set"		1 sec.	Sets security code	<b>SB</b>	20
	"SRC Select"	"1"/"2"		Sets the source selection method.	<b>SB</b>	34
	"iPod Mode"	"OFF"/"ON"		When set to "ON", allows you to select music in the manner similar to that of the iPod.	<b>iPod</b>	12
	"Device Regist"		1 sec.	Register a Bluetooth device (pairing).	<b>SB</b>	25
	"SPCL DVC Select"		1 sec.	Allow registration of a special device that cannot be registered normally.	<b>SB</b>	25
	"Phone Selection"		1 sec.	Select a cell-phone subject to hands-free connection.	<b>SB</b>	27
	"Audio Selection"		1 sec.	Select the Bluetooth audio player to be connected.	—	27
	"Device Delete"		1 sec.	Cancel registration of the Bluetooth device.	<b>SB</b>	27
	"BT DVC Status"		1 sec.	Display the status of the Bluetooth device.	—	34
	"PIN Code Edit"		1 sec.	Specify the PIN code required when registering this unit using the Bluetooth device.	<b>SB</b>	26
	"Auto Answer"	"OFF"/"0s" – "8s" – "99s"		Answer a call automatically after lapse of the preset time interval for automatic answer.	<b>SB</b>	34
	"SP Select"	"Front"/"F-R"/"F-L"		Specify the voice output speaker.	<b>SB</b>	34
	"Call Beep"	"ON"/"OFF"		Output a beep from the speaker when a call comes in.	<b>SB</b>	34
	"BT F/W Update"		1 sec.	Display the firmware version and update the firmware.	<b>SB</b>	27
	"Beep"	"OFF"/"ON"		Setting the operation check sound (beep sound) ON/OFF.	<b>SB</b>	
	"Clock Adjust"		1 sec.	Sets the clock.	<b>SB</b>	21
	"Date Adjust"		1 sec.	Sets the date.	<b>SB</b>	21
	"Date Mode"	7 types	1 sec.	Sets the date display mode.	<b>SB</b>	
	"SYNC"	"OFF"/"ON"		Synchronizing the RDS station time data and this unit's clock.	<b>SB</b>	
	"Display"	"OFF"/"ON"		Turns off the display when no operation is performed.	—	34
	"Dimmer"	"OFF"/"ON"		Dims the display part in conjunction with the light switch of the vehicle.	<b>SB</b>	
	"ILM Dimmer"	"AUTO"/"MNAL1"/"MNAL2"/"OFF"		Sets whether the key illumination is dimmed in conjunction with the light switch of the vehicle or it is dimmed constantly.	<b>SB</b>	34
	"ILM Effect"	"OFF"/"ON"		Sets whether the key illumination brightness is changed in conjunction with the key operation.	<b>SB</b>	
	"ILM MSC SYNC"	"OFF"/"ON"		Sets whether the key illumination brightness is changed in conjunction with the sound volume.	—	
	"SW/PRE"	"Rear"/"Sub-W"		Sets the preout output.	<b>SB</b>	34
	"AMP"	"OFF"/"ON"		Turns on/off the built-in amplifier.	<b>SB</b>	34
	"Zone2"	"Rear"/"Front"		Specifies the destination of AUX input sound when the Dual Zone function is turned on.	<b>2ZONE</b>	34
	"Supreme"	"OFF"/"ON"		Turns ON/OFF the Supreme function.	<b>AF2</b>	34
	"News"	"OFF"/"00min" – "90min"		Turns ON/OFF the News Bulletin Automatic Reception function and sets the news bulletin interrupt disabled time.	<b>SB</b>	34
	"Local Seek"	"OFF"/"ON"		Only stations whose reception is good are searched in auto seek tuning.	<b>FM</b>	
	"Seek Mode"	"Auto1"/"Auto2"/"Manual"		Selects the tuning mode of the radio.	<b>Tuner</b>	34
	"AF"	"OFF"/"ON"		When station reception is poor, automatically switches to the station that is broadcasting the same program over the same RDS network.	<b>SB</b>	35

Category	Item	Setting	Entry	Setting overview	Condition	Page
	"Regional"	"OFF"/"ON"*		Sets whether to switch to the station only in the specific region using the "AF" control.		
	"Auto TP Seek"	"OFF"/"ON"*		When traffic information station reception is poor, automatically searches for a station that can be received better.		
	"MONO"	"OFF"/"ON"		You can reduce the noise when stereo broadcasts are received as monaural.		
	"Name Set"		<b>1 sec.</b>	Sets the disc name (DNPS)/ AUX name.		9
	"Russian"*1	"OFF"/"ON"*		Selects Russian as the display language.		35
	"Scroll"	"Auto"/"Manual"*		When set to "Auto", scrolls the screen once with the change of the displayed text.	—	
	"Built in AUX"	"OFF"/"ON"		Sets whether to display AUX during source selection.		
	"Power OFF"	"----"/"20min"/ "40min"/"60min"		Turns off the power when the preset time has lapsed in the Standby mode.		35
	"CD Read"	"1"/"2"		Sets the CD read mode.		35
	"Audio Preset"		<b>1 sec.</b>	Presets the setting value of the audio control. The preset value is retained after resetting.		24
	"DEMO Mode"	"OFF"/"ON"*	<b>2 sec.</b>	Specifies whether to enable demonstration.	—	21
DISP	> TYPE	A/B/C/D/E/F/G		Sets the display pattern.	—	10
	> GRAPH	Spectrum Analyzer 1-2		Sets the Type E spectrum analyzer display.		
	> SIDE	Text icon/ Source icon		Sets the Type A side icon display.		
	> TEXT			Sets the text display.		10
	> OUT*2			Sets the vehicle-side display.	—	
BT	> V-REC			Make a voice dialing call.		18
	> VOICE > NAME			Register a name tag for voice recognition.		28
	> VOICE > TYPE			Register a type (category) voice tag for voice recognition.		28
	> SMS > SMSDL			Download a short message.		29
	> SMS > INBOX			Display the received short message.		29
PMEM				Presets a station.		13
SCAN*3		"ON"/ —		When set to "ON", plays the intro of the music in the folder successively.		
RDM		"ON"/ —		When set to "ON", plays the music in the folder randomly.		
FIREP		"ON"/ —		When set to "ON", plays the music repeatedly.		
ForEP		"ON"/ —		When set to "ON", plays the music in the folder repeatedly.		
SCAN		"ON"/ —		When set to "ON", plays the intro of the music on the disc successively.		
RDM		"ON"/ —		When set to "ON", plays the music on the disc randomly.		
T.REP		"ON"/ —		When set to "ON", plays the music repeatedly.		

# Function Control

\*Factory setting

\*1 Function of KDC-BT8141U.

\*2 Function of KDC-BT8041U.

Displayed item is depending on currently selected source or mode. The mark in Condition column shows the condition to which the item is displayed.

**SB** : Can be set in other than standby state.

**SB** : Can be set in standby state.

**AF1** : Can be set while Audio file source of CD/USB/iPod.

**AF2** : Can be set while Audio file source of CD/USB (excluding iPod).

**CD** : Can be set while CD source.

**Tuner** : Can be set during Tuner source.

**FM** : Can be set during FM reception.

**AUX** : Can be set while accessing AUX source.

**iPod** : Can be set only during playback of the iPod source. (USB source used when the iPod is connected)

**2ZONE** : Can be set for sources other than the standby source by setting "2\_ZONE" of <Audio Setup> (page 23) to "ON".

**Phone** : Can be set while a cell-phone is connected.

**→** : Refer to the reference page.

**A-F** : Can be set when the specified type is selected for Display Type.

— : Can be set during all sources.



- Refer to the respective page for information on how to set the items with reference page number.
- Only the items available to the current source are displayed.

\*3 Location played with "File Scan"

- Audio file: First 10 seconds
- Music Editor media: First 10 seconds or the part picked by Intro Skip.  
During Intro Skip, turn the control knob left or right to change the song.  
The scan method depends on the Music Editor setting. See the Music Editor help for details.

## 1 Enter Function Control mode

Press the [FNC] button.


Function icon is displayed.

## 2 Select your desired setup item

Operation type	Operation
Movement between items	Turn the Control knob.
Selection of item	Press the Control knob.
Return to previous item	Press the [FNC] button or " " icon.

Repeat selection and determination until your desired setup item is selected.

Example:

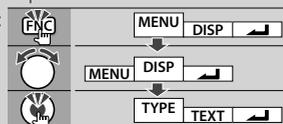

## 3 Make a setting

Turn the Control knob to select a setting value, and then press the Control knob.

- The value of items with mark can be set by pushing the Control knob towards right or left.
- Some items require you to keep pressing the Control knob for 1 or 2 seconds so that you can make a setting. For these items, the time during which you need to keep pressing the Control knob is displayed in the Entry column in seconds.
- For the functions accompanied by the description of the setting procedure and so forth, the reference page numbers are displayed.

## 4 Exit Function Control mode

Press the [FNC] button for at least 1 second.

# Display Settings

## Disc Naming (DNPS)

Attaching a title to a CD.

### 1 Play the disc you want to attach a name to

### 2 Select Name set mode item during Menu mode

Select the "Name Set" display.

For how to select Function Control items, refer to <Function Control> (page 6).

### 3 Enter Name set mode

Press the Control knob for at least 1 second.

### 4 Enter the name

Operation type	Operation
Move the cursor to the enter character position	Push the Control knob towards right or left.
Select the character type*	Press the Control knob.
Select the characters	Turn the Control knob or push it towards up or down.

\* Each time you press the knob, the character type alternates between the types shown in the table below.

Character type	
Alphabet upper case	
Alphabet lower case	
Numbers and symbols	
Special characters (Accent characters)	



- Enter characters by using a remote control with numbers buttons.

Example: If you are entering "DANCE".

Character	"D"	"A"	"N"	"C"	"E"
Button	[3] [▶▶]	[2] [▶▶]	[6] [▶▶]	[2] [▶▶]	[3]
Times pressed	1	1	2	3	2

### 5 Exit Menu mode

Press the [FNC] button.



- A title cannot be attached to Audio file media.
- When operation stops for 10 seconds the name at that time is registered, and Name Set mode closes.
- Media that you can attach a name to
  - Internal CD player: 10 discs
- You can change the name of a CD by the same operation you used to name it.

## Auxiliary Input Display Setting

Selects the display below when changing to Auxiliary input source.

### 1 Select Auxiliary input display setting item during Menu mode (In AUX mode)

Select the "Name Set" display.

For how to select Function Control items, refer to <Function Control> (page 6).

### 2 Enter Auxiliary input display setting mode Press the Control knob for at least 1 second.

The presently selected Auxiliary input display is displayed.

### 3 Select the Auxiliary input display

Turn the Control knob or push it towards up or down.

"AUX"/"DVD"/"PORTABLE"/"GAME"/"VIDEO"/"TV"

### 4 Exit Auxiliary input display setting mode

Press the [FNC] button.



- When operation stops for 10 seconds, the name at that time is registered, and the Auxiliary input display setting mode closes.

# Display Settings

## About Display Type

Shown below are examples of display types.

Display	Display Type
"TYPE [A]"	
"TYPE [B]"	
"TYPE [C]"	
"TYPE [D]"	
"TYPE [E]"	
"TYPE [F]"	
"TYPE [G]"	



- ① Text display part
- ② Status display
- ③ Icon display part
- ④ Spectrum Analyzer display
- ⑤ Clock display
- ⑥ Display (varied depending on the source)

## Text Display Selection

Changing the text display.

### In Tuner source

Information	Display
Program Service name (FM)	"Frequency/PS"
Title & Artist name* (FM)	"Title/Artist"
Station name* (FM)	"Station Name"
Radio text plus* (FM)	"Radio Text Plus"
Radio text (FM)	"Radio Text"
Frequency (MW, LW)	"Frequency"
Spectrum Analyzer & Clock	"Speana/Clock"
Clock	"Clock"
Date	"Date"
Blank	"Blank"

\* Information of Radio text plus is displayed.

### In CD source

Information	Display
Disc title	"Disc Title"
Track title	"Track Title"
Play time & Track number	"P-Time"
Disc name	"DNPS"
Spectrum Analyzer & Clock	"Speana/Clock"
Clock	"Clock"
Date	"Date"
Blank	"Blank"

### In Audio file source

Information	Display
Music title & Artist name	"Title/Artist"
Album name & Artist name	"Album/Artist"
Folder name	"Folder Name"
File name	"File Name"
Play time & Music number	"P-Time"
Spectrum Analyzer & Clock	"Speana/Clock"
Clock	"Clock"
Date	"Date"
Blank	"Blank"

### In Standby

Information	Display
Standby	"Source Name"
Clock	"Clock"
Date	"Date"
Blank	"Blank"

### **In Auxiliary input source**

<b>Information</b>	<b>Display</b>
Auxiliary input name	"Source Name"
Spectrum Analyzer & Clock	"Speana/Clock"
Clock	"Clock"
Date	"Date"
Blank	"Blank"

### **In Bluetooth audio source**

<b>Information</b>	<b>Display</b>
Bluetooth audio	"Source Name"
Spectrum Analyzer & Clock	"Speana/Clock"
Clock	"Clock"
Date	"Date"
Blank	"Blank"

## **1 Enter Text Display Selection mode (In Display Type A/ B/ C/ D/ F)**

Select "DISP" > "TEXT".

For how to select Function Control item, refer to <Function Control> (page 6).

## **2 Select the text display part (Display Type A/ B/ C/ D only)**

Push the Control knob towards up or down.

The selected text display part blinks.

## **3 Select the text**

Turn the Control knob or push it towards left or right.

## **4 Exit Text Display Selection mode**

Press the Control knob.



- If the selected display item does not have any information, alternative information is displayed.
- Some items cannot be selected depending on the display type and row.
- When selecting "Folder Name" while playing with iPod, names will be displayed depending on currently selected browsing items.

# Music disc/Audio file Operation

Function of Audio file/ Internal CD source

## Music Select

Selecting the music you want to listen to from the device or media being played now.

### 1 Enter Music Select mode

Turn the Control knob.

The music list is displayed.

### 2 Search for music

Select the category item using the Control knob.

### iPod source ("iPod Mode : ON")

Operation type	Operation
Movement between items	Turn the Control knob.
Selection of item	Press the Control knob.
Return to previous item	Push the Control knob towards up.
Return to first item	Push the Control knob towards up for at least 1 second.

### Other source

#### Audio file

Operation type	Operation
Movement between items	Turn the Control knob or push it towards up or down.
Selection of item	Push the Control knob towards right.
Return to previous item	Push the Control knob towards left.
Return to first item	Push the Control knob towards left for at least 1 second.

#### Internal CD source

Operation type	Operation
Movement between track	Turn the Control knob or push it towards up or down.
Selection of track	Press the Control knob.
Return to first track	Push the Control knob towards left for at least 1 second.

The "◀" or "▶" symbol shown beside the displayed item indicates that the item is preceded or followed by another item.

Selecting a music will play it from the beginning.

### Cancelling Music Select

Press the [FNC] button.



- Music Select cannot be performed during Random play.
- Set the iPod mode in "MENU" > "iPod Mode" of <Function Control> (page 6).

Function of remote control

## Direct Music Search

Searchs the music by entering the track number.

### 1 Enter the music number

Press the number buttons on the remote control.

### 2 Search the music

Press the [◀◀] or [▶▶] button.

### Cancelling Direct Music Search

Press the [▶II] button.



- Direct Music Search cannot be performed during playing of iPod, "Music Editor" media, Random play, or scan play.

# Tuner Operation

## Station Preset Memory

Putting a station in the memory.

- 1 Select the frequency to put in the memory**  
Push the Control knob towards right or left.
- 2 Enter Preset Memory mode**  
Select "P.MEM".  
For how to select Function Control item, refer to <Function Control> (page 6).
- 3 Select the number to put in the memory**  
Turn the Control knob.
- 4 Determine the number to put in the memory**  
Press the Control knob.
- 5 Allow the determined number to take effect**  
Press the Control knob.

### Canceling the Preset Memory mode

Press the [FNC] button.

## Preset Tuning

Recalling the stations in the memory.

- 1 Enter Preset Tuning Select mode**  
Turn the Control knob.  
A station list is displayed.
- 2 Select a desired station in the memory**  
Turn the Control knob.
- 3 Recall the station**  
Press the Control knob.

### Canceling Preset Tuning

Press the [FNC] button.

*Function of remote control*

## Direct Access Tuning

Entering the frequency and tuning.

- 1 Enter Direct Access Tuning mode**  
Press the [DIRECT] button on the remote control.  
"----" is displayed.

- 2 Enter the frequency**  
Press the number buttons on the remote control.

Example:

Desired frequency	Press button
92.1 MHz (FM)	[0], [9], [2], [1]
810 kHz (AM)	[0], [8], [1], [0]

### Canceling Direct Access Tuning

Press the [DIRECT] button on the remote control.



- You can enter the FM band frequency in steps of a minimum of 0.1 MHz.

# Tuner Operation

## PTY (Program Type)

Selecting the Program Type below and searching for a station;

Program Type	Display	Program Type	Display
Speech	"All Speech"	Weather	"Weather & Metr"
Music	"All Music"	Finance	"Finance"
News	"News"	Children's programs	"Children's Prog"
Current Affairs	"Current Affairs"	Social Affairs	"Social Affairs"
Information	"Information"	Religion	"Religion"
Sport	"Sport"	Phone In	"Phone In"
Education	"Education"	Travel	"Travel & Touring"
Drama	"Drama"	Leisure	"Leisure & Hobby"
Culture	"Cultures"	Jazz Music	"Jazz Music"
Science	"Science"	Country Music	"Country Music"
Varied	"Varied Speech"	National Music	"National Music"
Pop Music	"Pop Music"	Oldies Music	"Oldies Music"
Rock Music	"Rock Music"	Folk Music	"Folk Music"
Easy Listening Music	"Easy Listening M"	Documentary	"Documentary"
Light Classical	"Light Classic M"		
Serious Classical	"Serious Classics"		
Other Music	"Other Music"		

- Speech and Music include the Program type shown below.  
Music: Black character item.  
Speech: White character item.

### 1 Enter PTY mode

Press the Control knob.

"PTY SELECT" is displayed.

### 2 Select the Program Type

Turn the Control knob or push it towards up or down.

### 3 Search for the selected Program Type station

Push the Control knob towards right or left.

### 4 Exit PTY mode

Press the Control knob.



- This function cannot be used during a traffic bulletin or AM reception.
- When the selected Program Type is not found, "No PTY" is displayed. Select another Program Type.

## Program Type preset

Putting the Program Type in the Preset button memory and quick recall.

### Presetting the Program Type

#### 1 Select the Program Type to preset

Refer to <PTY (Program Type)> (page 14).

#### 2 Enter Program Type preset mode

Press the [FNC] button.

#### 3 Select the number you want to put in the memory

Turn the Control knob or push it towards left or right.

#### 4 Preset the Program Type

Press the Control knob for at least 1 second.

#### 5 Exit Program Type preset mode

Press the [FNC] button.

### Recalling the preset Program Type

#### 1 Enter PTY mode

Refer to <PTY (Program Type)> (page 14).

#### 2 Enter Program Type preset mode

Press the [FNC] button.

#### 3 Select the number you want to recall from the memory

Turn the Control knob or push it towards left or right.

#### 4 Recall the Program Type

Press the Control knob.

#### 5 Exit Program Type preset mode

Press the [FNC] button.

## **Changing Language for PTY Function**

Selecting the Program Type display language as follows;

Language	Display	Language	Display
English	"English"	Norwegian	"Norwegian"
Spanish	"Spanish"	Portuguese	"Portuguese"
French	"French"	Swedish	"Swedish"
Dutch	"Dutch"	German	"German"

### **1 Enter PTY mode**

Refer to <PTY (Program Type)> (page 14).

### **2 Enter Changing Language mode**

Press the [TI] button.

### **3 Select the language**

Turn the Control knob or push it towards up or down.

### **4 Exit Changing Language mode**

Press the [TI] button.

# Operation of hands-free phoning

## Before Use

---

- For details on the Bluetooth cell-phone with the hands-free function, see <About the Cell-Phone> (page 33).
- You need to register your cell-phone before using it with this unit. For more details, see <Registering Bluetooth device> (page 25).
- If you have registered two or more cell-phones, you need to select one of them. For more details, see <Selecting the Bluetooth device You Wish to Connect> (page 27).
- To use the Phone Book, it must be downloaded to this unit in advance. For details, see <Downloading the Phone Book> (page 26).
- "BT" indicator is lit when a cell-phone is connected to this unit.

## Receiving a call

---

### Answering a Phone Call

Press the [AUD] knob.



- The following operations disconnect the line:
  - Insert a CD.
  - Connect a USB device.
- The name of the calling party is displayed if it has already been registered in the Phone Book.

### Rejecting an Incoming Call

Press the [ATT] button for at least 1 second.

## During a call

---

### Disconnecting a Call

Press the [SRC] button.

### Switching to the Private Mode

Press the Control knob.

Switches between Private talk ("PRVT") and Hands-free talk each time this knob is pressed.



- Depending on the type of your cell-phone, switching to the private talk mode may select the source that was used before commencing the hands-free connection. If this happens, the source cannot be switched back to the hands-free talk mode by operating this unit. Operate your cell-phone to return to the hands-free talk mode.

### Adjusting the Voice Volume during a Call

Turn the [AUD] knob.

## Call waiting

---

### Answering Another Incoming Call with the Current Call Suspended

- 1 Press the [AUD] knob.
- 2 Turn the Control knob or push it towards up or down. Select the "Answer" display.
- 3 Press the [AUD] knob.

### Answering another Incoming Call after Terminating the Current Call

Press the [SRC] button.

### Continuing the Current Call

- 1 Press the [AUD] knob.
- 2 Turn the Control knob or push it towards up or down. Select the "Reject" display.
- 3 Press the [AUD] knob.

### Answering the Waiting Call after Terminating the Current Call

Press the [ATT] button for at least 1 second.

### Switching between the Current Call and Waiting Call

Press the [AUD] knob.

Each pressing of this knob switches the calling party.

## Other functions

---

### Clearing the Disconnection Message

Press the [ATT] button for at least 1 second. "HF Disconnect" disappears.

### Switching between Display Modes

Press the [TI] button.

The number of items displayed is switched between 1 or 3 each time this knob is pressed.

## Making a call

---

**1 Enter dialing method mode**  
Press the [ATT] button for at least 1 second.

**2 Select a dialing method**  
Press the Control knob.  
"DIAL" » "INITIAL" » "P-BOOK" » "OUT-CALL" » "IN-CALL" » "MIS-CALL"  
Methods of operations in the above modes are described below.

**3 Exit the dialing method mode**  
Press the [ATT] button for at least 1 second.

## Dial a number

---

**1 Enter dialing method mode**  
Press the [ATT] button for at least 1 second.

**2 Select the number dial mode**  
Press the Control knob.  
Select the "DIAL" display.

**3 Enter a phone number**  
Press the number ([1] – [0]), #([FM]), \*([AM]), or +([▶▶]) button on the remote controller.

**4 Make a call**  
Press the [DIRECT] button on the remote controller.

**To erase the entered phone number digit by digit:**

Press the [◀◀] button on the remote controller.



- You can input max 32 digits.

## Speed dialing (Preset dial)

---

**1 Enter dialing method mode**  
Press the [ATT] button for at least 1 second.

**2 Press the Control knob.**  
Select the "DIAL", "P-BOOK", "OUT-CALL", "IN-CALL", or "MIS-CALL" display.

**3 Enter preset dial mode**  
Press the [FNC] button.

**4 Select the number you want to recall from the memory**  
Turn the Control knob or push it towards left or right.

**5 Press the Control knob.**

**6 Press the [FNC] button.**

**7 Make a call**  
Press the Control knob for at least 1 second.



- You need to register the preset dial number. (page 18)

## Calling a number in the Phone Book

---

**1 Enter dialing method mode**  
Press the [ATT] button for at least 1 second.

**2 Select the Phone Book mode**  
Press the Control knob.  
Select the "INITIAL" display, proceed to step 3.  
Select the "P-BOOK" display, proceed to step 4.

**3 Select the initial to be searched for**

Operation type	Operation
Move to the next character.	Push the Control knob towards right or left.
Move to the next row.	Push the Control knob towards up or down.
Determine the selected initial.	Press the Control knob for at least 1 second.

**4 Select the name**

Operation type	Operation
Move to the next phone number.	Turn the Control knob or push it towards up or down.
Move to the next name.	Push the Control knob towards right or left.

**5 Make a call**  
Press the Control knob for at least 1 second.



- During search, a non-accent character such as "u" is searched for instead of an accent character such as "ü".  
The non-alphabetical characters such as Chinese and Russian are classified as symbol.

# Operation of hands-free phoning

## Calling a number in the call log

### 1 Enter dialing method mode

Press the [ATT] button for at least 1 second.

### 2 Select the call log mode

Press the Control knob.

Select the "OUT-CALL" (outgoing call), "IN-CALL" (incoming call), or "MIS-CALL" (missed call) display.

### 3 Select a name or phone number

Turn the Control knob or push it towards up or down.

### 4 Make a call

Press the Control knob for at least 1 second.



- The outgoing call list and the incoming call list, and the missed call list are the lists of calls originated from and received at this unit. They are not the ones stored in the cell-phone memory.

## Make a voice dialing call

### 1 Enter voice recognize mode

Select "BT" > "V-REC".

For how to select Function Control item, refer to <Function Control> (page 6).

"Ready" is displayed.

### 2 Press the Control knob.

"PB Name?" is displayed.

When a beep is heard, utter the name within 2 seconds.

### 3 "PN Type?" is displayed.

When a beep is heard, utter the category within 2 seconds.

### 4 Make a call

Press the Control knob for at least 1 second.

- This step is the same as step 3 of the procedure in <Calling a number in the Phone Book> (page 17). You can make a call or select a category.



- If your voice cannot be recognized, a message is displayed. Pressing the Control knob allows you to retry voice input. (page 42)
- Both the name and category requires registration of a voice tag. (page 28)
- Audio sound is not output during voice recognize.

## Registering to the Preset Dial Number List

### 1 Enter the phone number you wish to register

Enter the phone number with reference to the following:

Dial a number/ Calling a number in the call log/  
Calling a number in the Phone Book

### 2 Enter Preset Memory mode

Press the [FNC] button.

### 3 Select the number to put in the memory

Turn the Control knob or push it towards left or right.

### 4 Determine the number to put in the memory

Press the Control knob for at least 1 second.

### Exit the Preset Memory mode

Press the [FNC] button.

## Display of phone number type (category)

The category items in the Phone Book are displayed as follows:

Display	Information
"General"/	General
"Home"/	Home
"Office"/	Office
"Mobile"/	Mobile
"Other"/	Other

# Bluetooth Audio Operation

## Before Use

---

- For details on the Bluetooth Audio player which can be connected, see <About the Bluetooth Audio player> (page 33).
- You need to register your Bluetooth Audio player before using it with this unit. For more details, see <Registering Bluetooth device> (page 25).
- You to select the Bluetooth audio player you wish to connect. Refer to <Selecting the Bluetooth device You Wish to Connect> (page 27).

## Basic Operation

---

### **Selecting Bluetooth Audio source**

#### **Press the [SRC] button.**

Select the "BT Audio" display.

For how to select source item, refer to <Power/Source Select button> of <Basic Operation> (page 4).

### **Pause and play**

#### **Press the Control knob.**

### **Music Search**

#### **Push the Control knob towards right or left.**



- All or some of the operations above cannot be performed if the Bluetooth audio player is not ready for remote control.
- Switching between Bluetooth audio sources does not start or stop playback automatically. Perform the operation for starting or stopping playback.
- Some audio players cannot be controlled remotely or reconnected after Bluetooth disconnection. Operate the main unit of the audio player to connect Bluetooth.

# Other Functions

## Security Code

When Security Code is set, possibility of theft is reduced because input of Security Code is prompted to turn on the unit once it is turned off.



- When you activate the Security Code function, it cannot be released.  
Note, your Security Code is the 4 digit number entered in your "Car Audio Passport" in this package.

### 1 Select Security Code item during Menu mode (In Standby mode)

"Security Set" is displayed.

For how to select Function Control items, refer to <Function Control> (page 6).

### 2 Enter Security Code mode

**Press the Control knob for at least 1 second.**

When "Enter" is displayed, "SECURITY SET" is also displayed.

### 3 Enter Security Code

Operation type	Operation
Select the digits to enter	Push the Control knob towards right or left.
Select the Security Code numbers	Turn the Control knob or push it towards up or down.

### 4 Confirm the Security Code

**Press the Control knob for at least 3 seconds.**

When "Re-Enter" is displayed, "SECURITY SET" is also displayed.

### 5 Do the step 3 through 4 operation, and reenter the Security Code.

"Approved" is displayed.

The Security Code function activates.



- If you enter a Code different from your Security Code, you have to start over from step 3.

### 6 Exit Security Code mode

**Press the [FNC] button.**

## Entering Security Code

The Security Code is required to use the audio unit when the unit is first used after removed from the battery power source or the Reset button is pressed.

### 1 Turn the power ON.

### 2 Do the step 3 through 4 operation, and reenter the security code.

"Approved" is displayed.

Now, you can use the unit.



- If an incorrect code is entered, "Waiting" is displayed, and the input prohibition periods shown in the table below is generated.  
After the input prohibition time lapses, "SECURITY" is displayed, and you can reenter the code.

Number of times the incorrect code was input	Input prohibited time
1	—
2	5 minutes
3	1 hour
4	24 hours

## Manual Clock Adjustment

### 1 Select Clock Adjustment item during Menu mode (In Standby mode)

Select the "Clock Adjust" display.

For how to select Function Control items, refer to <Function Control> (page 6).

### 2 Enter Clock adjustment mode

Press the Control knob for at least 1 second.

The clock display blinks.

### 3 Adjusting Clock

Operation type	Operation
Selecting the item (hours or minutes)	Push the Control knob towards right or left.
Adjust each item	Turn the Control knob or push it towards up or down.

### 4 Exit Clock adjustment mode

Press the [FNC] button.



- You can do this adjustment when "MENU" > "SYNC" in <Function Control> (page 6) is set to "OFF".

## Date Adjustment

### 1 Select Date Adjustment item during Menu mode (In Standby mode)

Select the "Date Adjust" display.

For how to select Function Control items, refer to <Function Control> (page 6).

### 2 Enter Date adjustment mode

Press the Control knob for at least 1 second.

The date display blinks.

### 3 Adjusting Date

Operation type	Operation
Selecting the item (month, day, or year)	Push the Control knob towards right or left.
Adjust each item	Turn the Control knob or push it towards up or down.

### 4 Exit Date adjustment mode

Press the [FNC] button.

## Demonstration mode setting

Turning the demonstration mode ON/OFF.

### 1 Select Demonstration item during Menu mode

Select the "DEMO Mode" display.

For how to select Function Control items, refer to <Function Control> (page 6).

### 2 Set the Demonstration mode

Press the Control knob for at least 2 seconds.

Pressing this button for 2 seconds or longer toggles the setting between "ON" and "OFF".

### 3 Exit Demonstration mode

Press the [FNC] button.

# Audio Adjustments

## Audio Control

You can adjust following Audio Control items ;

Adjustment Item	Display	Range
Rear volume	"REAR VOLUME"	0 — 35
Subwoofer level	"SUB-W LEVEL"	-15 — +15
System Q	"USER"/"ROCK"/ "POPS"/"EASY"/ "TOP40"/"JAZZ"/ "NATURAL"	User setting/Rock/Pops/Easy/ Top 40/Jazz/Natural
Bass level*	"BASS LEVEL"	-8 — +8
Middle level*	"MIDDLE LEVEL"	-8 — +8
Treble level*	"TREBLE LEVEL"	-8 — +8
Balance	"BALANCE"	Left 15 — Right 15
Fader	"FADER"	Rear 15 — Front 15

*Exit Audio Control mode (Volume control mode)*

\* You can adjust these items in detail. Refer to <Adjusting the detail of Audio Control> (Page 22).

\* Source tone memory: Puts the set up value in the memory per source. (Detail Audio item is included)



- "USER": The ranges selected lastly for Bass level, Middle level, and Treble level are recalled automatically.

### 1 Select the source to adjust

For how to select source item, refer to <Power/Source Select button> of <Basic Operation> (page 4).

### 2 Enter Audio Control mode

Press the [AUD] knob.

### 3 Select the Audio item to adjust

Press the [AUD] knob.

### 4 Adjust the Audio item

Turn the [AUD] knob.

### 5 Exit Audio Control mode

Press any button.

Press a button other than the [AUD] knob or [▲] and [ATT] button.

## Adjusting the detail of Audio Control

Among the Basic Audio items, you can adjust the Bass level, Middle level, and Treble level in detail.

### Bass level

Adjustment Item	Display	Range
Bass Center Frequency	"BASS FRQ"	40/50/60/70/80/100/ 120/150 Hz
Bass Q Factor	"BASS Q FACTOR"	1.00/1.25/1.50/2.00
Bass Extend	"BASS EXT"	OFF/ON

### Middle level

Adjustment Item	Display	Range
Middle Center Frequency	"MIDDLE FRQ"	0.5/1.0/1.5/2.0 kHz
Middle Q Factor	"MIDDLE Q FACTOR"	1.00/2.00

### Treble level

Adjustment Item	Display	Range
Treble Center Frequency	"TREBLE FRQ"	10.0/12.5/15.0/17.5 kHz

### 1 Select the Basic Audio item

Select the desired item to be set in detail from followings;

- Bass level
- Middle level
- Treble level

For how to select Basic Audio items, see <Audio Control> (page 22).

### 2 Enter Detail adjustment mode of Audio Control

Press the [AUD] knob for at least 1 second.

### 3 Select the Detail Audio item to adjust

Press the [AUD] knob.

### 4 Adjust the Detail Audio item

Turn the [AUD] knob.

### 5 Exit the Detail Audio Control mode

Press the [AUD] knob for at least 1 second.



- When you set the Bass Extend to ON, low frequency response is extended by 20%.
- You can exit the Audio Control mode at anytime by pressing any button except for [AUD] knob, [▲] and [ATT] button.

## Audio Setup

You can set Sound system , such as follows;

Adjustment Item	Display	Range
Front High Pass Filter	"HPF-F"	Through/40/ 60/80/100/120 /150/180/220 Hz
Rear High Pass Filter	"HPF-R"	Through/40/ 60/80/100/120 /150/180/220 Hz
Low Pass Filter	"LPF"	50/60/80/100/120/Through Hz
Subwoofer Phase	"SW PHASE"	Reverse (180°)/ Normal (0°)
Volume offset	"VOL-OFFSET"	-8 — ±0 (AUX: -8 — +8)
Loudness	"LOUD"	OFF/ON
Dual Zone System	"2 ZONE"	OFF/ON



- Volume offset: Sets each source's volume as a difference from the basic volume.
- Loudness: Compensates for low and high tones during low volume. (Only the low tone is compensated for when the tuner is selected as a source.)
- Dual Zone System  
Main source and sub source (Auxiliary input) output Front channel and Rear channel separately.
  - Set up the channel of sub source by "Zone2" of <Function Control> (page 6).
  - Select Main source by [SRC] button.
  - Adjust the volume of Front channel by [AUD] knob.
  - Adjust the volume of Rear channel by <Audio Control> (page 22) or [▲]/[▼] button on the remote control (page 30).
  - The Audio Control has no effect on sub source.

### 1 Select the source to adjust

For how to select source item, refer to <Power/ Source Select button> of <Basic Operation> (page 4).

### 2 Enter Audio Setup mode

Press the [AUD] knob for at least 1 second.

### 3 Select the Audio Setup item to adjust

Press the [AUD] knob.

### 4 Adjust the Audio setup item

Turn the [AUD] knob.

### 5 Exit Audio Setup mode

Press the [AUD] knob for at least 1 second.

## Speaker Setting

Fine-tuning so that the System Q value is optimal when setting the speaker type as follows;

Speaker type	Display
OFF	"OFF"
For 5 & 4 in. speaker	"5/4inch"
For 6 & 6x9 in. speaker	"6x9/6inch"
For the OEM speaker	"O.E.M."

### 1 Enter Standby

Select the "STANDBY" display.

For how to select source item, refer to <Power/ Source Select button> of <Basic Operation> (page 4).

### 2 Enter Speaker Setting mode

Press the [AUD] knob.

"SP SEL" is displayed.

### 3 Select the Speaker type

Turn the [AUD] knob.

### 4 Exit Speaker Setting mode

Press the [AUD] knob.

# Audio Adjustments

## Audio Preset Memory

---

Registering the value setup by Sound Control. The memory cannot be erased by the Reset button.

### 1 Setup Sound Control

Refer to the following operations to setup the Sound Control.

- <Audio Control> (page 22)
- <Audio Setup> (page 23)

### 2 Select Audio Preset item during Menu mode (Other than Standby mode)

Select the "Audio Preset" display.

For how to select Function Control items, refer to <Function Control> (page 6).

### 3 Enter Audio Preset mode

Press the Control knob for at least 1 second.

### 4 Select the Audio Preset Memory

Turn the Control knob.

Select the "Memory" display.

### 5 Determine whether to put the Audio Preset in the memory

Press the Control knob.

"Memory?" is displayed.

### 6 Put the Audio Preset in the memory

Turn the Control knob to select "YES", and then press the Control knob.

"Memory Completed" is displayed.

### 7 Exit Audio Preset mode

Press the [FNC] button.



- Register 1 pair of Audio Preset Memory. You cannot register by the source.
- When you press the Reset, all the sources will be the setting value which is registered.
- The following items cannot be registered.  
Volume, Balance, Fader, Loudness, Volume offset, Dual Zone System, Rear Volume

## Audio Preset Recall

---

Recalling the sound setup registered by <Audio Preset Memory> (page 24).

### 1 Select the source

For how to select source item, refer to <Power/Source Select button> of <Basic Operation> (page 4).

### 2 Select Audio Preset item during Menu mode (Other than Standby mode)

Select the "Audio Preset" display.

For how to select Function Control items, refer to <Function Control> (page 6).

### 3 Enter Audio Preset mode

Press the Control knob for at least 1 second.

### 4 Select the Audio Preset Recall

Turn the Control knob.

Select the "Recall" display.

### 5 Determine whether to recall the Audio Preset

Press the Control knob.

"Recall?" is displayed.

### 6 Recall the Audio Preset

Turn the Control knob to select "YES", and then press the Control knob.

"Recall Completed" is displayed.

### 7 Exit Audio Preset mode

Press the [FNC] button.



- The User memory of "SYSTEM Q" in <Audio Control> (page 22) is changed to the value which was recalled.
- The source tone memory item of <Audio Control> (page 22) is changed to the value which was recalled by the selected source.

# Bluetooth Setup

## Registering Bluetooth device

To make your Bluetooth device (cell-phone or audio player) usable with this unit, you need to register it (pairing). You can register up to five Bluetooth devices to this unit.

### When registering from Bluetooth devices

**1 Turn on the control unit.**

**2 Start registering a unit by operating the Bluetooth device**

By operating the Bluetooth device, register the hands-free unit or audio player (pairing). Select "KENWOOD BT CD/R-2P2" from the list of connected units.

**3 Enter a PIN code**

Input the PIN code registered as mentioned in <Registering PIN Code> (page 26).

Check that registration is complete on the Bluetooth device.

**4 By operating the Bluetooth device, start hands-free or audio connection.**

### When registering from this unit

**1 Select Bluetooth device registration item during Menu mode (In Standby mode)**

"Device Regist" is displayed.  
For how to select Function Control items, refer to <Function Control> (page 6).

**2 Enter Bluetooth device registration mode**  
**Press the Control knob for at least 1 second.**

Search for the Bluetooth device.  
When search is completed, "Finished" is displayed.

**3 Select the Bluetooth device**

Turn the Control knob or push it towards up or down to select the Bluetooth device.  
Press the Control knob to determine the selection.

**4 Input the PIN code**

Operation type	Operation
Select the numbers.	Turn the Control knob or push it towards up or down.
Move to the next digit.	Push the Control knob towards right.
Delete the last digit.	Push the Control knob towards left.

**5 Transmit the PIN code**

**Press the Control knob for at least 1 second.**  
If "Pairing Success" is displayed, registration is

completed.

**6 Return to the device list**  
**Press the Control knob.**

**7 Exit Bluetooth device registration**  
**Press the [FNC] button.**



- This unit allows up to eight digits to be input for a PIN code. If a PIN code cannot be input from this unit, it can be input from the Bluetooth device.
- If there are 5 or more Bluetooth devices registered, you cannot register a new Bluetooth device.
- If the error message appears even though the PIN code is correct, try <Registering Special Bluetooth device> (page 25).

## Registering Special Bluetooth device

Allow registration of a special device that cannot be registered normally (pairing).

**1 Select special device registration item during Menu mode (In Standby mode)**

"SPCL DVC Select" is displayed.  
For how to select Function Control items, refer to <Function Control> (page 6).

**2 Enter special device registration mode**  
**Press the Control knob for at least 1 second.**

A list is displayed.

**3 Select a device name**

Turn the Control knob or push it towards up or down to select a device name.  
Press the Control knob to determine the selection.

If "Completed" is displayed, registration is completed.

**4 Go through the procedure of <Registering Bluetooth device> (page 25) and complete the registration (pairing).**

**Cancelling special device registration mode**

**Press the [FNC] button.**



- If the device name is not in the list, select "Other Phone".

# Bluetooth Setup

## Registering PIN Code

By operating the Bluetooth device, specify the PIN code necessary for registering this unit.

### 1 Select PIN code edit item during Menu mode (In Standby mode)

"PIN Code Edit" is displayed.

For how to select Function Control items, refer to <Function Control> (page 6).

### 2 Enter PIN code edit mode

Press the Control knob for at least 1 second.

The current setting of PIN code is displayed.

### 3 Input the PIN code

Operation type	Operation
Select the numbers.	Turn the Control knob or push it towards up or down.
Move to the next digit.	Push the Control knob towards right.
Delete the last digit.	Push the Control knob towards left.

### 4 Register a PIN code

Press the Control knob for at least 1 second.

If "Completed" is displayed, registration is completed.

### 5 Exit the PIN code edit mode

Press the [FNC] button.



- By default, "0000" is specified.
- A PIN code can be specified with up to eight digits.

## Downloading the Phone Book

Download the phone book data from the cell-phone to this unit so that you can use the Phone Book of this unit.

### To download automatically

If the cell-phone supports a phone book synchronization function, the phone book is downloaded automatically after Bluetooth connection.



- Setting on the cell-phone may be required.
- If no phone book data is found in the unit even after the complete display, your cell-phone may not support automatic download of phone book data. In this case, try downloading manually.

### To download from the cell-phone manually

#### 1 By operating the cell-phone, end the hands-free connection.

#### 2 By operating the cell-phone, send the phone book data to this unit

By operating the cell-phone, download the phone book data to this unit.

- During downloading:  
"Downloading" is displayed.
- After completion of downloading:  
"Completed" is displayed.

#### 3 By operating the cell-phone, start the hands-free connection.

### To clear the downloading completion message

Press any button.



- Up to 1000 phone numbers can be registered for each registered cell-phone.
- Up to 32 digits can be registered for each phone number along with up to 50\* characters representing a name. (\* 50: Number of alphabetic alphabetical characters. Fewer characters can be input depending on the type of characters.)
- To cancel downloading of the phone book data, operate the cell-phone.

## Selecting the Bluetooth device You Wish to Connect

---

When two or more Bluetooth devices have already been registered, you need to select the Bluetooth device you wish to use.

### 1 Select Bluetooth device selection item during Menu mode

#### Cell-phone

(In Standby mode)

"Phone Selection" is displayed.

#### Audio player

"Audio Selection" is displayed.

For how to select Function Control items, refer to <Function Control> (page 6).

### 2 Enter Bluetooth device selection mode Press the Control knob for at least 1 second.

'(name)' is displayed.

### 3 Select the Bluetooth device

Turn the Control knob or push it towards up or down.

### 4 Set up the Bluetooth device Push the Control knob towards right or left.

'\*(name)' or '-(name)' is displayed.

"\*": The selected Bluetooth device is busy.

"-": The selected Bluetooth device is on standby.

" " (blank): The Bluetooth device is deselected.

### 5 Exit the Bluetooth device selection mode Press the [FNC] button.



- If a cell-phone is already selected, deselect it, and then select a different one.
- If you cannot select a device using the audio player, connect the device with the audio player.

## Deleting a Registered Bluetooth device

---

You can delete a registered Bluetooth device.

### 1 Select Bluetooth device deletion item during Menu mode (In Standby mode)

"Device Delete" is displayed.

For how to select Function Control items, refer to <Function Control> (page 6).

### 2 Enter Bluetooth device deletion mode Press the Control knob for at least 1 second.

'(name)' is displayed.

### 3 Select the Bluetooth device

Turn the Control knob or push it towards up or down.

### 4 Delete the selected Bluetooth device

Press the Control knob.

Turn the Control knob to select "YES", and then press the Control knob.

### 5 Exit the Bluetooth device deletion mode Press the [FNC] button.



- When a registered cell-phone is deleted, its Phone Book, log, SMS, and voice tag are also deleted.

## Displaying the Firmware Version

---

Display the version of the firmware of this unit.

### 1 Select Bluetooth Firmware update item during Menu mode (In Standby mode)

"BT F/W Update" is displayed.

For how to select Function Control items, refer to <Function Control> (page 6).

### 2 Enter Bluetooth Firmware update mode Press the Control knob for at least 1 second.

The firmware version appears.

### 3 Exit Bluetooth Firmware update mode Press the [FNC] button.



- For how to update the firmware, access our website.  
<http://www.kenwood.com/bt/information/>

# Bluetooth Setup

## Adding a voice dialing command

Add a voice tag to the phonebook for voice dialing. You can register up to 35 voice tags.

### 1 Enter voice tag mode

Select **"BT" > "VOICE" > "NAME"**.

For how to select Function Control item, refer to <Function Control> (page 6).

### 2 Search for the name to register

Select the name to register with reference to 4 in <Calling a number in the PhoneBook> (page 17). If a voice tag has already been registered for a name, "\*" is displayed before the name.

### 3 Select a mode

Push the Control knob towards right or left.

Display	Operation
"N-REG"	Register a voice tag.
"N-CHK"*	Play a voice tag.
"N-DEL"*	Delete a voice tag.
" 	Return to step 2.

\* Displayed only when a name for which a voice tag has been registered is selected.

## Select "REG" (Register)

### 4 Register a voice tag (first)

Press the Control knob.

"Enter Voice 1" is displayed.

When a beep is heard, utter a voice tag within 2 seconds.

### 5 Confirm the voice tag (second)

Press the Control knob.

"Enter Voice 2" is displayed.

When a beep is heard, utter the same voice tag as that you uttered in step 4 within 2 seconds.

"Completed" is displayed.

### 6 End registration

Press the Control knob.

Return to step 2. You can register another voice tag continuously.



- If your voice cannot be recognized, a message is displayed. Pressing the Control knob allows you to retry voice input. (page 24)

## Select "CHK" (Play)

### 4 Press the Control knob.

Play the registered voice and return to step 2.

## Select "DEL" (Delete)

### 4 Delete a voice tag

Press the Control knob.

Turn the Control knob to select "YES", and then press the Control knob.

Return to step 2.

## Exit the voice tag mode

Press the [FNC] button.



- Audio sound is not output during voice tag registration.

## Setting a Voice Command for Category

Add a voice tag to the phone number category (type) for voice calling.

### 1 Enter voice tag mode

Select **"BT" > "VOICE" > "TYPE"**.

For how to select Function Control item, refer to <Function Control> (page 6).

### 2 Select the category (type) you wish to set

Turn the Control knob or push it towards up or down.

"General"/"Home"/"Office"/"Mobile"/"Other"

### 3 Press the Control knob.

### 4 Select a mode

Push the Control knob towards right or left.

Display	Operation
"T-REG"	Register a voice tag.
"T-CHK"*	Play a voice tag.
"T-DEL"*	Delete a voice tag.
" 	Return to step 2.

\* Displayed only when a category (type) for which a voice tag has been registered is selected.

### 5 Register the category (type) by performing steps 4 to 6 in <Adding a voice dialing command> (page 28).

## Exit the voice tag mode

Press the [FNC] button.



- Set the voice tag for all the 5 categories. If the voice tag is not registered for all the categories, the Phonebook may not be recalled by voice command.

## Downloading the SMS

---

Download the short message (SMS) arrived at the cell-phone so that it can be read on this unit.

### 1 Enter SMS download mode

Select "BT" > "SMS" > "SMSDL".

For how to select Function Control item, refer to <Function Control> (page 6).

### 2 Start downloading

Press the Control knob.

"SMS Downloading" is displayed.

When the downloading finishes, "Completed" is displayed.

### 3 Exit the SMS download mode

Press the [FNC] button.



- The cell-phone must be able to transmit the SMS using Bluetooth. Setting on the cell-phone may be required. If the cell-phone does not support SMS function, the SMS download item in Function Control mode is not displayed.
- When the SMS is downloaded from the cell-phone, the unopened messages in the cell-phone are opened.
- The already-read and unread short messages can be respectively downloaded up to 75.

## SMS (Short Message Service)

---

The SMS arrived at the cell-phone is displayed on the receiver.

A newly arrived message is displayed.



- To prevent car accidents, the driver should not read the SMS while driving.

### When a new message arrives

"SMS Received" is displayed.

The display disappears with any operations.

### Displaying the SMS

#### 1 Enter SMS Inbox mode

Select "BT" > "SMS" > "INBOX".

For how to select Function Control item, refer to <Function Control> (page 6).

A message list appears.

#### 2 Select a message

Turn the Control knob or push it towards up or down.

- Each pressing of the [TI] button switches the number of items displayed between 3 or 1.

#### 3 Display the text

Press the Control knob.

Pressing this button again allows you to select a message again.

- If you push the Control Knob towards right or left when the "◀" or "▶" symbol is displayed, the following message is displayed.


#### 4 Exit the SMS Inbox mode

Press the [FNC] button.



- The unopened message is displayed at the beginning of the list. Other messages are displayed in the order of reception. (Receipt date display: Year-Month-Day-Hour-Minute)
- The SMS that has arrived when the cell-phone is not linked with Bluetooth cannot be displayed. Download the SMS.
- The short message cannot be displayed during downloading the SMS.

# Basic Operations of remote control

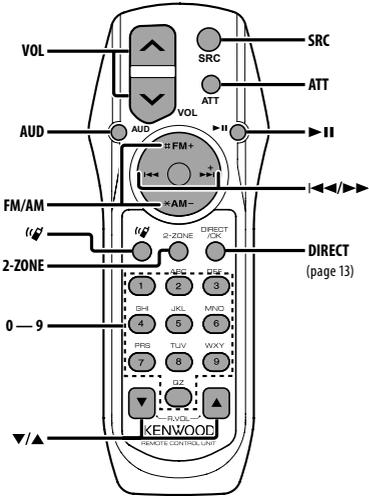

## General control

- Volume control [VOL]
- Source select [SRC]
- Volume reduce [ATT]

## In Audio control

- Audio item select [AUD]
- Adjust the Audio item [VOL]



- Refer to <Audio Control> (page 22) for the operation method, such as the procedures for Audio control and others operations.

## Dual Zone control

- Dual zone system on and off [2-ZONE]
- Rear channel volume control [▲]/[▼]

## In Tuner source

- Band select [FM]/[AM]
- Station select [◀]/[▶]
- Recall preset stations [1] — [6]

## In CD/USB source

- Music select [◀]/[▶]
- Folder select [FM]/[AM]
- Pause/Play [▶II]

## In Bluetooth audio source

- Music select [◀]/[▶]
- Pause/Play [▶II]

## Hands-free phone control

### Making a call

Enter the dialing method selection mode



Select a dialing method [▶II]

### Number dial input

Operation type	Operation
Input a digit.	[0] — [9] buttons
Input "+".	[▶▶] button
Input "#".	[FM] button
Input "*".	[AM] button
Clear the entered phone number.	[◀◀] button

Make a call [DIRECT]

### **Receiving a call**

Answer the call 

Switch between the private talk mode and the hands-free talk mode 

### **Call waiting**

Answer Another Incoming Call with the Current Call Suspended 

Answer another Incoming Call after Terminating the Current Call  [SRC]

Continu the Current Call  [1]

### **During a call**

End the call  [SRC]

Adjust the voice volume  [VOL]




- Do not set the remote control in hot places such as on the dashboard.

### **Loading and Replacing battery**

Use two "AA"/"R6"-size batteries.

Slide the cover while pressing downwards to remove it as illustrated.

Insert the batteries with the + and – poles aligned properly, following the illustration inside the case.

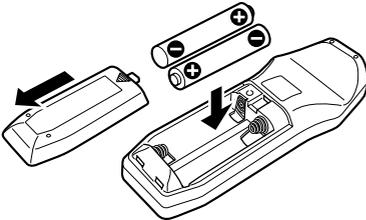

# Appendix


## About Audio file

- **Playable Audio file**  
AAC-LC (.m4a), MP3 (.mp3), WMA (.wma)
- **Playable disc media**  
CD-R/RW/ROM
- **Playable disc file format**  
ISO 9660 Level 1/2, Joliet, Romeo, Long file name.
- **Playable USB device**  
USB mass storage class
- **Playable USB device file system**  
FAT16, FAT32

Although the audio files are complied with the standards listed above, the play maybe impossible depending on the types or conditions of media or device.

### • Playing order of the Audio file

In the example of folder/file tree shown below, the files are played in the order from ① to ⑩.

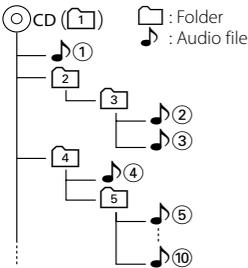

An online manual about audio files is put on the site, [www.kenwood.com/audiofile/](http://www.kenwood.com/audiofile/). On this online manual, detailed information and notes which are not written in this manual are provided. Make sure to read through the online manual as well.



- In this manual, the word “USB device” is used for flash memories and digital audio players which have USB terminals.
- The word “iPod” appearing in this manual indicates the iPod connected with the iPod connection cable (optional accessory). The iPod connected with the iPod connection cable can be controlled from this unit. iPods that can be connected with the iPod connection cable are the iPod nano, Fifth Generation iPod, iPod classic, and iPod touch. Other iPods cannot be connected.  
It may be different from the playlist in iPod.

## About USB device

- If you start playback after connecting the iPod, the music that has been played by the iPod is played first.  
In this case, “RESUMING” is displayed without displaying a folder name, etc. Changing the browse item will display a correct title, etc.
- When the iPod is connected to this unit, “KENWOOD” or “✓” is displayed on the iPod to indicate that you cannot operate the iPod.
- When the USB device is connected to this unit, it can be charged up provided that this unit is powered.
- Install the USB device in the place where it will not prevent you from driving your vehicle properly.
- You cannot connect a USB device via a USB hub and Multi Card Reader.
- Take backups of the audio files used with this unit. The files can be erased depending on the operating conditions of the USB device.  
We shall have no compensation for any damage arising out of erasure of the stored data.
- No USB device comes with this unit. You need to purchase a commercially available USB device.
- When connecting the USB device, usage of the CA-U1EX (option) is recommended.  
Normal playback is not guaranteed when a cable other than the USB compatible cable is used.  
Connecting a cable whose total length is longer than 5 m can result in abnormal playback.

## About KENWOOD “Music Editor” of PC application

- “Music Editor” is recorded in the CD-ROM attached to this unit.
- Refer to the user’s manual recorded in the installation CD-ROM and Help of “Music Editor” for the operation method of “Music Editor”.
- The unit can play USB device created by “Music Editor”.
- Information about “Music Editor” upgrade is put on the site, [www.kenwood.com](http://www.kenwood.com).

## About the Cell-Phone

This unit conforms to the following Bluetooth specifications:

<b>Version</b>	Bluetooth Standard Ver. 1.2
<b>Profile</b>	HFP (Hands Free Profile) OPP (Object Push Profile) PBAP (Phonebook Access Profile) SYNC (Synchronization Profile)

For the cell-phones verified for compatibility, access the following URL:

<http://www.kenwood.com/bt/information/>



- The units supporting the Bluetooth function have been certified for conformity with the Bluetooth Standard following the procedure prescribed by Bluetooth SIG. However, it may be impossible for such units to communicate with your cell-phone depending on its type.
- HFP is a profile used to make a hands-free call.
- OPP is a profile used to transfer data such as a phone book between units.

## About the Bluetooth Audio player

This unit conforms to the following Bluetooth specifications:

<b>Version</b>	Bluetooth Standard Ver. 1.2
<b>Profile</b>	A2DP (Advanced Audio Distribution Profile) AVRCP (Audio/Video Remote Control Profile)



- A2DP is a profile designed to transfer the music from an audio player.
- AVRCP is a profile designed to control playback and selection of music by an audio player.

# Appendix

## Menu Glossary

### • SRC Select

Setting up the Source Select mode.

- 1 : Displays source icons for your choice.
- 2 : Allows you to select sources one after another.

### • BT DVC Status (Displaying the Bluetooth device Status)

You can display the connection status, signal strength, and battery level.

 : Bluetooth cell-phone connection status.

 : Bluetooth Audio connection status.

 : Battery level of cell-phone.

Full      Nearly dead

 : Signal strength of cell-phone.

Maximum     Minimum



- Icons are not displayed if information cannot be obtained from the cell-phone.
- Since the number of steps of the control unit is different from that of the cell-phone, the statuses displayed on the control unit may discord from those displayed on the cell-phone.

### • Auto Answer (Setting the Time Interval for Automatic Answer)

This function automatically answers (responds to) a call after lapse of the preset time interval for automatic answer.

"OFF" : Does not answer the phone call automatically.

"0" : Automatically answers the phone call at once.

"1s" – "99s" : Automatically answers the phone call after lapse of 1 – 99 seconds.



- If the time set in the cell-phone is shorter than that set in the unit, the former will be used.
- This function does not work for call waiting.

### • SP Select (Setting up the Voice Output Speakers)

You can specify the voice output speakers.

"Front" : Outputs voice from the front-left and front-right speakers.

"F-R" : Outputs voice from the front-right speaker.

"F-L" : Outputs voice from the front-left speaker.



- Select the speaker which is further from the microphone in order to prevent howling or echoes.

### • Call Beep (Setting the Beep of the Incoming Call)

You can output a beep from the speaker when a call comes in.

"ON" : Beep is heard.

"OFF" : Beep is canceled.

### • Display

If this unit is not operated at least 5 seconds with "OFF" selected, the display turns off. During a setup mode, the display will not turn off even if 5 seconds lapse.

### • ILM Dimmer (Illumination dimmer)

Reduces the key illumination brightness.

AUTO: Dims the illumination in conjunction with the Light switch of the vehicle.

MNAL1: Dims the illumination constantly.

MNAL2: Turns off the upper and lower illuminations, and dims the left and right illuminations.

OFF: Does not dim the illumination.

### • SWPRE (Switching Preout)

Switches the preout between rear output ("Rear") and subwoofer output ("Sub-W").

### • AMP

Selecting "OFF" turns off the built-in amplifier.

Turning off the built-in amplifier improves the quality of the sound from Preout.

### • Zone2 (Dual Zone)

Set the destination (front speaker "Front" or rear speaker "Rear") of the sub source (AUX IN) when the Dual Zone function is turned on.

### • Supreme

Technology to extrapolate and supplement with proprietary algorithm, the high-frequency range that is cut off when encoding at low bit rate (less than 128Kbps, Sampling frequency is 44.1kHz). Supplementing is optimized by compression format (AAC, MP3 or WMA) and processed according to bit rate.

The effect is negligible with music that is encoded at high bit rate, variable bit rate or has minimal high frequency range.

The effect is negligible with music that is encoded at high bit rate, variable bit rate or has minimal high frequency range.

### • News (News Bulletin with Timeout Setting)

Automatically receives news bulletin when it starts. Set the time during which interrupt is to be disabled after start of another news bulletin.

Changing "News 00min" to "News 90min" turns this function ON.

If news bulletin starts when this function is ON, "NEWS" is displayed and news is received. If "20min" is has been set, reception of another news bulletin will not start for 20 minutes.

The news bulletin volume is the same level that was set for Traffic Information.

### • Seek Mode (Tuning mode select)

Select a tuning mode of the radio.

Tuning mode	Display	Operation
Auto seek	"Auto 1"	Automatic search for a station.
Preset station seek	"Auto 2"	Search in order of the stations in the Preset memory.
Manual	"Manual"	Normal manual tuning control.

- **AF (Alternative Frequency)**

When the reception is poor, automatically alternate to another frequency broadcasting the same program in the same RDS network with better reception.

- **Russian (Russian language setting)**

When this is set to ON, the following character strings are displayed in Russian:  
Folder name/ File name/ Song title/ Artist name/  
Album name/ Phonebook/ Short message

- **Power OFF (Power OFF Timer)**

Setting the timer to turn this unit's power OFF automatically when Standby mode continues. Using this setting can save the vehicle's battery power.

-- -: Power OFF Timer function is OFF.

20min: Turns the power OFF after 20 minutes.  
(Factory setting)

40min: Turns the power OFF after 40 minutes.

60min: Turns the power OFF after 60 minutes.

- **CD Read**

Sets the method for reading CD.

When unable to play special format CD, set this function to "2" to force playing. Note that some music CD may be unplayable even when set to "2". In addition, audio files cannot be played when set to "2". Normally, keep this set to "1".

1 : Automatically distinguishes between audio file disc and music CD when playing disc.

2 : Forces playing as music CD.

This Product is not installed by the manufacturer of a vehicle on the production line, nor by the professional importer of a vehicle into an EU Member State.

### **Information on Disposal of Old Electrical and Electronic Equipment (applicable for EU countries that have adopted separate waste collection systems)**



Products with the symbol (crossed-out wheeled bin) cannot be disposed as household waste.

Old electrical and electronic equipment should be recycled at a facility capable of handling these items and their waste byproducts. Contact your local authority for details in locating a recycle facility nearest to you. Proper recycling and waste disposal will help conserve resources whilst preventing detrimental effects on our health and the environment.


### **The marking of products using lasers (Except for some areas)**

**CLASS 1  
LASER PRODUCT**

The label is attached to the chassis/case and says that the component uses laser beams that have been classified as Class 1. It means that the unit is utilizing laser beams that are of a weaker class. There is no danger of hazardous radiation outside the unit.



# Connecting Wires to Terminals

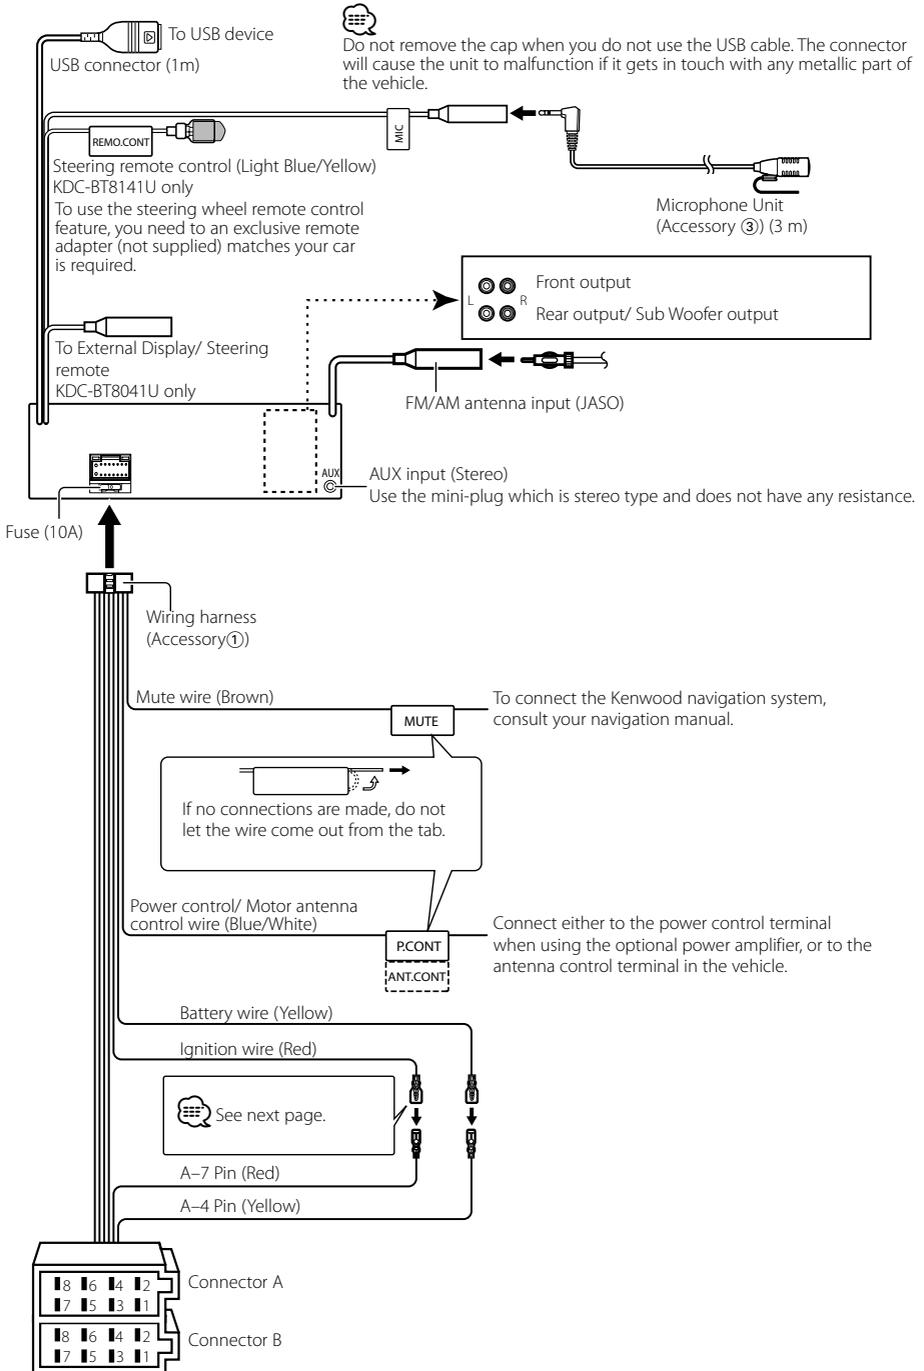

# Connecting Wires to Terminals

## Connector Function Guide

Pin Numbers for ISO Connectors	Cable Colour	Functions
External Power Connector		
A-4	Yellow	Battery
A-5	Blue/White	Power Control
A-6	Orange/White	Dimmer
A-7	Red	Ignition (ACC)
A-8	Black	Earth (Ground) Connection
Speaker Connector		
B-1	Purple	Rear Right (+)
B-2	Purple/Black	Rear Right (-)
B-3	Gray	Front Right (+)
B-4	Gray/Black	Front Right (-)
B-5	White	Front Left (+)
B-6	White/Black	Front Left (-)
B-7	Green	Rear Left (+)
B-8	Green/Black	Rear Left (-)

## ⚠ WARNING

 
### Connecting the ISO Connector

The pin arrangement for the ISO connectors depends on the type of vehicle you drive. Make sure to make the proper connections to prevent damage to the unit.


The default connection for the wiring harness is described in [1] below. If the ISO connector pins are set as described in [2], make the connection as illustrated.

Please be sure to reconnect the cable as shown [2] below to install this unit to the **Volkswagen** vehicles etc.

[1] (Default setting) The A-7 pin (red) of the vehicle's ISO connector is linked with the ignition, and the A-4 pin (yellow) is connected to the constant power supply.




[2] The A-7 pin (red) of the vehicle's ISO connector is connected to the constant power supply, and the A-4 pin (yellow) is linked to the ignition.

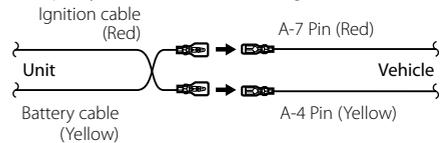

# Installation/Removing the Unit


## Installation

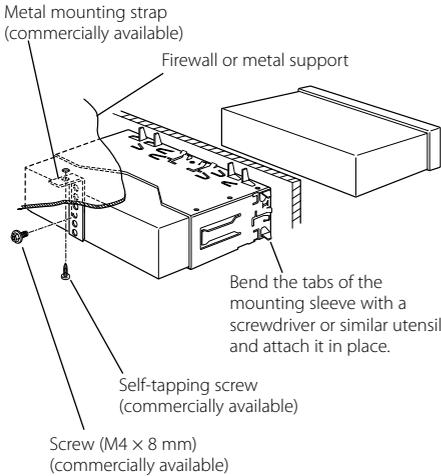

- Make sure that the unit is installed securely in place. If the unit is unstable, it may malfunction (for example, the sound may skip).

## Removing the hard rubber frame

- 1 Engage the catch pins on the removal tool and remove the two locks on the upper level. Upper the frame and pull it forward as shown in the figure.

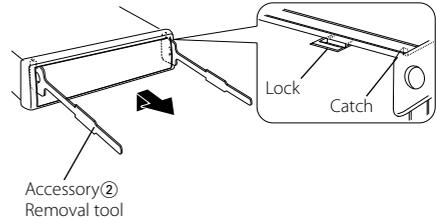

- 2 When the upper level is removed, remove the lower two locations.




- The frame can be removed from the bottom side in the same manner.

## Removing the Unit

- 1 Refer to the section <Removing the hard rubber frame> and then remove the hard rubber frame.
- 2 Remove the screw (M4 × 8) on the back panel.
- 3 Insert the two removal tools deeply into the slots on each side, as shown.
- 4 Lower the removal tool toward the bottom, and pull out the unit halfway while pressing towards the inside.

Screw (M4 × 8 mm)  
(commercially available)

Accessory②

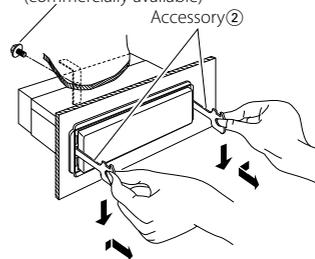


- Be careful to avoid injury from the catch pins on the removal tool.
- 5 Pull the unit all the way out with your hands, being careful not to drop it.


# Installation/Removing the Unit

## Installation the Microphone Unit

- 1 Check the installation position of the microphone (accessory ③).
- 2 Remove oil and other dirt from the installation surface.
- 3 Install the microphone.
- 4 Wire the microphone cable up to the hands-free box with it secured at several positions using tape or the like.

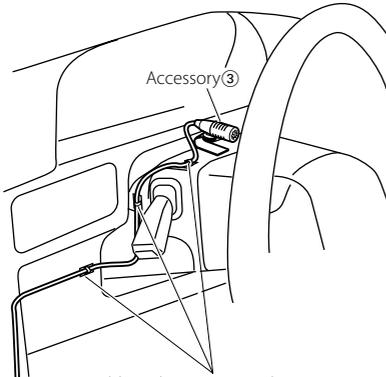

Fix a cable with a commercial item of tape.

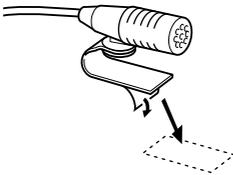

Peel the release coated paper of double-face adhesive tape to fix on the place shown above.



Adjust the direction of the microphone to the driver.



- Install the microphone as far as possible from the cell-phone.

# Troubleshooting Guide

Some functions of this unit may be disabled by some settings made on this unit.

- !** • **Cannot set up the subwoofer.**
- **Cannot set up the High Pass Filter.**
- **Cannot set up the Fader.**
- **No Audio control effect on AUX.**
  - ▶ • Preout is not set to subwoofer. ☞ "MENU" > "SWPRE" of <Function Control> (page 6)
  - <Subwoofer output> of <Basic Operation> (page 4) is not set to On.
  - The Dual zone function is enabled. ☞ <Audio Setup> (page 23)

- !** • **Cannot set up the subwoofer phase.**
  - ▶ The Low Pass Filter is set to Through. ☞ <Audio Setup> (page 23)

- !** • **Cannot set up the audio control.**
- **Cannot set up the audio setup.**
  - ▶ You cannot set up during hands-free calling.

- !** • **Cannot select the output destination of the subsource in the Dual zone.**
- **Cannot adjust the volume of the rear speakers.**
  - ▶ The Dual zone function is disabled. ☞ <Audio Setup> (page 23)

- !** • **Cannot register a security code.**
- **Cannot set up Display Illumination Control.**
  - ▶ <Demonstration mode Setting> (page 21) is not turned off.

- !** • **Cannot set up the Power-off timer.**
  - ▶ <Security Code> (page 20) is not set.

What might seem to be a malfunction in your unit may just be the result of slight misoperation or miswiring. Before calling service, first check the following table for possible problems.

## General

- ?** **The Touch Sensor Tone does not sound.**
  - ✓ The preout jack is being used.
    - ☞ The Touch Sensor Tone cannot be output from the preout jack.
- ?** **The illumination flashes when the knob or button is operated.**
  - ✓ This is the key illumination effect.
    - ☞ You set this effect in "MENU" > "ILM Effect" of <Function Control> (page 6).
- ?** **The key illumination effect brought about in conjunction with the sound volume is small.**
  - ✓ The key illumination effect may be insufficient depending on the sound volume and sound quality.

## Tuner source

- ?** **Radio reception is poor.**
  - ✓ The car antenna is not extended.
    - ☞ Pull the antenna out all the way.

## Disc source

- ?** **The specified disc does not play, but another one plays instead.**
  - ✓ The specified CD is quite dirty.
    - ☞ Clean the CD, referring to the CD cleaning of the section on <Handling CDs> (page 3).
  - ✓ The disc is loaded in a different slot from that specified.
    - ☞ Eject the disc magazine and check the number for the specified disc.
  - ✓ The disc is severely scratched.
    - ☞ Try another disc instead.

## Audio file source

- ?** **The sound skips when an Audio file is being played.**
  - ✓ The media is scratched or dirty.
    - ☞ Clean the media, referring to the CD cleaning of the section on <Handling CDs> (page 3).
  - ✓ The recording condition is bad.
    - ☞ Record the media again or use another media.
- ?** **Noise is heard when carrying out Folder Search.**
  - ✓ Noise may be produced if folders without audio files exist continuously in the playing media.
    - ☞ Do not make folders without audio files.

## Bluetooth audio source

- ?** **The Bluetooth audio player cannot be registered (pairing).**
  - ✓ The PIN code is fixed.
    - ☞ When a PIN code is specified in the Instruction Manual for Bluetooth Audio Player, register it with reference to <Registering PIN Code> (page 26) to register the Bluetooth audio player. If no PIN code is specified in the Instruction Manual, try "0000".

- ?** **The sound from the Bluetooth audio player is discontinuous.**
  - ✓ The distance between this unit and audio player is too far.
    - ☞ Move the audio player nearer to this unit.
  - ✓ Another Bluetooth device is affecting the Bluetooth communication.
    - ☞ Turn off another Bluetooth device.
    - ☞ Move another Bluetooth device away from this unit.
  - ✓ Another Bluetooth device or profile is used for communication.
    - ☞ The downloading of the Phone book or the SMS disconnects the sound.

# Troubleshooting Guide

## Hands-free

### ? The hands-free talk volume is low.

- ✓ The hands-free talk volume is set at a low level.
  - ☞ The hands-free talk volume can be adjusted independently. Adjust it during hands-free talk.

### ? No sound is heard from the rear speakers.

- ✓ You are talking in the hand-free talk mode.
  - ☞ No sound is heard from the rear speakers in the hands-free talk mode.

### ? No beep is heard at reception of an incoming call.

- ✓ No beep is heard depending on the type of your cell-phone.
  - ☞ The "MENU" > "Call Beep" of <Function Control> (page 6) is set ON.

### ? Voice is not recognized.

- ✓ The vehicle window is open.
  - ☞ If the surrounding noise is large, voice cannot be recognized properly. Close the vehicle windows to reduce noise.
- ✓ Small voice.
  - ☞ If voice is too small, it cannot be recognized properly. Speak into the microphone a little more loudly and naturally.
- ✓ The person uttering the voice tag is not the one who registered the it.
  - ☞ Only the voice of the person who registered the voice tag can be recognized.

## The messages shown below display your systems condition.

- TOC Error: The CD is quite dirty. The CD is upside-down. The CD is scratched a lot.
- Error 05: The disc is unreadable.
- Mecha Error: The unit is malfunctioning for some reason.
  - ☞ Then press the reset button on the unit. If the "Mecha Error" code does not disappear, consult your nearest service center.
- IN (Blink): The CD player section is not operating properly.
  - ☞ Reinsert the CD. If the CD cannot be ejected or the display continues to flash even when the CD has been properly reinserted, please switch off the power and consult your nearest service center.
- Protect: The speaker wire has a short-circuit or touches the chassis of the vehicle, and then the protection function is activated.
  - ☞ Wire or insulate the speaker cable properly and press the reset button. If the "Protect" code does not disappear, consult your nearest service center.
- Unsupported File: An Audio file is played with a format that this unit can't support.
- Copy Protection: A copy-protected file is played.
- Read Error: The file system of the connected USB device is broken.
  - ☞ Copy the files and folders for the USB device again. If the error message is still displayed, initialize the USB device or use other USB devices.
- No Device: The USB device is selected as a source although no USB device is connected.
  - ☞ Change the source to any source other than USB. Connect an USB device, and change the source to USB again.
- N/A Device: An unsupported USB device is connected.
- No Music Data/ Error 15:
  - The connected USB device contains no playable audio file.
  - Media was played that does not have data recorded that the unit can play.

USB ERROR (Blink):	Some trouble may have occurred to the connected USB device. <ul style="list-style-type: none"> <li>➤ Remove the USB device, then cycle the power switch to ON. If the same display is repeated, use another USB device.</li> </ul>	Too Soft:	Voice is too small and cannot be recognized.
iPod Error:	Connection to the iPod has failed. <ul style="list-style-type: none"> <li>➤ Check that the connected iPod is an iPod that is supported. See &lt;About Audio file&gt; (page 32) for information on supported iPods.</li> <li>➤ Remove the USB device and then reconnect it.</li> <li>➤ Confirm that the software for the iPod is the latest version.</li> </ul>	Too Loud:	Voice is too large to be recognized.
USB REMOVE:	The Remove mode has been selected for the USB device/iPod. You can remove the USB device/iPod safely.	Too Long:	The word or utterance is too long to be recognized.
No Number:	<ul style="list-style-type: none"> <li>• The calling party does not notify a caller ID.</li> <li>• There is no phone number data.</li> </ul>	No Phonebook:	Data is not contained in the phone book.
No Data:	<ul style="list-style-type: none"> <li>• There is no outgoing call list.</li> <li>• There is no incoming call list.</li> <li>• There is no missed call list.</li> </ul>	No Message:	No short message in In Box.
No Entry:	The cell-phone has not been registered (pairing).	No Voice Data:	The voice tag is not registered in the phonebook.
HF Disconnect:	The unit cannot communicate with the cell-phone.	Memory Full:	The number of voice tags reaches the maximum number to be registered in the phonebook.
Audio Disconnect:	The unit cannot communicate with the audio player.		
HF Error 07:	The memory cannot be accessed. <ul style="list-style-type: none"> <li>➤ Turn off the power and on again. If this message still appears, press the reset button on the control unit.</li> </ul>		
HF Error 68:	The unit cannot communicate with the cell-phone. <ul style="list-style-type: none"> <li>➤ Turn off the power and on again. If this message still appears, press the reset button on the control unit.</li> </ul>		
Unknown:	The Bluetooth device cannot be detected.		
Device Full:	5 Bluetooth device have already been registered. No more Bluetooth device cannot be registered.		
PIN Code NG:	The PIN code is wrong.		
Connect NG:	The unit cannot be connected to the device.		
Pairing Failed:	Pairing error.		
Err No Matching:	The voice tag is wrong. Voice cannot be recognized because of an unregistered voice tag, etc.		

# Specifications

## FM tuner section

---

- Frequency range (50 kHz space)
  - : 87.5 MHz – 108.0 MHz
- Usable sensitivity (S/N = 26dB)
  - : 0.7  $\mu$ V/75  $\Omega$
- Quieting Sensitivity (S/N = 46dB)
  - : 1.6  $\mu$ V/75  $\Omega$
- Frequency response ( $\pm$ 3.0 dB)
  - : 30 Hz – 15 kHz
- Signal to Noise ratio (MONO)
  - : 65 dB
- Selectivity (DIN) ( $\pm$ 400 kHz)
  - :  $\geq$  80 dB
- Stereo separation (1 kHz)
  - : 35 dB

## MW tuner section

---

- Frequency range (9 kHz space)
  - : 531 kHz – 1611 kHz
- Usable sensitivity (S/N = 20dB)
  - : 25  $\mu$ V

## LW tuner section

---

- Frequency range
  - : 153 kHz – 281 kHz
- Usable sensitivity (S/N = 20dB)
  - : 45  $\mu$ V

## Bluetooth section

---

- Technology
  - : Bluetooth 1.2 Certified
- Frequency
  - : 2.402 – 2.480 GHz
- Output Power
  - : +4dBm (MAX), 0dBm (AVE) Power Class 2
- Maximum Communication range
  - : Line of sight approx.10m (32.8 ft)
- Profiles
  - : HFP (Hands Free Profile)
  - : HSP (Headset Profile)
  - : OPP (Object Push Profile)
  - : PBAP (Phonebook Access Profile)
  - : SYNC (Synchronization Profile)
  - : SPP (Serial Port Profile)
  - : A2DP (Advanced Audio Distribution Profile)
  - : AVRCP (Audio/Video Remote Control Profile)

## CD player section

---

- Laser diode
  - : GaAlAs
- Digital filter (D/A)
  - : 8 Times Over Sampling
- D/A Converter
  - : 24 Bit
- Spindle speed
  - : 500 – 200 rpm (CLV)
- Wow & Flutter
  - : Below Measurable Limit
- Frequency response ( $\pm$ 1 dB)
  - : 10 Hz – 20 kHz
- Total harmonic distortion (1 kHz)
  - : 0.008 %
- Signal to Noise ratio (1 kHz)
  - : 110 dB
- Dynamic range
  - : 93 dB
- MP3 decode
  - : Compliant with MPEG-1/2 Audio Layer-3
- WMA decode
  - : Compliant with Windows Media Audio
- AAC decode
  - : AAC-LC “.m4a” files

## USB Interface

---

- USB Standard
  - : USB1.1/ 2.0 (Full speed)
- Maximum Supply current
  - : 500 mA
- File System
  - : FAT16/ 32
- MP3 decode
  - : Compliant with MPEG-1/2 Audio Layer-3
- WMA decode
  - : Compliant with Windows Media Audio
- AAC decode
  - : AAC-LC “.m4a” files

## Audio section

---

Maximum output power  
: 50 W x 4  
Full Bandwidth Power (at less than 1% THD)  
: 30 W x 4  
Speaker Impedance  
: 4 – 8  $\Omega$   
Tone action  
Bass : 100 Hz  $\pm$ 8 dB  
Middle : 1 kHz  $\pm$ 8 dB  
Treble : 10 kHz  $\pm$ 8 dB  
Preout level / Load (CD)  
: 2500 mV/10 k $\Omega$   
Preout impedance  
:  $\leq$  600  $\Omega$

## Auxiliary input

---

Frequency response ( $\pm$ 1 dB)  
: 20 Hz – 20 kHz  
Input Maximum Voltage  
: 1200 mV  
Input Impedance  
: 100 k $\Omega$

## General

---

Operating voltage (10.5 – 16V allowable)  
: 14.4 V  
Maximum Current consumption  
: 10 A  
Installation Size (W x H x D)  
: 182 x 53 x 155 mm  
Weight  
: 1.40 kg





## Declaration of Conformity with regard to the R&TTE Directive 1999/5/EC

### Manufacturer:

Kenwood Corporation  
2967-3 Ishikawa-machi, Hachioji-shi, Tokyo, 192-8525 Japan

### EU Representative's:

Kenwood Electronics Europe BV  
Amsterdamseweg 37, 1422 AC UITHOORN, The Netherlands



### English

Hereby, Kenwood declares that this unit KDC-BT8041U/ KDC-BT8141U is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

### Français

Par la présente Kenwood déclare que l'appareil KDC-BT8041U/ KDC-BT8141U est conforme aux exigences essentielles et aux autres dispositions pertinentes de la directive 1999/5/CE.

Par la présente, Kenwood déclare que ce KDC-BT8041U/ KDC-BT8141U est conforme aux exigences essentielles et aux autres dispositions de la directive 1999/5/CE qui lui sont applicables.

### Deutsch

Hiermit erklärt Kenwood, dass sich dieser KDC-BT8041U/ KDC-BT8141U in Übereinstimmung mit den grundlegenden Anforderungen und den anderen relevanten Vorschriften der Richtlinie 1999/5/EG befindet. (BMW)

Hiermit erklärt Kenwood die Übereinstimmung des Gerätes KDC-BT8041U/ KDC-BT8141U mit den grundlegenden Anforderungen und den anderen relevanten Festlegungen der Richtlinie 1999/5/EG. (Wien)

### Nederlands

Hierbij verklaart Kenwood dat het toestel KDC-BT8041U/ KDC-BT8141U in overeenstemming is met de essentiële eisen en de andere relevante bepalingen van richtlijn 1999/5/EG.

Bij deze verklaart Kenwood dat deze KDC-BT8041U/ KDC-BT8141U voldoet aan de essentiële eisen en aan de overige relevante bepalingen van Richtlijn 1999/5/EC.

### Italiano

Con la presente Kenwood dichiara che questo KDC-BT8041U/ KDC-BT8141U è conforme ai requisiti essenziali ed alle altre disposizioni pertinenti stabilite dalla direttiva 1999/5/CE.

### Español

Por medio de la presente Kenwood declara que el KDC-BT8041U/ KDC-BT8141U cumple con los requisitos esenciales y cualesquiera otras disposiciones aplicables o exigibles de la Directiva 1999/5/CE.

### Português

Kenwood declara que este KDC-BT8041U/ KDC-BT8141U está conforme com os requisitos essenciais e outras disposições da Directiva 1999/5/CE.

### Polska

Kenwood niniejszym oświadcza, że KDC-BT8041U/ KDC-BT8141U spełnia zasadnicze wymogi oraz inne istotne postanowienia dyrektywy 1999/5/EC.

### Český

Kenwood tímto prohlašuje, že KDC-BT8041U/ KDC-BT8141U je ve shodě se základními požadavky a s dalšími příslušnými ustanoveními Nařízení vlády č. 426/2000 Sb.

### Magyar

Alulírott, Kenwood, kijelenti, hogy a jelen KDC-BT8041U/ KDC-BT8141U megfelel az 1999/5/EC irányelvben meghatározott alapvető követelményeknek és egyéb vonatkozó előírásoknak.

### Svenska

Härmed intygar Kenwood att denna KDC-BT8041U/ KDC-BT8141U står i överensstämmelse med de väsentliga egenskapskrav och övriga relevanta bestämmelser som framgår av direktiv 1999/5/EG.

### Suomi

Kenwood vakuuttaa täten että KDC-BT8041U/ KDC-BT8141U tyyppinen laite on direktiivin 1999/5/EY oleellisten vaatimusten ja sitä koskevien direktiivin muiden ehtojen mukainen.

### Slovensko

S tem Kenwood izjavlja, da je ta KDC-BT8041U/ KDC-BT8141U v skladu z osnovnimi zahtevami in ostalimi ustreznimi predpisi Direktive 1999/5/EC.

### Slovensky

Spoločnosť Kenwood týmto vyhlasuje, že KDC-BT8041U/ KDC-BT8141U spĺňa základné požiadavky a ďalšie príslušné ustanovenia Direktívy 1999/5/EC.

### Dansk

Undertegnede Kenwood erklærer herved, at følgende udstyr KDC-BT8041U/ KDC-BT8141U overholder de væsentlige krav og øvrige relevante krav i direktiv 1999/5/EF.

### Ελληνικά

ΜΕ ΤΗΝ ΠΑΡΟΥΣΑ Kenwood ΔΗΛΩΝΕΙ ΟΤΙ ΚDC-BT8041U/ KDC-BT8141U ΣΥΜΜΟΡΦΩΝΕΤΑΙ ΠΡΟΣ ΤΙΣ ΟΥΣΙΩΔΕΙΣ ΑΠΑΙΤΗΣΕΙΣ ΚΑΙ ΤΙΣ ΛΟΙΠΕΣ ΣΧΕΤΙΚΕΣ ΔΙΑΤΑΞΕΙΣ ΤΗΣ ΟΔΗΓΙΑΣ 1999/5/ΕΚ.

### Eesti

Sellega kinnitab Kenwood, et see KDC-BT8041U/ KDC-BT8141U vastab direktiivi 1999/5/EC põhilistele nõudmistele ja muudele asjakohastele määrustele.

### Latviešu

Ar šo, Kenwood, apstiprina, ka KDC-BT8041U/ KDC-BT8141U atbilst Direktīvas 1999/5/EK galvenajām prasībām un citiem tās nosacījumiem.

### Lietuviškai

Šiuo, Kenwood, pareiškia, kad šis KDC-BT8041U/ KDC-BT8141U atitinka pagrindinius Direktyvos 1999/5/EB reikalavimus ir kitas svarbias nuostatas.

### Malti

Hawnhekk, Kenwood, jiddikjara li dan KDC-BT8041U/ KDC-BT8141U jikkonforma mal-htigijiet essenzjali u ma provvedimenti oħrajn relevanti li hemm fid-Direttiva 1999/5/EC.

### Українська

Компанія Kenwood заявляє, що цей виріб KDC-BT8041U/ KDC-BT8141U відповідає ключовим вимогам та іншим пов'язаним положенням Директиви 1999/5/EC.

# KENWOOD