





Correction in Instruction manual/ 使用说明书更正



The following corrections have been made to the NX-240/ NX-340 Instruction Manual.

Before Correction	After Correction
Page 1: UNPACKING AND CHECKING EQUIPMENT	
SUPPLIED ACCESSORIES	SUPPLIED ACCESSORIES
<ul style="list-style-type: none">Battery charger/ AC adapter (KSC-35S^{*1})..... 1Li-ion Battery pack (KNB-45L^{*1})..... 1	 DELETE
Note:	Note:
◆ ^{*1} Supplied with C6 type NX-340.	 DELETE



Page 4: CHARGING THE BATTERY PACK (KSC-35S)

- CHARGING THE BATTERY PACK (KSC-35S)  (KSC-35S) DELETE
- The indicator of the battery charger when charging is completed has been changed.
Lights Green  **Flashing Green**

对NX-240/ NX-340使用说明书进行了以下更正。

更正前	更正后
第1页: 拆开包装箱并检查设备	
随机附件	随机附件
<ul style="list-style-type: none">电池充电器/电源适配器 (KSC-35S^{*1})..... 1锂离子电池组(KNB-45L^{*1}) 1	 删除
注:	注:
◆ ^{*1} C6型NX-340附带。	 删除

第4页: 对电池组充电 (KSC-35S)

- 对电池组充电 (KSC-35S)  (KSC-35S) 删除
- 充电完成时电池充电器的指示灯已变更。
灯点亮绿色  **闪烁绿色**

