# KENWOOD

# **DNX4150BT** DNX4150BTM DNX4150DAB

GPS NAVIGATION SYSTEM

## **Quick Start Guide**

JVCKENWOOD Corporation





















You can update the system by connecting a USB device containing an update file.

For updating the system, visit <a href="http://www.kenwood.com/cs/ce/">http://www.kenwood.com/cs/ce/</a>.

## Contents

About the Quick start guide2
Precautions3
Safety Precautions and Important Information5
First Step6
Functions of the Buttons on the Front Panel.8
Insert a SD Card9
Common Operations9
How to Use the Navigation System11
How to Play Music12
How to Play Movie/Picture14
How to Listen to the DAB/ Radio14
How to Make a Phone Call15
Installation16
About this Unit29

# About the Quick start guide

This Ouick Start Guide describes basic functions of this unit.

For functions not described in this Guide, refer to the Instruction Manual on the following website:

http://manual.kenwood.com/edition/im386/

To refer to Instruction manual, a PC loaded with Microsoft® Windows XP/Vista/7 or Mac OS X® 10.4 or later is required in addition to Adobe® Reader™ 7.1 or Adobe® Acrobat® 7.1 or later.

The Instruction manual is subject to change for modification of specifications and so forth. Be sure to download the latest edition of the Instruction manual for reference

## NOTE

- · The panels shown in this guide are examples used to provide clear explanations of the operations. For this reason, they may be different from the actual panels.
- In operation procedures, bracket shape indicates the key or button you should control.
  - < >: indicates the name of panel buttons.
  - ]: indicates the name of touch keys

# **Precautions**

## **▲**WARNING

# ■ To prevent injury or fire, take the following precautions:

- To prevent a short circuit, never put or leave any metallic objects (such as coins or metal tools) inside the unit.
- Do not watch or fix your eyes on the unit's display when you are driving for any extended period.
- If you experience problems during installation, consult your Kenwood dealer.

## Precautions on using this unit

- When you purchase optional accessories, check with your Kenwood dealer to make sure that they work with your model and in your area.
- You can select language to display menus, audio file tags, etc. See *Language setup (P.75)* in the Instruction Manual.
- The Radio Data System or Radio Broadcast Data System feature won't work where the service is not supported by any broadcasting station.
- The unit may not function properly if the connectors between the unit and front panel are dirty. Detach the front panel and clean the connector with a cotton swab gently, being careful not to damage the connector.

## Precautions on battery

- Put the remote control in a place where it will not move during braking or other operations. A dangerous situation could result, if the remote control falls down and gets wedged under the pedals while driving.
- Do not leave the battery near fire or under direct sunlight. A fire, explosion or excessive heat generation may result.
- Do not recharge, short, break up or heat the battery or place it in an open fire. Such actions may cause the battery to leak fluid. If spilled fluid comes in contact with your eyes or on clothing, immediately rinse with water and consult a physician.
- Place the battery out of reach of children. In the unlikely event that a child swallows the battery, immediately consult a physician.

## Protecting the monitor

· Put the remote control in a place where it will

not move during braking or other operations. A dangerous situation could result, if the remote control falls down and gets wedged under the pedals while driving.

## Protecting the monitor

Put the remote control in a place where it will not move during braking or other operations. A dangerous situation could result, if the remote control falls down and gets wedged under the pedals while driving.

## Lens fogging

When you turn on the car heater in cold weather, dew or condensation may form on the lens in the disc player of the unit. Called lens fogging, this condensation on the lens may not allow discs to play. In such a situation, remove the disc and wait for the condensation to evaporate. If the unit still does not operate normally after a while, consult your Kenwood dealer.

## Precautions on handling discs

- · Do not touch the recording surface of the disc.
- Do not stick tape etc. on the disc, or use a disc with tape stuck on it.
- · Do not use disc type accessories.
- Clean from the center of the disc and move outward.
- When removing discs from this unit, pull them out horizontally.
- If the disc center hole or outside rim has burrs, use the disc only after removing the burrs with a ballpoint pen etc.
- Discs that are not round cannot be used.





- · 8-cm (3 inch) discs cannot be used.
- Discs with coloring on the recording surface or discs that are dirty cannot be used.
- This unit can only play the CDs with



This unit may not correctly play discs which do not have the mark.

 You cannot play a disc that has not been finalized. (For the finalization process see your writing software, and your recorder instruction manual.)

## Acquiring GPS signal

The first time you turn on this unit, you must wait while the system acquires satellite signals for the first time. This process could take up to several minutes. Make sure your vehicle is outdoors in an open area away from tall buildings and trees for fastest acquisition.

After the system acquires satellites for the first time, it will acquire satellites quickly each time thereafter.

## Cleaning the Unit


If the front panel of this unit is stained, wipe it with a dry soft cloth such as a silicon cloth. If the front panel is stained badly, wipe the stain off with a cloth moistened with neutral cleaner, then wipe it again with a clean soft dry cloth.

## **↑** CAUTION

 Applying spray cleaner directly to the unit may affect its mechanical parts. Wiping the front panel with a hard cloth or using a volatile liquid such as thinner or alcohol may scratch the surface or erase screened print.

## How to reset your unit

If the unit or the connected unit fails to operate properly, reset the unit.

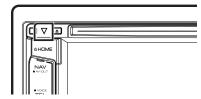

## NOTE

- Disconnect the USB device before pressing the <Reset> button. Pressing the <Reset> button with the USB device connected can damage the data stored in the USB device. For how to disconnect the USB device, see How to Play Music (P.12).
- When the unit is turned on after resetting, the Initial SETUP screen appears. See First Step (P.6).

# Safety Precautions and Important Information

Read this information carefully before starting to operate the Kenwood Car Navigation System and follow the instructions in this manual. Neither Kenwood nor Garmin shall be liable for problems or accidents resulting from failure to observe the instructions in this manual.

## **▲**WARNING

Failure to avoid the following potentially hazardous situations could result in an accident or collision resulting in death or serious injury.

When navigating, carefully compare information displayed on the navigation system to all available navigation sources, including information from street signs, visual sightings, and maps. For safety, always resolve any discrepancies or questions before continuing navigation.

Always operate the vehicle in a safe manner. Do not become distracted by the navigation system while driving, and always be fully aware of all driving conditions. Minimize the amount of time spent viewing the screen of the navigation system while driving, and use voice prompts when possible. Do not enter destinations, change settings, or access any functions requiring prolonged use of the navigation system controls while driving. Stop your vehicle in a safe and legal manner before attempting such operations.

Keep the system volume at a low enough level to be able to hear outside noises while driving. If you can no longer hear outside noises, you may be unable to react adequately to the traffic situation. This may cause accidents.

The navigation system will not display the correct current position of the vehicle the first time it is used after purchase, or if the vehicle battery is disconnected. GPS satellite signals will soon be received, however, and the correct position will be displayed.

Be careful of the ambient temperature. Using the navigation system at extreme temperatures can lead to malfunction or damage. Also note that the unit can be damaged by strong vibration, by metal objects, or by water getting inside the unit.

#### **A**CAUTION

Failure to avoid the following potentially hazardous situations may result in injury or property damage.

The navigation system is designed to provide you with route suggestions. It does not reflect road closures or road conditions, weather conditions, or other factors that may affect safety or timing while driving.

Use the navigation system only as a navigational aid. Do not attempt to use the navigation system for any purpose requiring precise measurement of direction, distance, location, or topography.

The Global Positioning System (GPS) is operated by the United States government, which is solely responsible for its accuracy and maintenance. The government system is subject to changes that could affect the accuracy and performance of all GPS equipment, including the navigation system. Although the navigation system is a precision navigation device, any navigation device can be misused or misinterpreted and, therefore, become unsafe

## IMPORTANT INFORMATION

## ■ Vehicle Battery Preservation

This navigation system can be used when the ignition key is turned to ON or ACC. To preserve the battery, however, it should be used with the engine running whenever possible. Using the navigation system for a long time with the engine switched off can cause the battery to run down.

## ■ Map Data Information

One of the goals of Garmin is to provide customers with the most complete and accurate cartography that is available to us at a reasonable cost. We use a combination of governmental and private data sources, which we identify in product literature and copyright messages displayed to the consumer. Virtually all data sources contain some inaccurate or incomplete data. In some countries, complete and accurate map information is either not available or is prohibitively expensive.

# First Step

Various setup screens appear automatically before using.

## Initial setup

When you first turn on the unit, the screen of the configuration setting will appear.

# 1 Turn the ignition key of your car to ACC.

The unit is turned on. Initial SETUP screen appears.

# 2 Touch the corresponding key and set the value.



#### Locale

Select the country for the navigation system.
The language, the distance unit, and the gasoline unit are set.

## Language

Select the language used for the control screen and setting items. Default is "British English (en)" for models with region code 2/3/4 and "Chinese" for model with region code 6.(Instruction Manual P.75)

After setting, touch [Enter].

#### Color

Set the screen and button illumination color. You can select whether to perform color scan and adjust scanning color. (Instruction Manual P.79)
After setting, touch [ ].

#### Camera

Set the parameters for the camera. (Instruction Manual P.82)

After setting, touch [].

#### DEMO

Set the demonstration mode. Default is "ON"

## 3 Touch [Finish].

#### NOTE

• "Initial setup" also appears when the unit is reset.

## iPod/iPhone connection setup

When you first select iPod as a source, the setting screen of the iPod/iPhone connection will appear.

## 1 Touch [Menu] on any screen.

HOME screen appears.

## **2** Touch [iPod] in the HOME screen.

iPod connection setup screen appears.

## 3 Touch [CHANGE].



Select the way of iPod/iPhone connection. For the details, refer to "iPod/iPhone connection setup" (P.46) in the Instruction Manual.

## NOTE

- For the details of the necessary cable and adapter to connect with iPod/iPhone, refer to "iPod/iPhone connection" (P.30).
- When you select "HDMI + BT" or "Bluetooth", Bluetooth device selection screen will appear. Select the iPod/iPhone to be connected.



If a connectable Bluetooth device is not displayed, touch [Search] and do the pairing of the devices.

 "iPod connection setup" also appears when the unit is reset.

## ■ Application link setup

When you first select Apps as a source, the setting screen for the connection with the device installed the apps will appear.

## 1 Touch [Menu] on any screen.

HOME screen appears.

## **2** Touch [APPS] in the HOME screen.

Application link setup screen appears.

## 3 Touch [CHANGE].



Select the way to connect with the device installed the apps. For the details, refer to "Application link setup" (P.48) in the Instruction Manual.

## NOTE


- For the details of the necessary cable and adapter to connect with iPod/iPhone and Android, refer to "iPod/iPhone connection" (P.30) and "Android connection" (P.30).
- When you select "HDMI + BT", "HDMI/MHL + BT" or "Bluetooth", Bluetooth device selection screen will appear. Select the device to be connected.



If a connectable Bluetooth device is not displayed, touch [Search] and do the pairing of the devices.

 "Application link setup"also appears when the unit is reset.

# **Functions of the Buttons on the Front Panel**

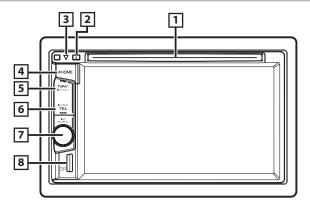

No.	Name/Motion
1	Disc insert slot

· A slot to insert a disc media.

#### 2

- Ejects the disc.
- · Pressing for 1 second ejects the disc forcibly.

## 

- If the unit or the connected unit fails to operate properly, the unit returns to factory settings when this button is pressed (Instruction Manual P.105).
- If the Security Indicator (SI) function is turned on, this indicator flashes when the vehicle ignition is off (Instruction Manual P.77).

## 4 HOME

- Displays the HOME screen (Instruction Manual P.12).
- Pressing for 1 second turns the power off.
  When the power off, turns the power on.
- 5 NAV
  - · Displays the navigation screen.
  - Pressing for 1 second switches AV out sources.

# No.

## 6 TEL

 Displays the Hands Free screen (Instruction Manual P.67).

Name/Motion

 Pressing for 1 second displays the Voice Recognition screen.\* (Instruction Manual P.70)

#### 7 Volume knob


- · Turning adjusts volume up or down.
- Displays the option menu screen.
- Pressing for 1 second switches attenuation of the volume on/off.

#### 8 microSD card slot

- A microSD card slot for upgrading the map. For how to upgrade the map, refer to the instruction manual of the navigation system.
- \* [TEL] button can also be used to switch to the rear view camera or turn off the display. (Instruction Manual P.74).

# How to insert a microSD Card

 Hold the microSD card with the label side facing right and the notched section down, and insert it into the slot until it clicks.

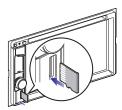

## ■ Eject an SD Card/ microSD Card

- 1) Push the card until it clicks and then remove your finger from the card.
- 2) The card pops up so that you can pull it out with your fingers.

# **Common Operations**

## Popup menu

## 1 Press the Volume knob.



Touch to display the popup menu. The contents of the menu are as follows.

- : Displays the Screen Adjustment screen.
- : Turns the display off.
- : Displays the camera view.
- Displays the SETUP Menu screen.
- Displays the Audio Control Menu screen.
- Displays the control screen of current source. Icon feature differs depending on the source.

## General

There are some functions which can be operated from most screens.



## (Graphic Equalizer)

Displays Graphic Equalizer screen.

## [合] (RETURN)

Returns to previous screen.

## (common menu key)

Touch to display the common menu. The contents of the menu are as follows.

- : Displays the SETUP Menu screen.
- Displays the Audio Control Menu screen.
  - : Displays the control screen of current source. Icon feature differs depending on the source.
- : Closes the menu.

#### List screen

There are some common function keys in the list screens of most sources.



## 《 (Scroll)

Scrolls the displayed text.



Touch keys with various functions are displayed here.

Displayed keys differ depending on the current audio source, status, etc.

For examples, see *List screen (P.15)* in the Instruction Manual.

## Flick scrolling

You can scroll the list screen by flicking the screen up/down or right/left.





# How to Use the Navigation System

- 1 Press the <NAV> button to display the navigation screen.
- 2 Operate the desired function from the Main Menu screen.



No.	Name/Motion
1	GPS satellite strength.
2	Finds a destination.
3	Views the map.
4	Uses the Apps such as ecoRoute and Help.
5	Adjusts the settings.

## NOTE

 You can get additional information about using the navigation system from Help. To display Help, touch [Apps] and then touch [Help].



 For more information about your navigation system, download the latest version of the Owner's Manual from http://manual.kenwood.com/edition/im386/.

# **3** Enter your destination and start the guidance.

- Finding points of interest
  - 1) Touch [Where To?].

- 2) Select a category and a subcategory.
- 3) Select a destination.
- 4) Touch [Go!].

#### NOTE


 To enter letters contained in the name, touch the Search bar and enter the letters.

## **4** Follow your route to the destination.

## NOTICE

 The speed limit icon feature is for information only and does not replace the driver's responsibility to abide by all posted speed limit signs and to use safe driving judgment at all times. Garmin and JVC KENWOOD will not be responsible for any traffic fines or citations that you may receive for failing to follow all applicable traffic laws and signs.

Your route is marked with a magenta line. As you travel, your navigation system guides you to your destination with voice prompts, arrows on the map, and directions at the top of the map. If you depart from the original route, your navigation system recalculates the route.

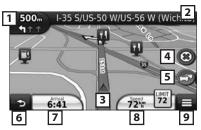

Name/Motion

1	Views the Next Turn page or the junction view page, when available.
2	Views the Turn List page.
3	Views the Where Am I? page.
4	Stops the currents route.
5	Displays traffic information on the route.
6	Returns to the Main menu.
7	Displays a different data field.
8	Views the Trip Computer.
9	Displays more options.

#### NOTE

- · Touch and drag the map to view a different area of the map.
- A speed limit icon could appear as you travel on major roadways.

## Adding a stop

- 1) While navigating a route, touch [ 🔊 ] and then touch [Where To?].
- 2) Search for the extra stop.
- 3) Touch [Go!].
- 4) Touch [Add to Active Route] to add this stop before your final destination.

## Taking a detour

While navigating a route, touch [ ].



2) Touch [ ).

#### Other Features

## · Manually avoiding traffic on your route

- 1) From the map, touch the traffic icon.
- 2) Touch [Traffic On Route].
- 3) If necessary, touch the arrows to view other traffic delays on your route.
- 4) Touch [ ] > [Avoid].

## Viewing the traffic map

1) The traffic map shows color-coded traffic flow and delays on nearby.

## About traffic (region code 2/3 area only)

#### NOTICE NOTICE

- · Traffic service is not available in some areas or countries.
- Garmin and JVC KENWOOD are not responsible for the accuracy or timeliness of the traffic information.

With an FM traffic receiver, the navigation system can receive and use traffic information. When a traffic message is received, you can see the event on the map and change your route to avoid the incident.

## Updating the software

To update the navigation system software, you must have an SD card, a USB mass storage device and an internet connection.

- 1) Go to www.garmin.com/kenwood.
- 2) Select Update.
- 3) Follow the on-screen instructions.

## Updating maps

You can purchase updated map data from Garmin or ask your Kenwood dealer or Kenwood service center for details.

- 1) Go to www.garmin.com/kenwood.
- 2) Select Update.
- 3) Follow the on-screen instructions.

# **How to Play Music**

You can play audio files from music CD, disc media, USB storage device and iPod.


## NOTE

· For details on playable file format, media format, iPod model, etc., refer to the Instruction Manual.

## Connect the media you want to play as shown below.

## Disc

1) Insert the disc into the slot Playback starts.

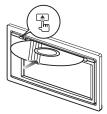

#### · To eject the disc:

Press the <♠> button.

## iPod/iPhone

- 1) Connect the iPod/iPhone.
- 2) Press the <HOME> button.
- 3) Touch [iPod].

#### NOTE


· For the details of the necessary cable and adapter to connect with iPod/iPhone, refer to "iPod/iPhone connection" (P.30)

## To disconnect the iPod/iPhone connected with the cable:

- 1) Touch on the left side of the screen to display the function panel.
- Touch [ ▲ ]. Disconnect the iPod/iPhone from the cable.

#### **USB** device

1) Connect the USB device with the USB cable.

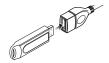

#### · To disconnect the USB device:

- 1) Touch on the left side of the screen to display the function panel.
- 2) Touch [▲]. Disconnect the device from the cable.

## 2 Control the music you are listening to on the source control screen.

The following symbols indicate the keys on the


The functions of the keys are the same despite the difference of the source you are listening to.



Touch on the left side of the screen to display the function panel.



• Basic operations from this screen

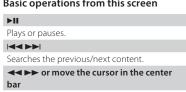

Fast forwards or Fast backwards (Disc media, CD, USB device only).

Repeats current content.



Plays all contents in random order.

## [[-]][[-]]

Searches previous/next folder. (disc media and USB device only)

Stops playing. (disc media only)



Disconnects the device. (USB device and iPod only)

## NOTE

· For other operations, refer to the Instruction Manual.

## 3 Search the track/file you want to listen to.

#### List search

1) Touch on the right side of the screen. The content list of the media being played is displayed.



## Refined search

- 1) Touch [ . ].
- 2) Touch the desired refinement method. The list is refined by the item you selected.
- 3) Touch the desired item.



## NOTF

· For details on searching operations, refer to **Search** Operation (P.34) in the Instruction Manual.

# How to Play Movie/Picture

You can play DVD video, Video CD (VCD), movie files from disc media, iPod and picture files from USB storage device.

## NOTE


 For details on playable file format, device format, etc., refer to the Instruction Manual.

## 1 Connect the media you want to play.

For the method of connecting, see **How to Play Music (P.12)**.

# 2 Control the movie/picture by touching the screen.

Each area on the screen has a separate function.

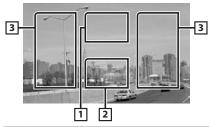

No.	Name/Motion
1	Displays the movie control screen.
2	Displays the Source Control screen.
3	Searches the next/previous content or file.

 Scrolling from center of display to left or right performs fast backward or fast forward.

To stop fast backward/forward, touch center of the display.\*1

## NOTE

 For operations on the source control screen, see How to Play Music (P.12).

However, searching by category/link/album artwork is not available.

# How to Listen to the DAB/Radio

## 1 Press the <HOME> button.

HOME screen appears.

# 2 Touch [DAB] (DNX4150DAB only) or [TUNER].

The unit switches to the radio source.

## **3** Operate on the source control screen.

Station search for DAB



- Touch [I◄◄] or [►►►] to tune in the desired ensemble, service, or component.
- Station search for Radio



- 1) Touch [AM/FM] to select the band.
- 2) Touch [I◄◄] or [▶►I] to tune in the desired station

## · Auto memory (Radio only)

- 1) Touch [AM/FM] to select the band.
- 2) Flick the screen from the left end to right to display the function panel.
- 3) Touch [AME].
- 4) Touch [I◀◀] or [▶►I]. Auto memory starts.

## · Recalling the preset station

1) Touch [P#] (#:1-15), [FM#] (#:1-15) or [AM#] (#:1-5).

#### NOTF.

 For other operations, see Radio Basic Operation (P.50), Digital Radio Basic Operation (P.52) in the Instruction Manual.

<sup>\*1</sup> For USB, this function may be unavailable depending on the playing file format.

# How to Make a Phone Call

You can use your Bluetooth cell-phone when paired to this unit.

#### NOTE

· You cannot register the Bluetooth unit when you are using the following sources:

iPod, Bluetooth Audio, APPS, Pandora, AUPEO

## Register your cell-phone to the unit.

Follow as the procedures shown below. For detailed operation, see Registering the Bluetooth Unit (P.63) in the Instruction Manual.

- 1) Press the <HOME> button. HOME screen appears.
- 2) Touch [STANDBY].
- 3) Press the volume knob. Popup menu appears.
- 4) Touch [SETUP]. SETUP Menu screen appears.
- 5) Touch [Bluetooth]. Bluetooth SETUP screen appears.



6) Touch [Search]. Searched Device List screen appears.



- 7) Select your cell-phone from the displayed list in the Searched Device List screen.
- 8) Enter PIN code form the cell-phone. Registering is completed. The PIN code is set to "0000" as default.

## 2 Connect your cell-phone to the unit.

- Touch the device name you want to connect in the Bluetooth SETUP screen.
- 2) Touch [ON] of [TEL(HFP)] in the BT Connection Settings screen.

The selected device is connected to the unit.



When registration of your cell-phone is completed, the phone book of the cell-phone is automatically downloaded to this unit.

## 3 Make or receive a phone call.

See the table below for each operation method.



#### Call by entering a phone number

- 1) Enter a phone number with number keys.
- 2) Touch [

#### Call using call records

- 2) Select the phone number from the list.
- 3) Touch [ ].

## Call using the phonebook

- 1) Touch [ 1].
- 2) Select the name from the list.
- 3) Select the number from the list.
- Touch [ ].

## Call using the preset number

- Touch [Preset #] to start calling the corresponding phone number.
- 2) Touch [ ].

## Call by voice

You can make a voice call using the voice recognition function of the cell-phone.

- 1) Touch [ 🍿 ].
- 2) Pronounce the name registered in the cellphone.

## NOTE

 For detailed operation, see Using Hands-Free Unit (P.67) in the Instruction Manual.

## Installation

## ■ Before Installation

Before installation of this unit, please note the following precautions.

#### **▲**WARNINGS

- If you connect the ignition wire (red) and the battery wire (yellow) to the car chassis (ground), you may cause a short circuit, that in turn may start a fire. Always connect those wires to the power source running through the fuse box.
- Do not cut out the fuse from the ignition wire (red) and the battery wire (yellow). The power supply must be connected to the wires via the fuse.


#### **A**CAUTION

 Install this unit in the console of your vehicle.
 Do not touch the metal part of this unit during and shortly after the use of the unit. Metal part such as the heat sink and enclosure become hot.


## **™** NOTE

- Mounting and wiring this product requires skills and experience. For best safety, leave the mounting and wiring work to professionals.
- Make sure to ground the unit to a negative 12V DC power supply.
- Do not install the unit in a spot exposed to direct sunlight or excessive heat or humidity. Also avoid places with too much dust or the possibility of water splashing.
- Do not use your own screws. Use only the screws provided. If you use the wrong screws, you could damage the unit.
- If the power is not turned ON ("PROTECT" is displayed), the speaker wire may have a short-circuit or touched the chassis of the vehicle and the protection function may have been activated. Therefore, the speaker wire should be checked.
- If your car's ignition does not have an ACC position, connect the ignition wires to a power source that can be turned on and off with the ignition key. If you connect the ignition wire to a power source with a constant voltage supply, such as with battery wires, the battery may be drained.
- If the console has a lid, make sure to install the unit so that the front panel will not hit the lid when closing and opening.
- If the fuse blows, first make sure the wires aren't touching to cause a short circuit, then replace the old fuse with one with the same rating.

- Insulate unconnected wires with vinyl tape or other similar material. To prevent a short circuit, do not remove the caps on the ends of the unconnected wires or the terminals.
- Connect the speaker wires correctly to the terminals to which they correspond. The unit may be damaged or fail to work if you share the ⊕ wires or ground them to any metal part in the car.
- When only two speakers are being connected to the system, connect the connectors either to both the front output terminals or to both the rear output terminals (do not mix front and rear). For example, if you connect the ⊕ connector of the left speaker to a front output terminal, do not connect the ⊖ connector to a rear output terminal.
- After the unit is installed, check whether the brake lamps, blinkers, wipers, etc. on the car are working properly.
- Mount the unit so that the mounting angle is 30° or less.
- This unit has the cooling fan to decrease the internal temperature. Do not mount the unit in a place where the cooling fan of the unit is blocked. Blocking these openings will inhibit the cooling of the internal temperature and result in malfunction.

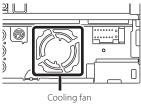


- Do not press hard on the panel surface when installing the unit to the vehicle. Otherwise scars, damage, or failure may result.
- Reception may drop if there are metal objects near the Bluetooth antenna.

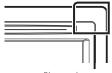

Bluetooth antenna unit

## Supplied accessories


First of all, make sure that all accessories are supplied with the unit.

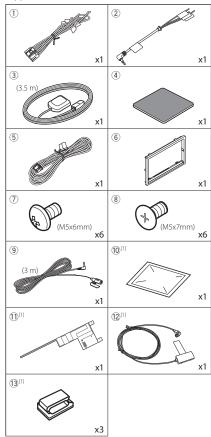

[1] DNX4150DAB only

## Unit

- To prevent a short circuit, remove the key from the ignition and disconnect the 
   ⊕ terminal of the battery.
- 2) Make the proper input and output wire connections for each unit.
- 3) Connect the speaker wires of the wiring harness.
- Connect the wiring harness wires in the following order; ground, battery, ignition.
- 5) Connect the wiring harness connector to the unit.
- 6) Install the unit in your car.
- 7) Reconnect the  $\bigcirc$  terminal of the battery.
- 8) Press the <Reset> button. (P.4)
- 9) Perform the Initial Setup. See **First Step (P.6)**.

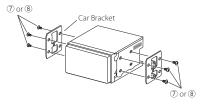


## **S** NOTE

 Make sure that the unit is installed securely in place. If the unit is unstable, it may malfunction (eq, the sound may skip).

## Trim plate

1) Attach accessory (6) to the unit.

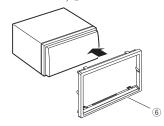

#### GPS antenna

GPS antenna is installed inside of the car. It should be installed as horizontally as possible to allow easy reception of the GPS satellite signals.

To mount the GPS antenna inside your vehicle:

- 1) Clean your dashboard or other surface.
- 2) Remove the separator of the metal plate (accessory (4)).
- Press the metal plate (accessory (4)) down firmly on your dashboard or other mounting surface.
   You can bend the metal plate (accessory (4)) to conform to a curved surface, if necessary.
- Remove the separator of the GPS antenna (accessory ③), and stick the antenna to the metal plate (accessory ④).




#### NOTE

- Depending on the type of car, reception of the GPS satellite signals might not be possible with an inside installation.
- The GPS antenna should be installed at a position that is spaced at least 12 inch (30 cm) from cellular phone or other transmitting antennas.
   Signals from the GPS satellite may be interfered with by these types of communication.
- Painting the GPS antenna with (metallic) paint may cause a drop in performance.

## ■ Microphone unit

- 1) Check the installation position of the microphone (accessory 9).
- 2) Clean the installation surface.
- Remove the separator of the microphone (accessory ®), and stick the microphone to the place shown below.
- Wire the microphone cable up to the unit with it secured at several positions using tape or other desired method.
- 5) Adjust the direction of the microphone (accessory (9)) to the driver.

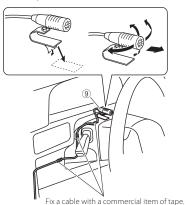


## Installation the Digital Radio antenna (DNX4150DAB)

#### **A**CAUTION

- This film antenna is exclusively for use inside the vehicle.
- · Do not install at the following locations:
  - Where it may block driver's view
  - Where it may obstruct operation of safety devices such as air bags
  - On movable glass surface such as rear hatch
  - On the side of the vehicle (e.g. doors, front-side windows)
  - On rear windows
- Signal strength will decrease at the following locations:
  - On IR reflecting glass or where covered with mirror type glass film
  - Where it overlaps with genuine radio antenna (pattern)
  - Where it overlaps with window heating wires
  - When glass that blocks radio signals (e.g. IR reflecting glass, thermal insulation glass) is used
- · Poor reception may occur:
  - Due to noise when the windshield wipers, air conditioner, or motor is turned on
  - Depending on the location of the broadcast station in relation to the vehicle (antenna)
- Thoroughly wipe oil and dirt from the pasting surface with the included cleaner (accessory ①).
- It may not be possible to install on some type of vehicle.
- Check the cable routing of the film antenna (accessory ①) and amplifier (accessory ②) before pasting.

#### Installation overview

The antenna should be installed on the passenger side for safety.

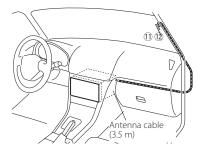


## Determining the antenna installation location


- The direction of the film antenna (accessory

   (accessory)
   (b) changes depending on whether the film antenna is installed on the right side or left side.
- Be sure to check the installation location of the film antenna (accessory ①) before installing. The film antenna cannot be reattached.
- Install the antenna at least 100 mm away from other antennas.
- Do not attach the amplifier unit (accessory
   (2) to the ceramic line (black part) around the windscreen, as it will not stick sufficiently.

When installing the antenna on the right side

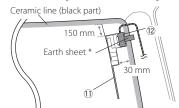

## When installing the antenna on the left side

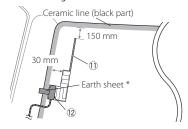

## NOTE

• \*Where the earth sheet of Amplifier (accessory12) can be pasted on the metal part of the front pillar.


## **A**CAUTION

# When installing the antenna cable inside a front pillar that contains an

· The front pillar cover is secured with a special clip which may need to be replaced when the front pillar cover is removed. Contact your vehicle dealer for details on replacing the front pillar cover and availability of replacement parts.



• Install the amplifier unit (accessory 12) above the air bag so that the antenna and the air bag.

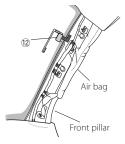


## · Determining the antenna installation location


1) Remove the front pillar cover of your car.



2) Clean the windscreen with the supplied cleaner (accessory 10).

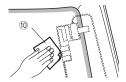

- · Wait until the glass surface is completely dry before pasting.
- · If the glass surface is cold, such as during winter, warm it with defroster or dryer.
- 3) Remove the first sheet (tag 1) of film antenna (accessory 11) horizontally and paste the antenna on the front glass.

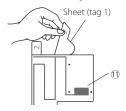


· Do not touch the pasting surface (adhesive side) of the film antenna (accessory 11).

4) Rub the film antenna (accessory ①) gently in the direction of the arrow shown below to firmly stick it to the windscreen.




5) Remove the second sheet (tag 2) on the film antenna (accessory ①) vertically.

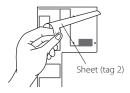


6) Match the protrusions of the amplifier unit (accessory ②) with the ◀ markings on the film antenna (accessory ①) and attach the amplifier.

Do not touch the lead terminal or the adhesive side of the amplifier unit (-).

# When installing the antenna on the right side

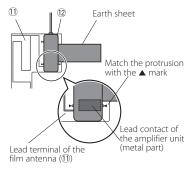


# When installing the antenna on the left side

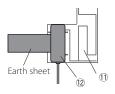


 Remove the film covering the earth sheet and attach the earth sheet to the metal part of the vehicle.


Provide sufficient space for the earth sheet so that it does not obstruct the interior parts (front pillar cover). Also take care that the interior parts do not obstruct the amplifier unit (accessory ②).

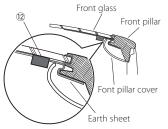



- Wire the antenna cables.
   Use cord clamper (accessory (3)) to secure the antenna cable to the pillar in several places.
- 9) Reattach the front pillar cover.
- 10)Be sure not to damage the earth sheet and amplifier unit (accessory ②) when reattaching.
- 11) Connect the amplifier unit (accessory ②) to the DAB input terminal on the rear of the unit.
- 12)Set <Antenna Power> to "ON". (Instruction Manual P.59)


## System connection

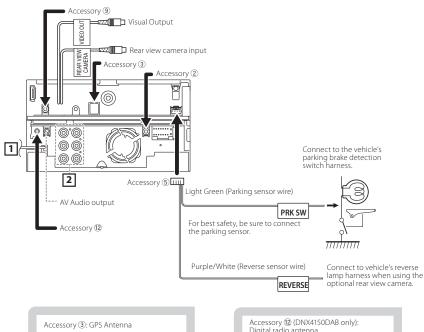

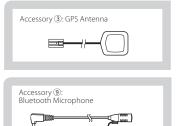


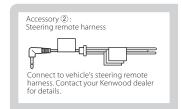

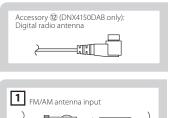


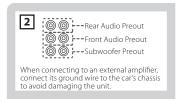


## ■ Connecting wires to terminals

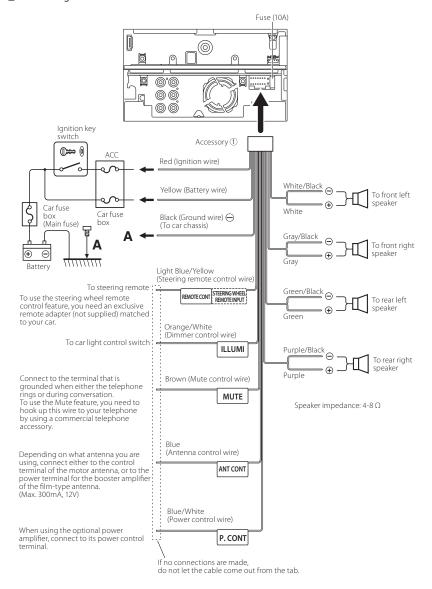

## ■ 3 way speaker system setup (DNX4150BT Region code 3 area only)

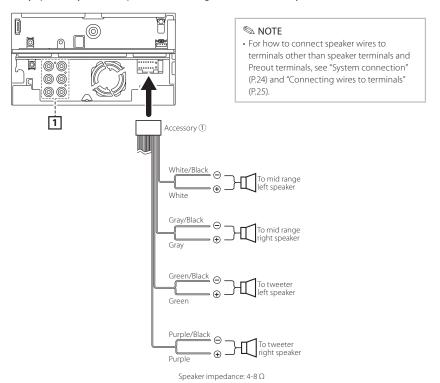


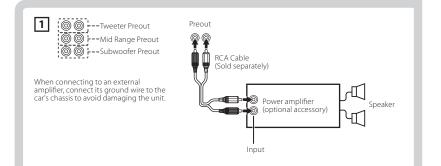

 Switching between speaker systems
 Switch to the 3 way speaker system following the procedure below.

## NOTE

- Be sure to set the speaker network correctly.
   Connecting 3 way speakers with the 2 way mode selected can break the speakers.
- Touch [Menu] on any screen.
   Menu screen appears.
- 2) Touch [STANDBY].
- Press the <NAV> button and <♠> button for 1 second at the same time.
   Speaker system select screen appears.

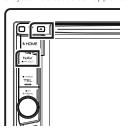



Touch [3way].
 A confirmation screen appears.




5) Touch [Yes].

The 2 way speaker system is switched to the 3 way speaker system.

#### NOTE

- When the 3-way speaker system is selected, the following functions are disabled. (See the Instruction Manual.)
  - Zone Control
  - DSP select
  - Fader of Controlling General Audio
  - [ REAR 【▼ ] (Multi function menu)
- For speaker setup and crossover setup, see Setting Audio in the Instruction Manual.


## Optional accessory connection

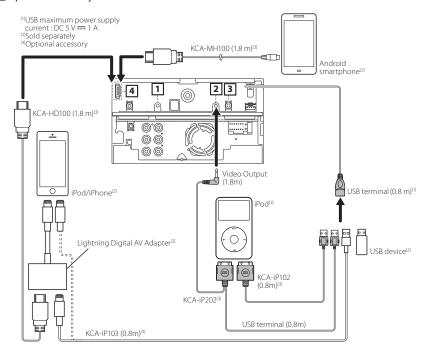

- AV-IN (CA-C3AV; Optional Accessory) input
- iPod/ AV-IN2 (CA-C3AV; Optional Accessory) input (iPod/ AV-IN2 switchable)
- **3** TV tuner remote output

## NOTE

- When you connect iPod/iPhone with HDMI cable, the necessary cable differs depended on the type of the connecter like Lightning or 30-pin. Refer to "iPod/iPhone connection" (P.30).
- The setting is necessary to meet the connected iPod/iPhone or Android device.
- It is also possible to connect with iPod/iPhone or Android device via Bluetooth. Refer to "iPod/iPhone connection" (P.30) or "Android connection" (P.30).

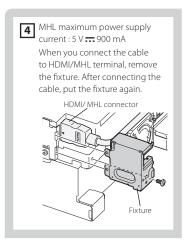

# **About this Unit**

## Copyrights

- The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by JVC KENWOOD Corporation is under license. Other trademarks and trade names are those of their respective owners.
- The "AAC" logo is a trademark of Dolby Laboratories.
- "Made for iPod" and "Made for iPhone" mean that an
  electronic accessory has been designed to connect
  specifically to iPod or iPhone, respectively, and has
  been certified by the developer to meet Apple
  performance standards.
  - Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod or iPhone may affect wireless performance.
- iPhone, iPod, iPod classic, iPod nano, and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries.
   iTunes is a trademark of Apple Inc.

Lightning is a trademark of Apple Inc.

- Licensing Corporation registered in the U.S., Japan and other countries.
- This item incorporates copy protection technology that is protected by U.S. patents and other intellectual property rights of Rovi Corporation.
   Reverse engineering and disassembly are prohibited.
- Manufactured under license from Dolby Laboratories.
  - Dolby and the double-D symbol are trademarks of Dolby Laboratories.
- Android is a trademark of Google Inc.
- BlackBerry®, RIM®, Research In Motion® and related trademarks, names and logos are the property of Research In Motion Limited and are registered and/or used in the U.S. and countries around the world. Used under license from Research In Motion Limited.
- Adobe, Acrobat and Reader are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries.
- DIVX
   This DivX Certified® device has passed rigorous

- testing to ensure it plays DivX® video.
  To play purchased DivX movies, first register your device at vod.divx.com. Find your registration code in the DivX VOD section of your device setup menu. See *DivX(R) VOD (P.45)*.
- DivX Certified® to play DivX® video, including premium content.
- DivX®, DivX Certified® and associated logos are trademarks of DivX, LLC and are used under license.
- The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI logo are trademarks or registed trademarks of HDMI Licensing LLC in the United States and other countries.
- MHL and the MHL logo are a trademark or registered trademark of MHL, LLC.
   Incorporates MHL 2
  - Incorporates Wirtz
- "aupeo" is a trade mark of Aupeo GmbH.
- THIS PRODUCT IS LICENSED UNDER THE AVC PATENT PORTFOLIO LICENSE FOR THE PERSONAL USE OF A CONSUMER OR OTHER USES IN WHICH IT DOES NOT RECEIVE REMUNERATION TO (i)ENCODE VIDEO IN COMPLIANCE WITH THE AVC STANDARD ("AVC VIDEO") AND/OR (ii)DECODE AVC VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED TO PROVIDE AVC VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION MAY BE OBTAINED FROM MPEG LA, LL.C. SEE HTTP://WWW.MPEGLA.COM
- THIS PRODUCT IS LICENSED UNDER THE MPEG-4 VISUAL PATENT PORTFOLIO LICENSE FOR THE PERSONAL AND NON-COMMERCIAL USE OF A CONSUMER FOR (i) ENCODING VIDEO IN COMPLIANCE WITH THE MPEG-4 VISUAL STANDARD ("MPEG-4 VIDEO") AND/OR (ii) DECODING MPEG-4 VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL AND NON-COMMERCIAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED BY MPEG LA TO PROVIDE MPEG-4 VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION INCLUDING THAT RELATING TO PROMOTIONAL, INTERNAL AND COMMERCIAL USES AND LICENSING MAY BE OBTAINED FROM MPEG LA, LLC. SEE HTTP://WWW.MPEGLA.COM.

libFLAC

Copyright (C) 2000,2001,2002,2003,2004,2005,2006,2 007,2008,2009 Josh Coalson

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/ or other materials provided with the distribution. - Neither the name of the Xiph.org Foundation nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission. THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND ONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE FOUNDATION OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY,

## Android connection

SUCH DAMAGE.

To connect the Android device with this unit, the cable (sold separately) and the profile which your Android device supports are necessary as follows:

OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE)

SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF

ARISING IN ANY WAY OUT OF THE USE OF THIS

- To listen to music and watch video of APPS source
  - MHL device
  - KCA-MH100 (Optional Accessory)
  - Bluetooth profile: SPP
- · To listen to music of APPS source
  - Bluetooth profile: A2DP
  - Bluetooth profile: SPP
- · To listen to music of Bluetooth Audio source
  - Bluetooth profile: A2DP

#### Bluetooth profile: AVRCP

## ■ iPod/iPhone connection

To connect the iPod/iPhone with this unit, the cable, adapter (both sold separately), and the profile which your iPod/iPhone supports are necessary as follows:

- To listen music and watch video with Lightning connector device
- Lightning Digital AV Adapter
  - KCA-HD100
  - KCA-iP103
- Bluetooth profile: SPP
- To listen music with Lightning connector device
  - KCA-iP103
- To listen music and watch video with 30-pin connector device
  - KCA-iP202
- To listen music with 30-pin connector device
  - KCA-iP102
- · To listen to music via Bluetooth
  - Bluetooth profile: A2DP
- Bluetooth profile: SPP

#### NOTE

- When connecting with Lightning Digital AV Adapter some applications can be controlled from this unit.
   The operable functions depend on the application.
   Refer to "Apps Operation" (P.43) in the Instruction Manual.
- Do not leave the cable or the adapter made by other makers inside the car. It might lead the malfunction caused by heat.

## ■ Connectable iPod/iPhone

The following models can be connected to this unit.

#### Made for

- · iPhone 5s
- iPhone 5c
- iPhone 5
- · iPhone 4S
- iPhone 4
- · iPhone 3GS
- · iPhone 3G
- iPhone
- · iPod touch (5th generation)
- · iPod touch (4th generation)
- · iPod touch (3rd generation)
- · iPod touch (2nd generation)

- iPod touch (1st generation)
- iPod classic
- · iPod with video
- · iPod nano (7th generation)
- iPod nano (6th generation)
- · iPod nano (5th generation)
- iPod nano (4th generation)
- iPod nano (3rd generation)

## Requirements Pandora®:

#### iPhone or iPod touch

- Use an Apple iPhone or iPod touch running under iOS3 or later.
- Search for "Pandora" in the Apple iTunes App Store to find and install the most current version of the Pandora® application on your device.

#### Android™

 Visit the Google play and search for Pandora to install.

## **BlackBerry®**

- Visit www.pandora.com from the built in browser to download the Pandora application.
- Bluetooth must be built in and the following profiles must be supported.
  - SPP
  - A2DP

#### NOTE

- In the application on your device, log in and create an account with Pandora.
- (If you are not already a registered user, an account can also be created at www.pandora.com.)
- · Internet connection by LTE, 3G, EDGE, or WiFi.
- Pandora® is only available in the United States, Australia, and New Zealand.
- Because Pandora® is a third-party service, the specifications are subject to change without prior notice. Accordingly, compatibility may be impaired or some or all of the services may become unavailable.
- Some functions of Pandora® cannot be operated from this unit
- For issues using the application, please contact Pandora® at pandora-support@pandora.com.

## ■ About AUPEO!:

### iPhone or iPod touch

 Install the latest version of the AUPEO! application on your iPhone or iPod touch. (Search for "AUPEO!" in the Apple iTunes App Store to find and install the most recent version.)

#### Android™

· Visit Google play and search for "AUPEO!" to install.

#### NOTE

- Ensure you are logged in to your smartphone application. If you do not have an AUPEO! account, you can create one for free from your smartphone or at www.aupeo.com.
- Because AUPEO! is a third-party service, the specifications are subject to change without prior notice. Accordingly, compatibility may be impaired or some or all of the services may become unavailable.
- Some functions of AUPEO! cannot be operated from this unit.
- For issues using the application, contact AUPEO! at www.aupeo.com.
- · An active internet connection.

The marking of products using lasers

# CLASS 1 LASER PRODUCT

The label is attached to the chassis/case and says that the component uses laser beams that have been classified as Class 1. It means that the unit is utilizing laser beams that are of a weaker class. There is no danger of hazardous radiation outside the unit.

Eski Elektrik ve Elektronik Ekipmanların İmha Edilmesi Hakkında Bilgi (ayrı atık toplama sistemlerini kullanan ülkeleri için uygulanabilir)



Sembollü (üzerinde çarpı işareti olan çöp kutusu) ürünler ev atıkları olarak atılamaz.

Eski elektrik ve elektronik ekipmanlar, bu ürünleri ve ürün atıklarını geri dönüştürebilecek bir tesiste değerlendirilmelidir. Yaşadığınız bölgeye en yakın geri dönüşüm tesisinin yerini öğrenmek için yerel makamlara müracaat edin. Uygun geri dönüşüm ve atık imha yöntemi sağlığımız ve çevremiz üzerindeki zararlı etkileri önlerken kaynakların korunmasına da yardımıcı olacaktır.

#### ■ DNX4150BTM



DNX4150BTM



Declaration of Conformity with regard to the EMC Directive 2004/108/EC Declaration of Conformity with regard to the R&TTE Directive 1999/5/EC Declaration of Conformity with regard to the RoHS Directive 2011/65/EU

Manufacturer:

JVC KENWOOD Corporation 3-12, Moriyacho, Kanagawa-ku, Yokohama-shi, Kanagawa 221-0022, JAPAN

#### **EU Representative:**

JVCKENWOOD NEDERLAND B.V. Amsterdamseweg 37, 1422 AC UITHOORN, The Netherlands

#### Enalish

Hereby, JVC KENWOOD declares that this unit DNX4150BT, DNX4150BTM, DNX4150DAB is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

#### Türkçe

Bu vesileyle JVC KENWOOD, DNX4150BT, DNX4150BTM, DNX4150DAB ünitesinin, 1999/5/EC Direktifinin başlıca gereksinimleri ve diğer ilgili hükümleri ile uyumlu olduğunu beyan eder.

#### **For Turkey**

Bu ürün 28300 sayılı Resmi Gazete'de yayımlanan Atik Elektrikli ve Elektronik Eşyalarin Kontrolü Yönetmeliğe uygun olarak üretilmiştir.

